


 
 


IMPORTANT NOTE :


- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws / bolts until all completely assembled.
- Keep all hardware parts out of reach of children!
- Tighten screws periodically! With the use of this product bolts and screws may become loose over time!
- Don't attempt to modify parts!

PART LIST			
NO	DESCRIPTION		QTY/PCS
1		CUSHION SEAT	1 PC
2		LEFT LEG	1 PC
3		RIGHT LEG	1 PC
4		FRONT APRON	1 PC
5		BACK APRON	1 PC

HARDWARE LIST			
NO	DESCRIPTION		QTY/PCS
A		BOLT M6 x 60mm	4 PCS
B		BOLT M6 x 50mm	8 PCS
C		SPRING WASHER M6	12 PCS
D		U-WASHER M6	8 PCS
E		FLAT WASHER M6 x 13mm	4 PCS
F		ALLEN KEY M4	1 PC

STEP 1

Each leg & stretcher are labeled with a letter (L or R). Align each stretcher with the corresponding letter.
DO NOT FULLY TIGHTEN THE BOLT UNTIL STEP 3.


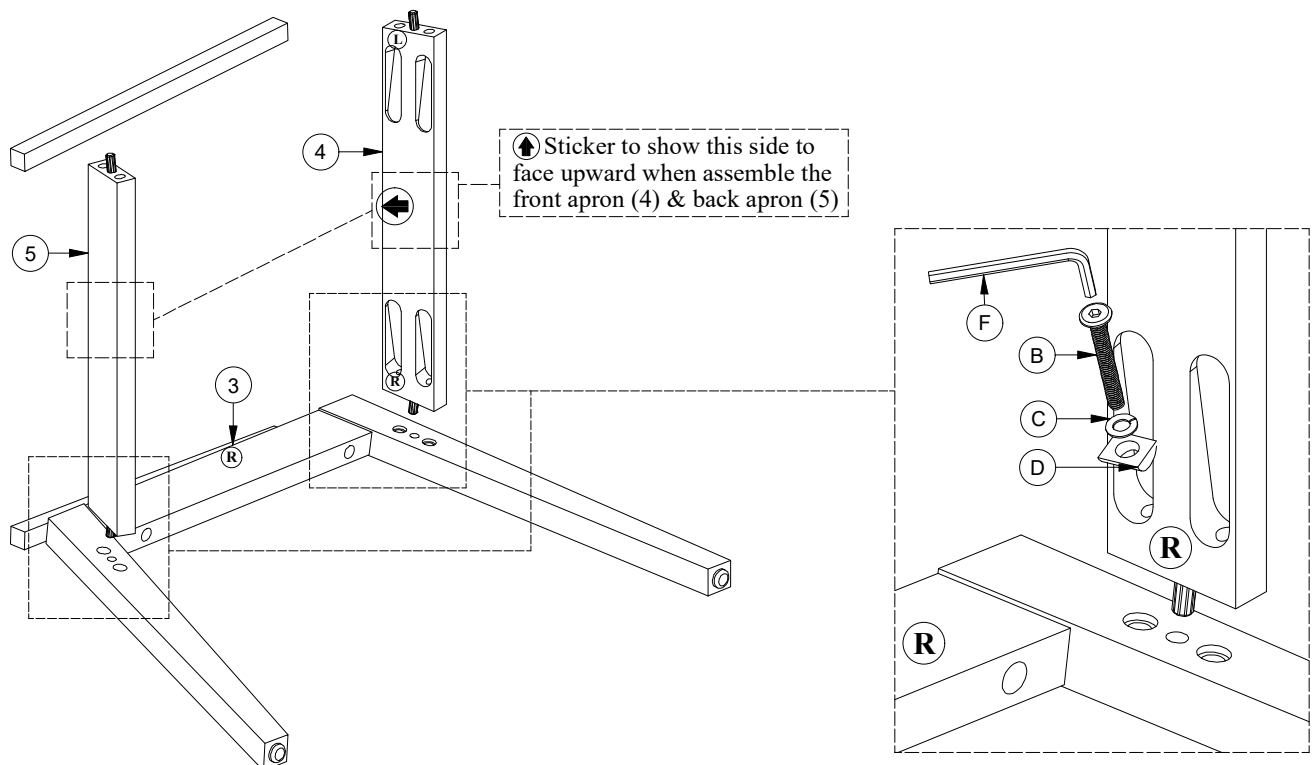


Progressive[®] furniture ASSEMBLY INSTRUCTION

Model No : D862-61 DINING CHAIR

STEP 2

DO NOT FULLY TIGHTEN THE BOLT UNTIL STEP 3.

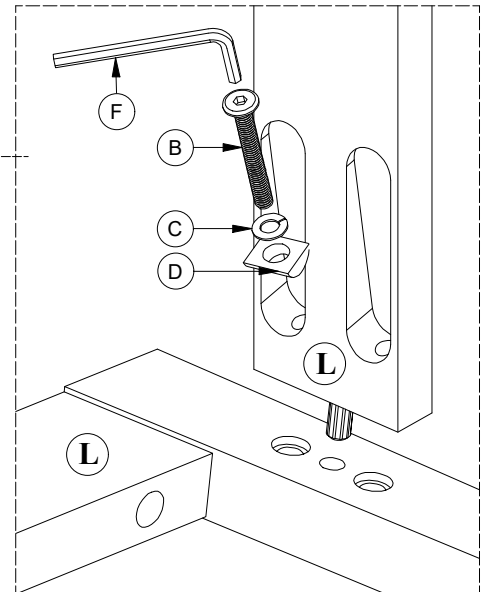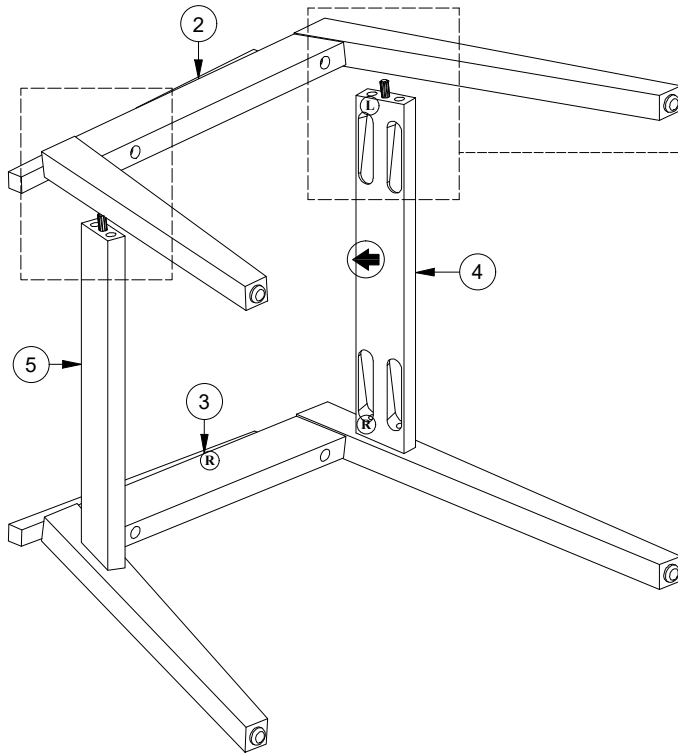

STEP 3

