
Progressive[®] ASSEMBLY INSTRUCTION furniture Model No: D862-10 DINING TABLE

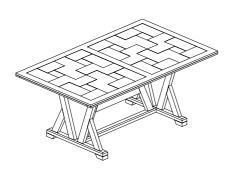


- IMPORTANT NOTE:
- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws / bolts until all completely assembled.
- Keep all hardware parts out of reach of children!
- Tighten screws periodically! With the use of this product bolts and screws may become loose over time!
- Don't attempt to modify parts!

		PART LIST	
NO	DESCRIPTION		QTY/PCS
1		TABLE TOP	1 PC
2		LEG FRAME	2 PCS
3		TOP RAIL	1 PC
4		ANGLED STRETCHER	2 PCS
5		CENTER STRETCHER	1 PC
6		BOTTOM STRETCHER	1 PC

HARDWARE LIST					
NO		QTY/PCS			
A		BOLT M8 x 40mm	12 PCS		
В	0	SPRING WASHER M8	12 PCS		
С	0	FLAT WASHER M8 x 16mm	12 PC		
D		ALLEN KEY M5	1 PC		

STEP 1

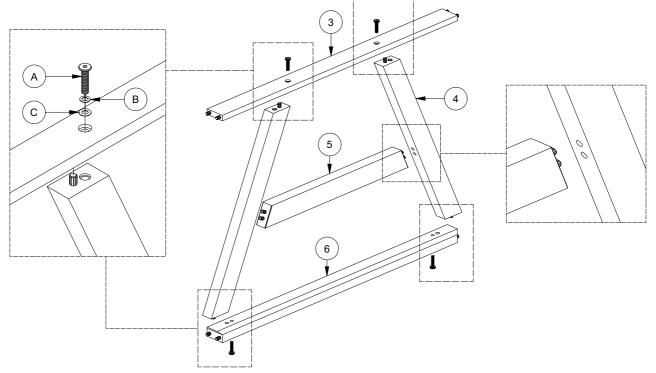

Progressive[®] ASSEMBLY INSTRUCTION furniture Model No: D862-10 DINING TABLE

STEP 2

