


WORLD MARKET®

Assembly Instructions

Sommerville Bar Cabinet BK









SKU 635444

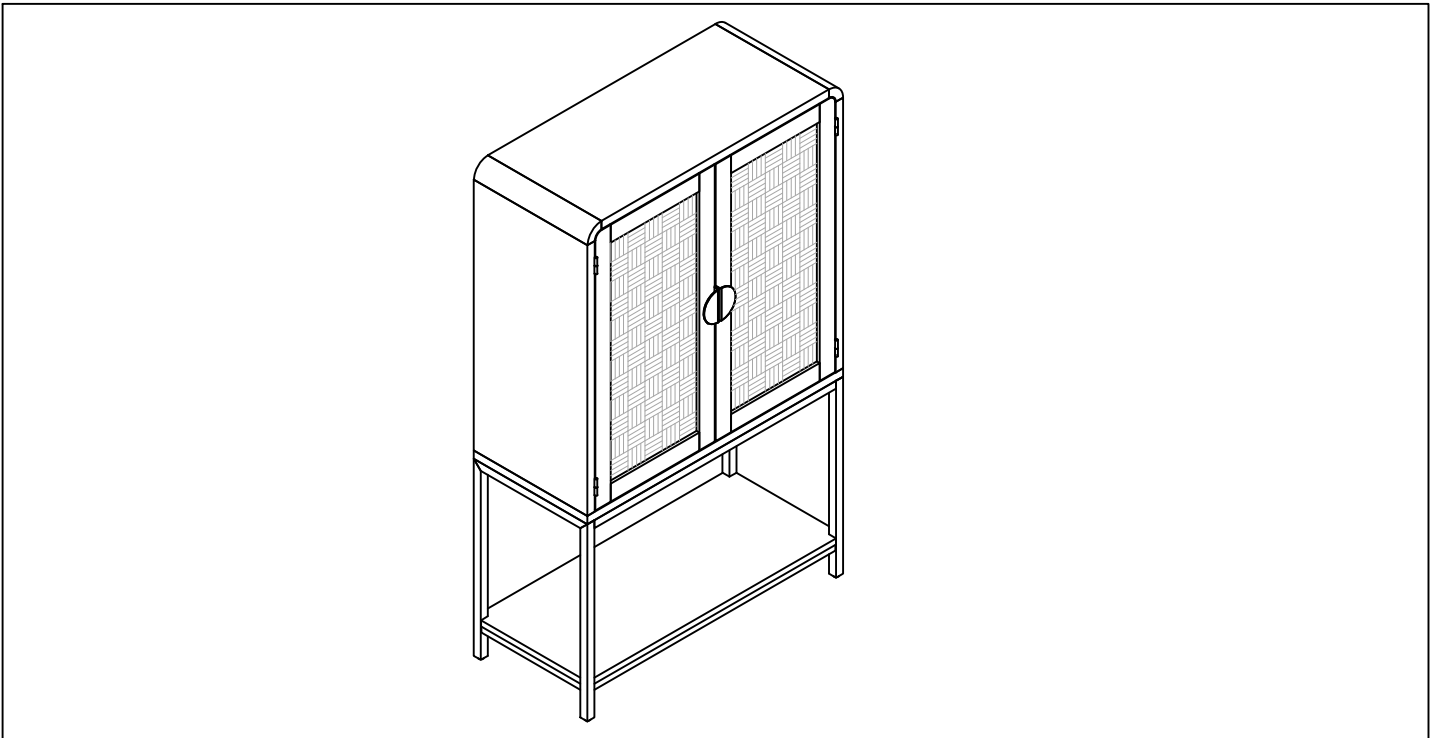








Thank you for your purchase. If you have any questions pertaining to the assembly of this furniture piece, please contact the nearest World Market store. If you are not near a store, please call our customer service call center toll free at 877-967-5362 for assistance.

  ALL PRODUCTS SOLD AT WORLD MARKET ARE NOT
FOR COMMERCIAL USE AND ARE INTENDED FOR
RESIDENTIAL USE ONLY


 
 

 
 


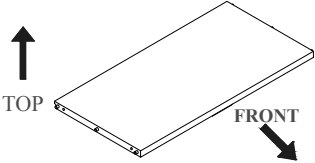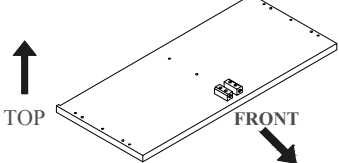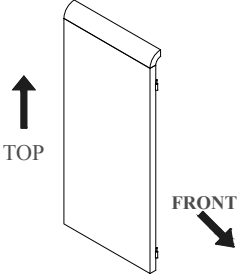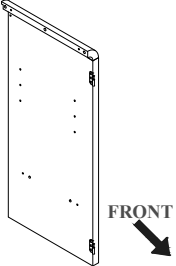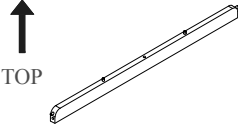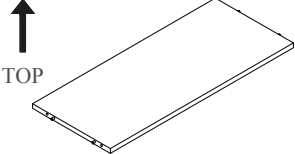
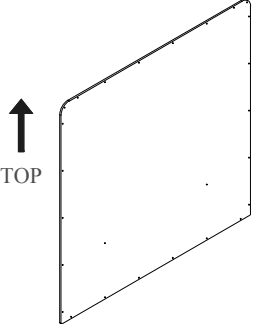

Component List

LABEL	PICTURE	DESCRIPTION	QTY.
A		Top Frame	1
B		Bottom Frame	1
C-1		Left Side Frame	1
C-2		Right Side Frame	1
D		Divider Frame	1
E		Top Back Rail	1
F		Fixed Shelf	1
G		Back Panel	1

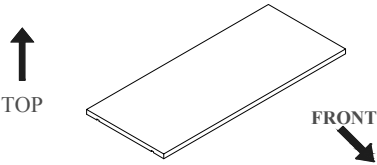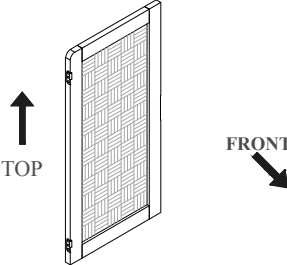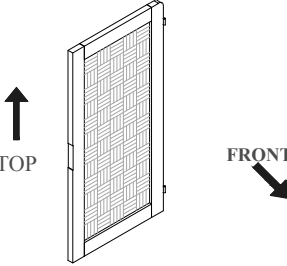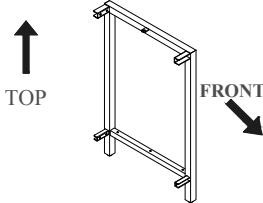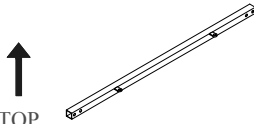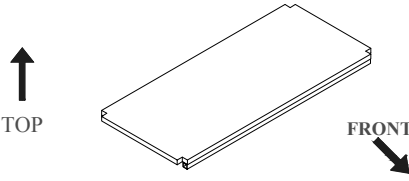  
 
 
Component List

LABEL	PICTURE	DESCRIPTION	QTY.
I		Adjustable Shelf	1
J-1		Left Door Frame	1
J-2		Right Door Frame	1
K		Leg Metal Frame	2
L		Metal Support	2
M		Lower Shelf Frame	1
N		Handle	2

Hardware List


LABEL	PICTURE	DESCRIPTION	QTY.
H-1		Cam lock Ø15 mm	13
H-2		Cam Screw	13
H-3		Connecting Screw M7 x 50 mm	8
H-4		Pan head Screw M3.5 x 15 mm	26
H-5		Shelf Pin Ø6	4
H-6		Allen Bolt M6 x 20 mm	22
H-7		Lock Washer Ø6 x Ø10.5 x T2 mm	22
H-8		Flat Washer Ø6 x Ø13 x T2 mm	22
H-9		Wood Screw M4 x 20 mm	4
H-10		Anti Tip-kit	1
H-11		Pan Head Screw M4 x 35 mm	6

Tool List

LABEL	PICTURE	DESCRIPTION	QTY.
T-1		Allen Key 4 x 110 x 30 mm	1
T-2		Triangle	1
T-3		Phillips Screwdriver (Not Included)	1

Assembly Steps

Step 1

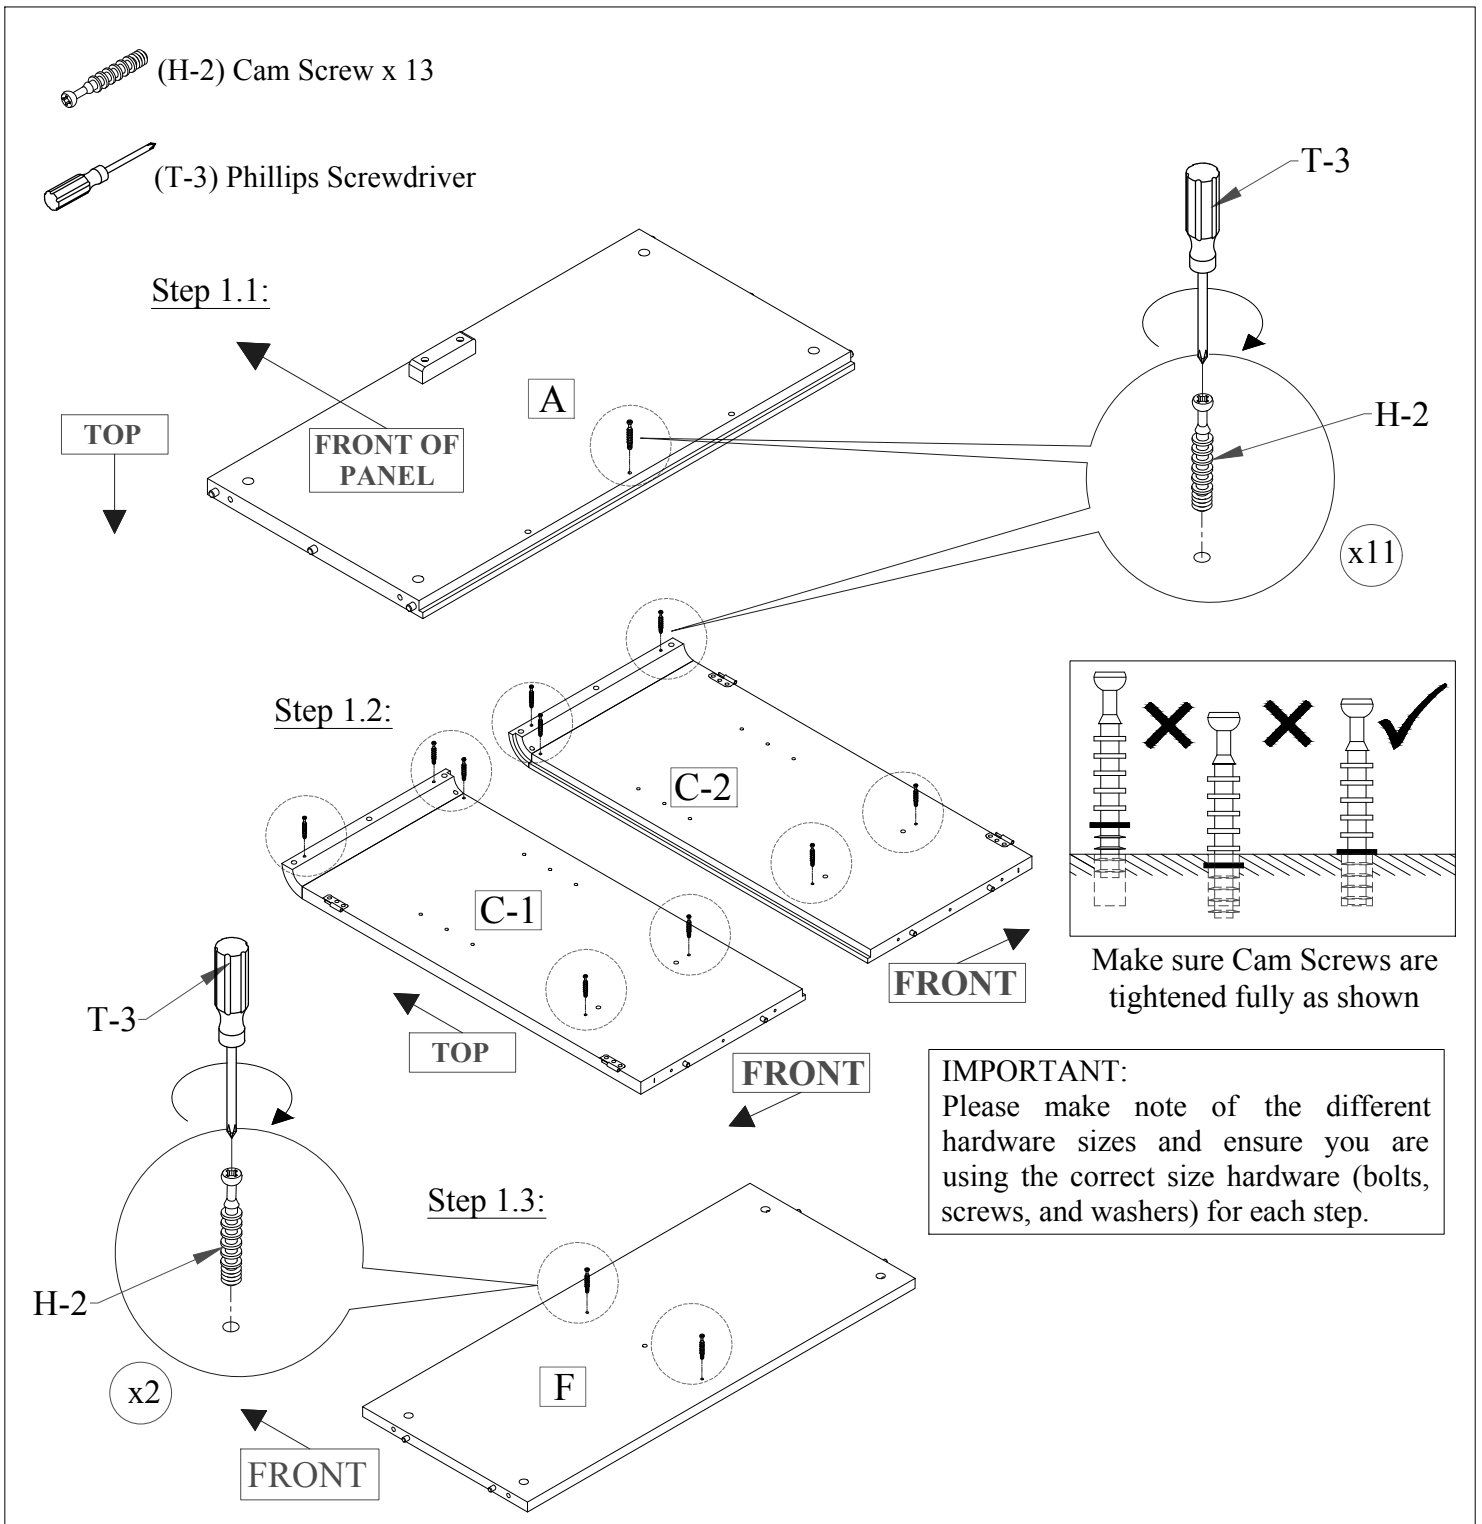


Step 1.1: Place Top Frame (A) upside down onto a padded, non-marring surface. Install Cam Screws (H-2) into the pre-drilled holes on Top Frame (A) as shown. Fully tighten using a Phillips Screwdriver (T-3, not included) per illustration above. Do not under OR over tighten.

Step 1.2: Place Left Side Frame (C-1) and Right Side Frame (C-2) face down onto a padded, non-marring surface. Install Cam Screws (H-2) into the pre-drilled holes on Left/ Right Side Frame (C-1/C-2) as shown. Fully tighten using a Phillips Screwdriver (T-3) (not included) per illustration above. Do not under OR over tighten.


Step 1.3: Place Fixed Shelf (F) upside down onto a padded, non-marring surface. Install Cam Screws (H-2) into the pre-drilled holes on Fixed Shelf (F) as shown. Fully tighten using a Phillips Screwdriver (T-3, not included) per illustration above. Do not under OR over tighten.

Step 2

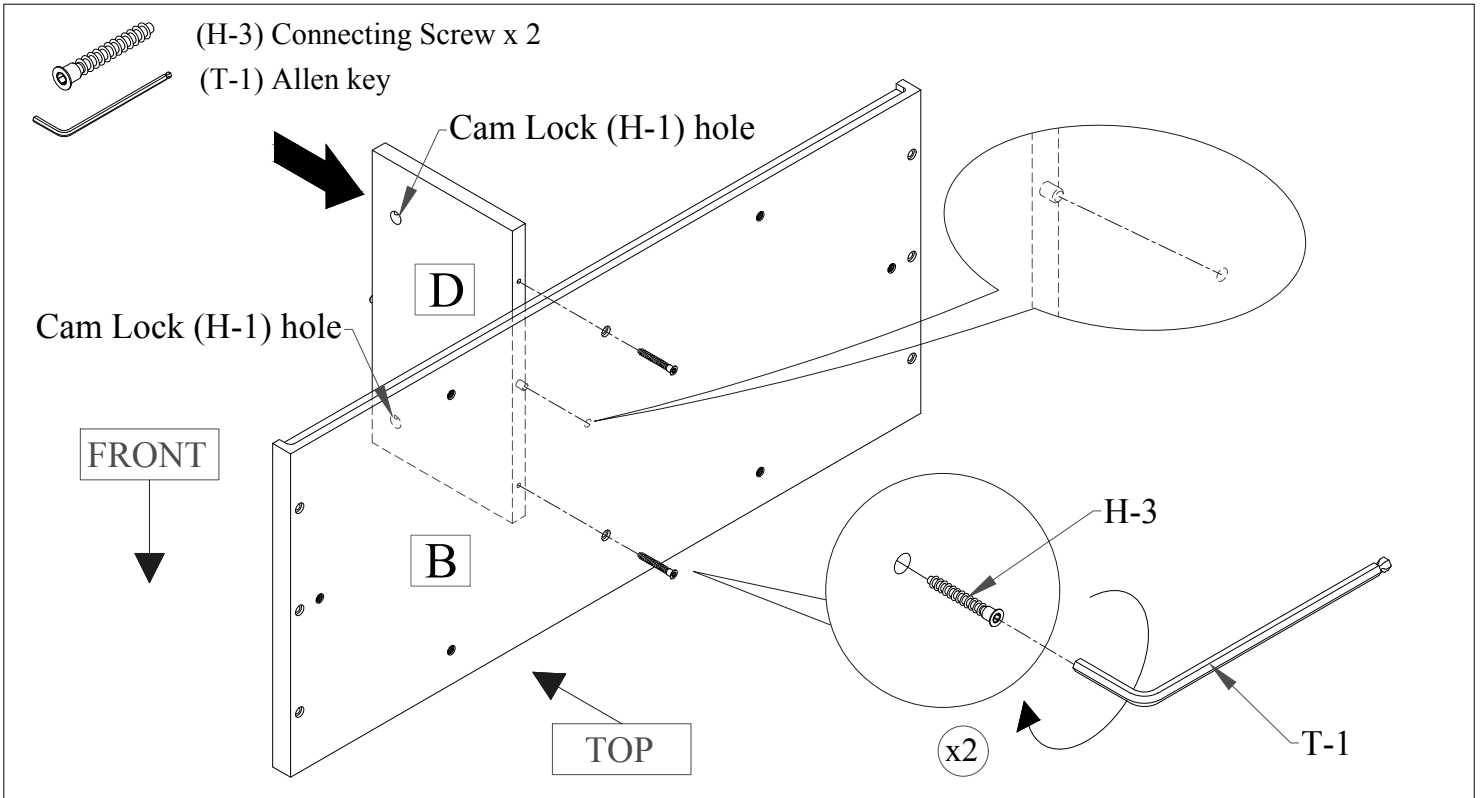


Install and secure Bottom Frame (B) to Divider Frame (D) using Connecting Screws (H-3) first by hand, then fully tightening using the provided Allen Key (T-1). Note the orientation of the Cam Lock (H-1) holes in the Divider Frame (D)

Step 3

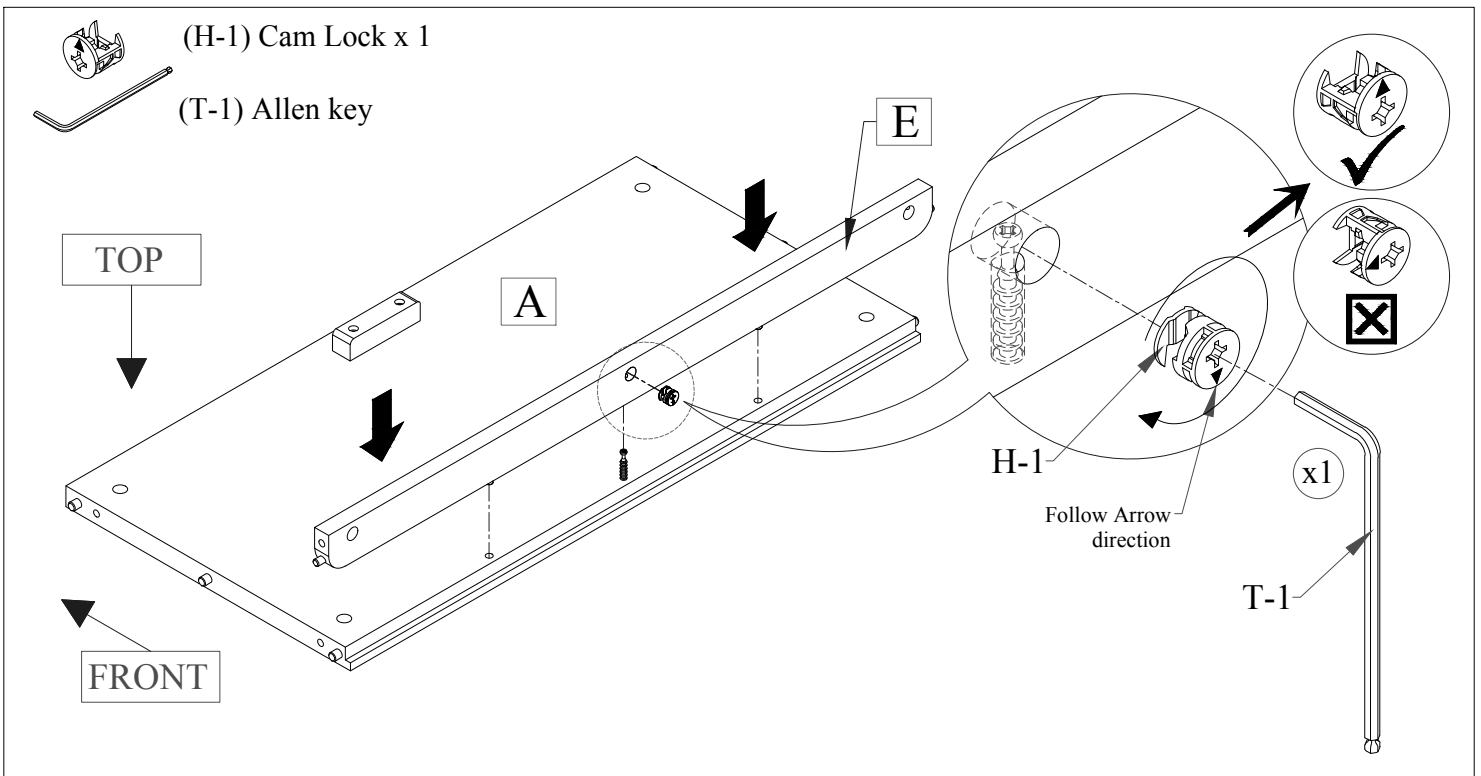


Attach Top Back Rail (E) to the Top Frame (A) by inserting pre-installed dowels and Cam Screw (H-2) as shown. Install Cam Lock (H-1) into the corresponding hole along Top Back Rail (E) as illustrated. Make sure arrows on Cam Lock (H-1) point to the screw upon insertion. Secure Cam Lock (H-1) using Allen Key (T-1), turning them clockwise until they are snug. DO NOT OVER TIGHTEN the Cam Lock.

Step 4

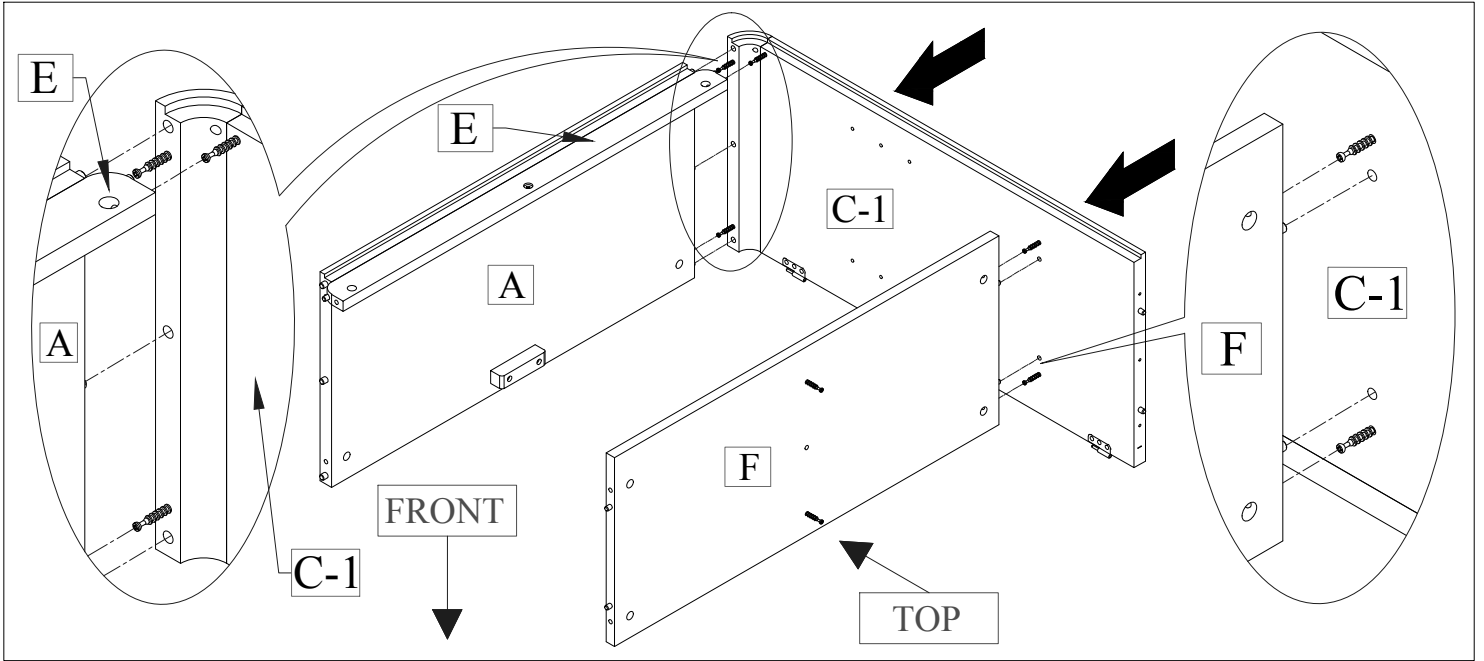


Attach Top Back Rail (E)/ Top Frame (A) assembly and Fixed Shelf (F) to the Left Side Frame (C-1) by inserting pre-installed dowels and Cam Screws (H-2) as shown.

Step 5

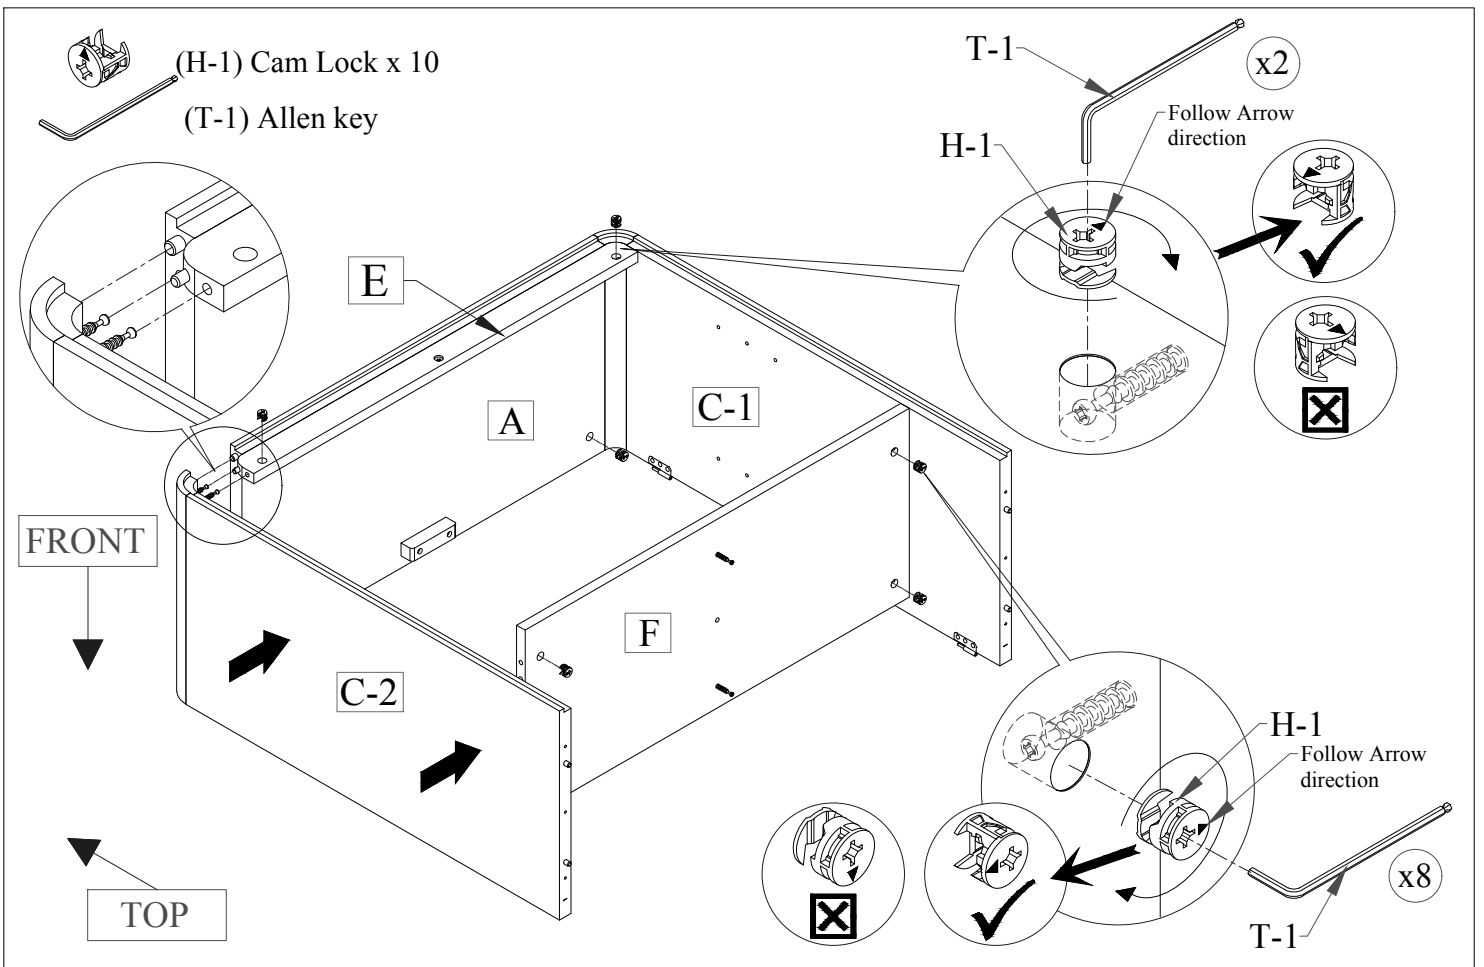


Attach Right Side Frame (C-2) to the assembly from step 4 by inserting pre-installed dowels and Cam Screws as shown. Install Cam Locks (H-1) into the corresponding hole along Top Back Rail (E) as illustrated. Make sure arrows on Cam Locks (H-1) point to the screw upon insertion. Secure Cam Lock (H-1) using Allen Key (T-1), turning them clockwise until they are snug. **DO NOT OVER TIGHTEN** the Cam Lock.

Step 6

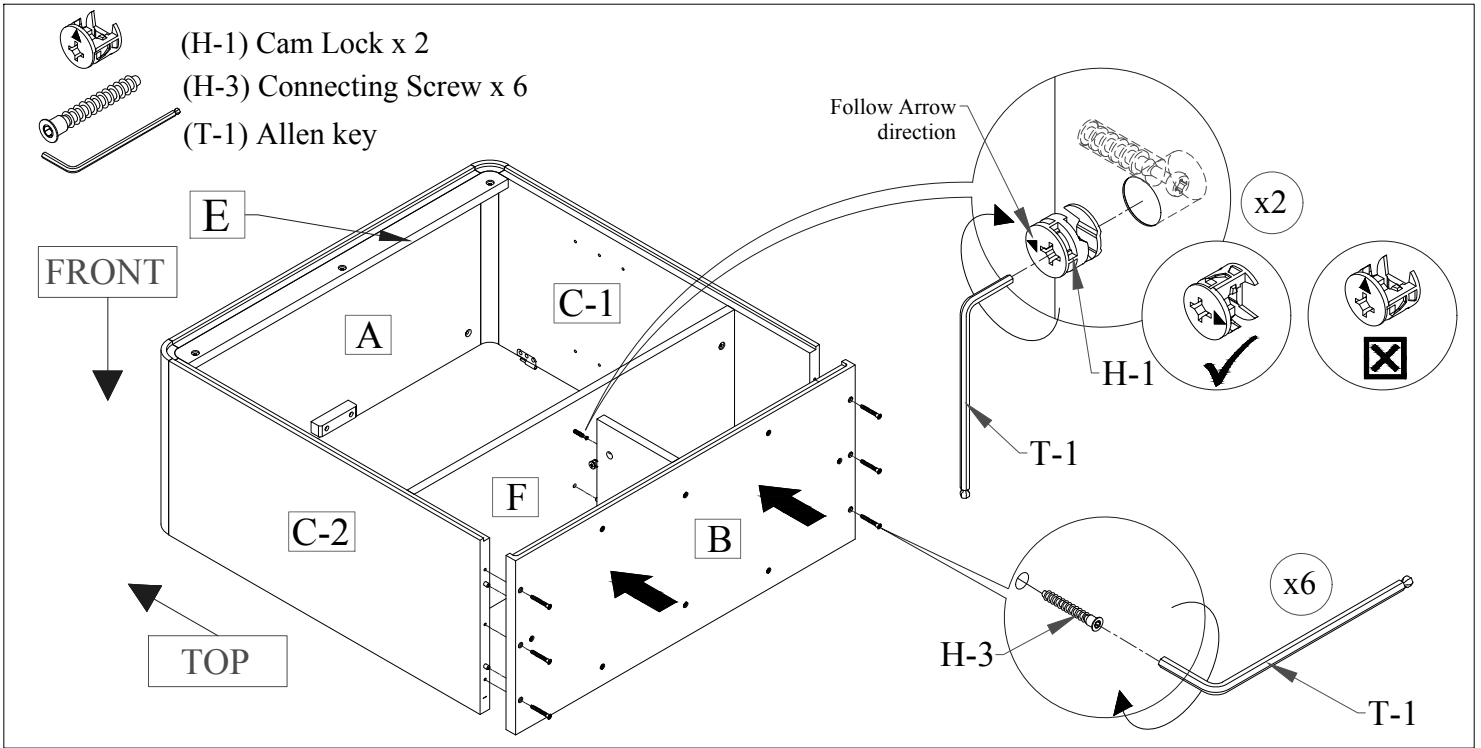


Attach Bottom Frame assembly from step 2 by inserting pre-installed dowels and Cam Screws (H-2) as shown. Install Cam Locks (H-1) into the corresponding hole along Divider Frame (D) as illustrated. Make sure arrows on Cam Locks (H-1) point to the screw upon insertion. Secure Cam Lock (H-1) using Allen Key (T-1), turning them clockwise until they are snug. **DO NOT OVER TIGHTEN** the Cam Lock. Install and secure Bottom Frame (B) to Left/ Right Side Frame (C-1/ C-2) with Connecting Screws (H-3) using the provided Allen Key (T-1). Engage all hardware before fully tightening. **DO NOT OVER TIGHTEN.**

Step 7

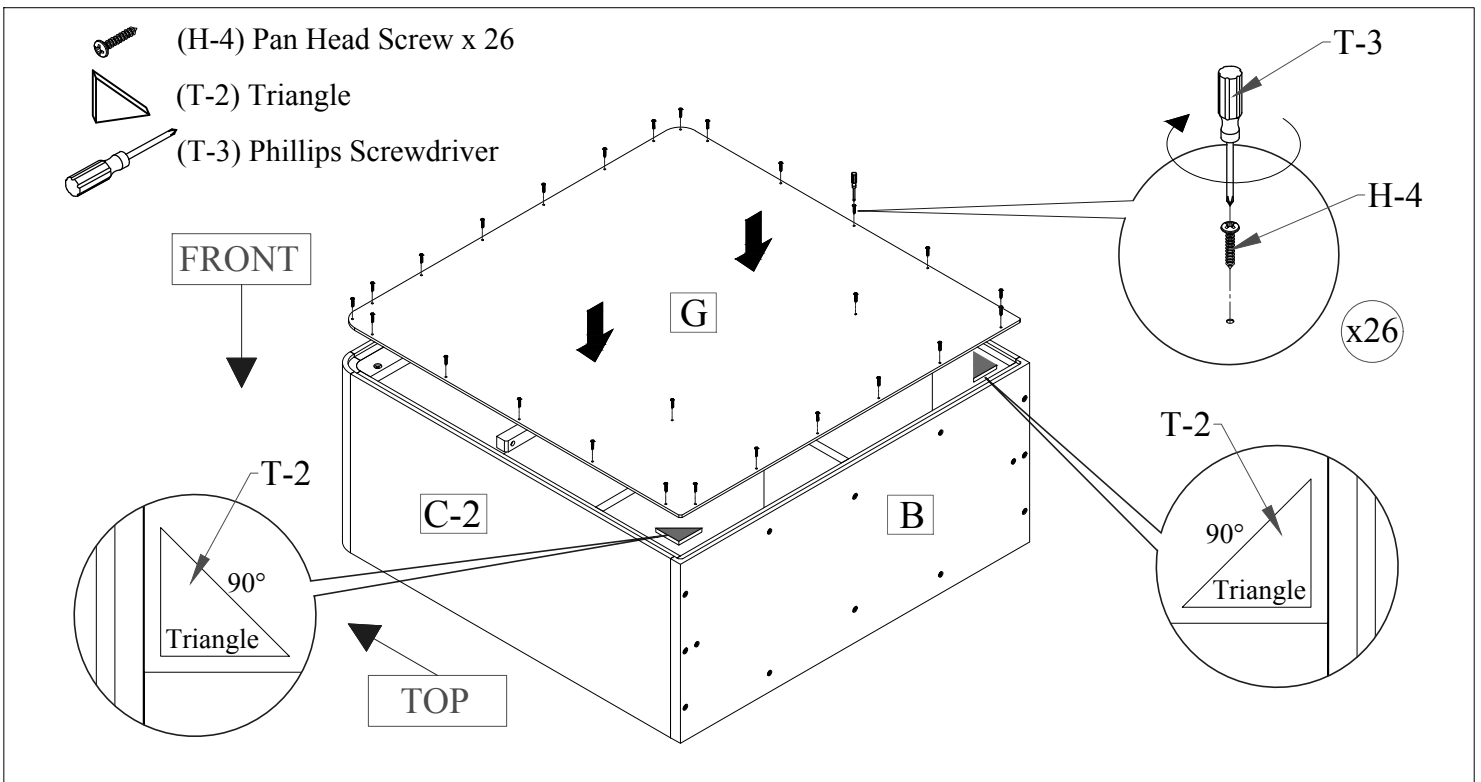


Using the provided Triangle (T-2) check each corner of the assembly to ensure it is square. Adjust assembly as needed. Once satisfied, carefully attach the Back Panel (G) with Pan Head Screws (H-4) using Phillips Screwdriver (T-3, not included). Fully tighten, but **DO NOT OVER TIGHTEN.**

Step 8

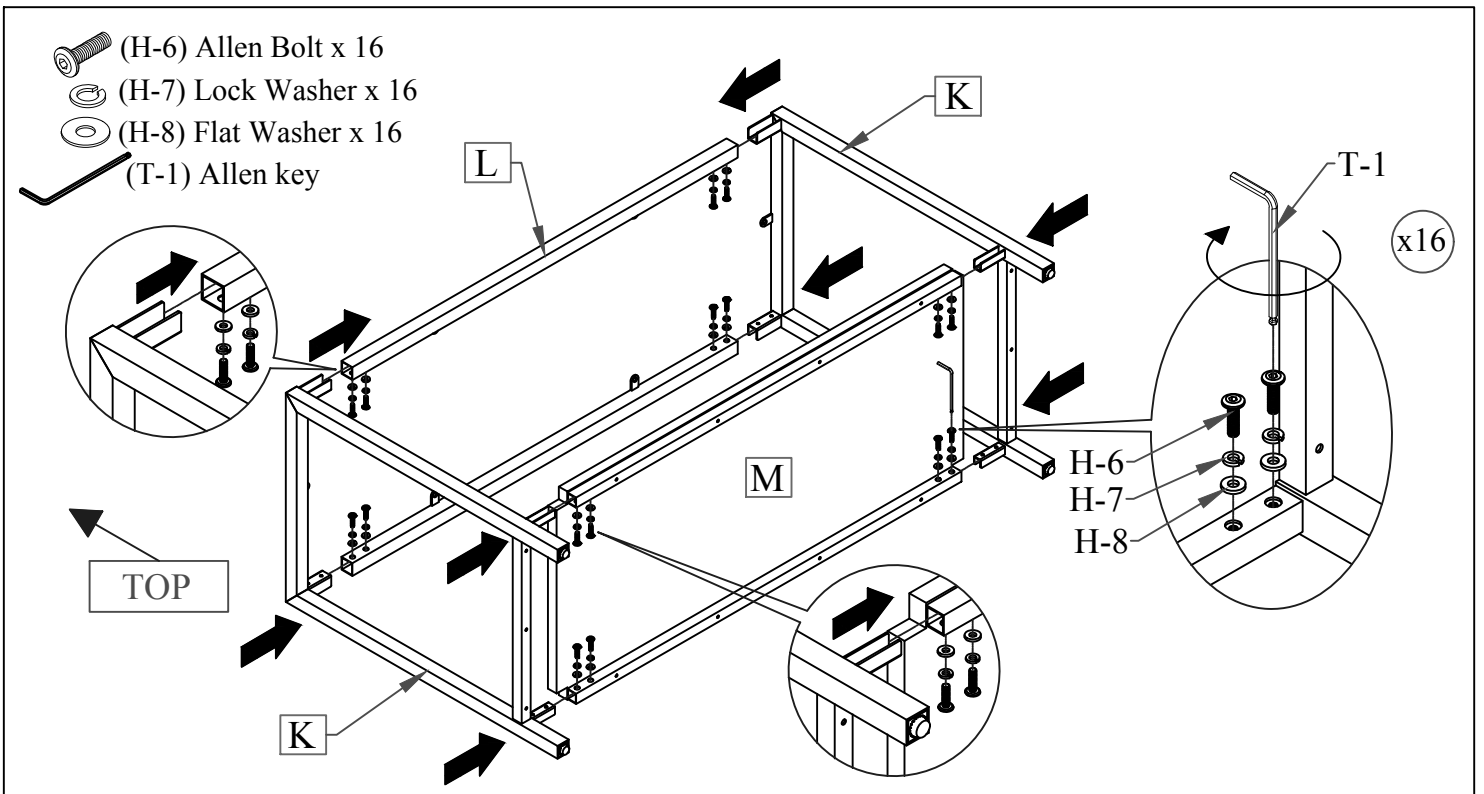


Install and secure Metal Support (L) and Lower Shelf Frame (M) to Leg Metal Frame (K) with the Short Allen Bolts (H-6), Lock Washers (H-7) and Flat Washers (H-8), using the provided Allen Key (T-1), stacking the hardware in the order shown. Engage all hardware by hand first, then fully tighten. **DO NOT OVER TIGHTEN.**

Step 9

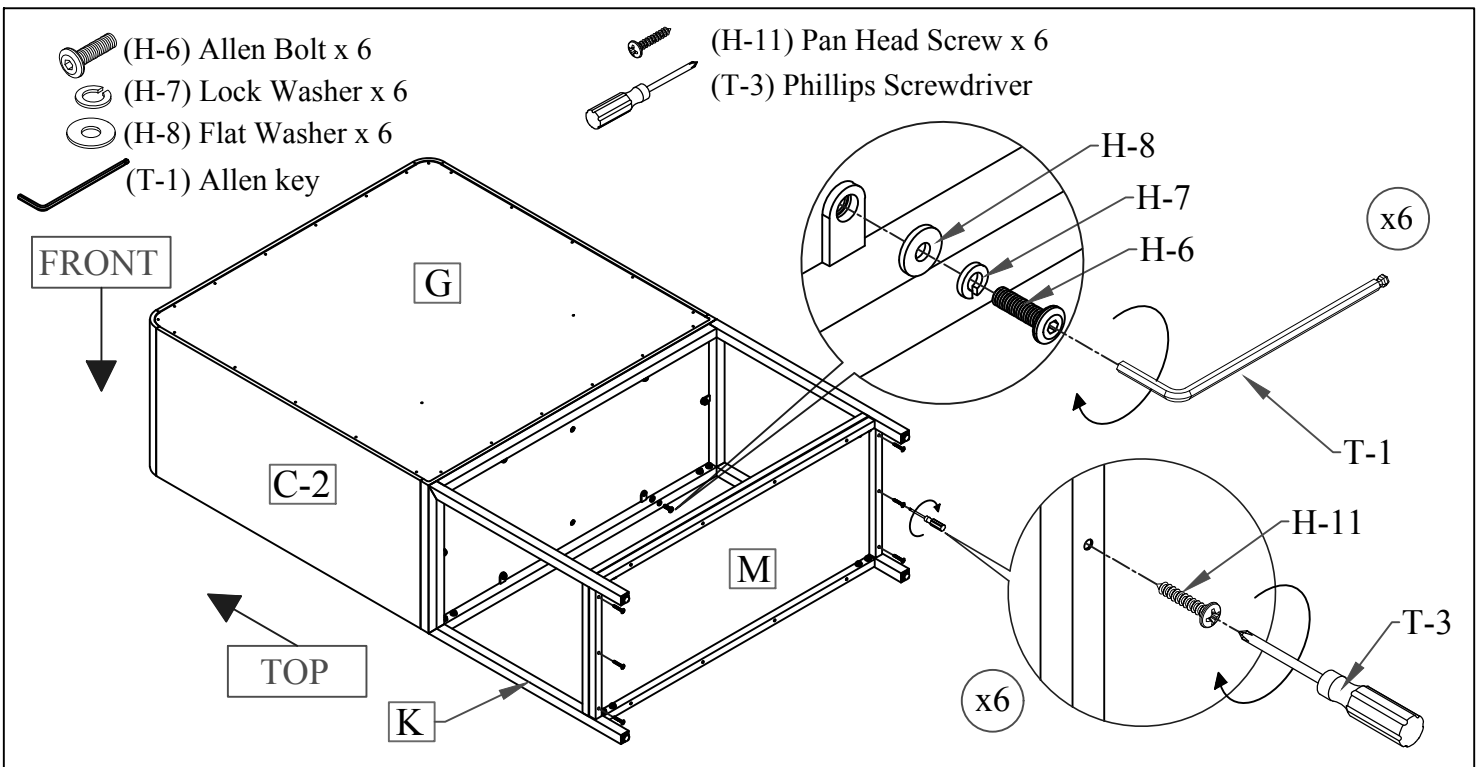


Position the Leg Base Frame assembly from Step 8 with the assembly at Step 7. Secure the frame with the Allen Bolts (H-6), Lock Washers (H-7) and Flat Washers (H-8), using the provided Allen Key (T-1), stacking the hardware in the order shown. Engage all hardware by hand first, then fully tighten. **DO NOT OVER TIGHTEN.** Carefully secure Lower Shelf Frame (M) to Leg Metal Frame (K) as shown using Pan Head Screws (H-11) and fully tighten with Phillips Screwdriver (T-3). **DO NOT OVER TIGHTEN.**

Step 10

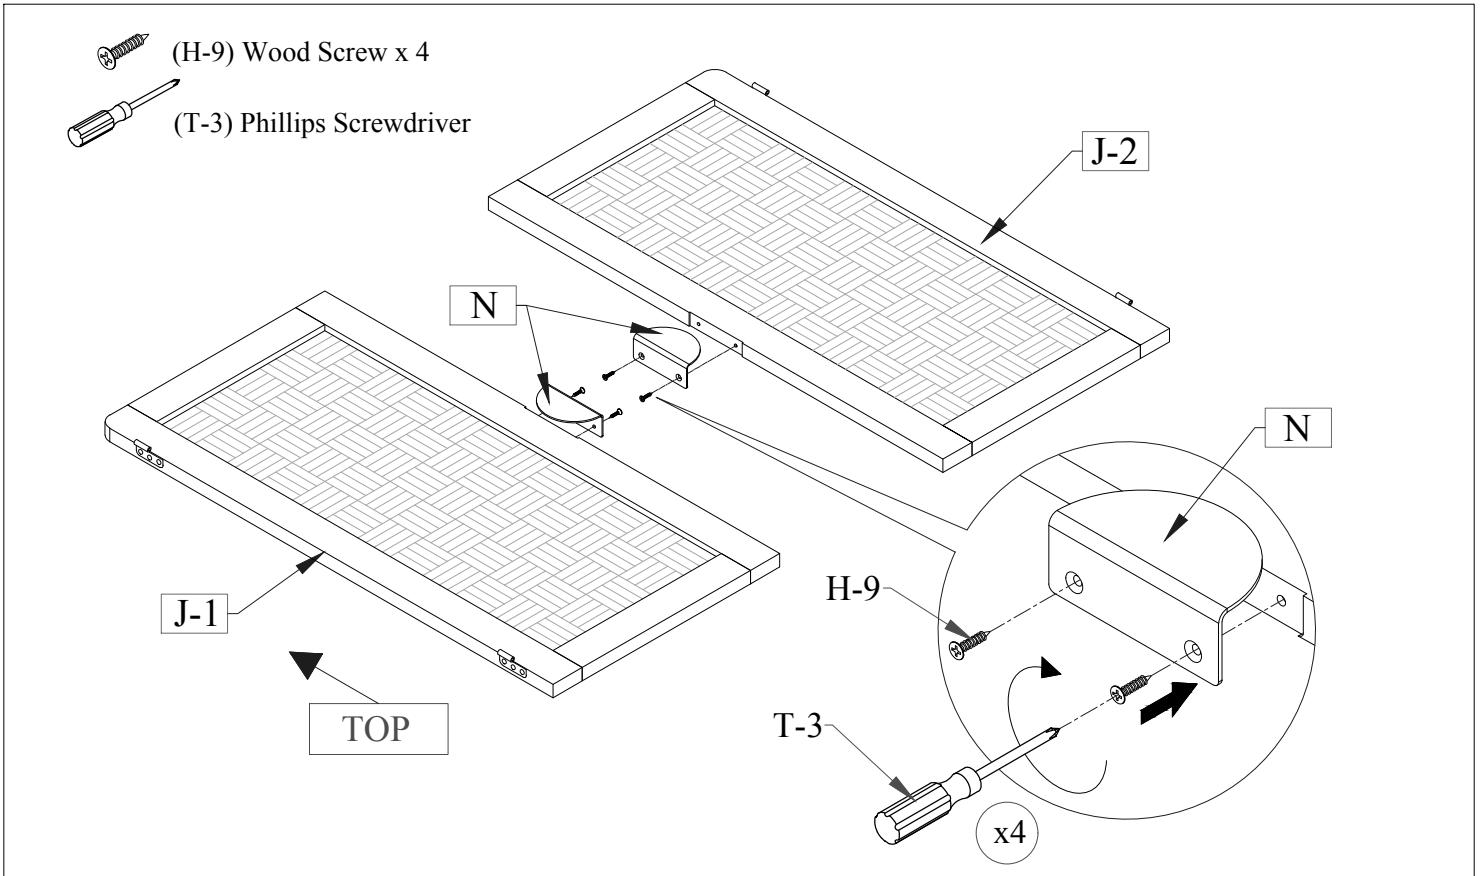


Install and secure Handles (N) to Left Door Frame (J-1) and Right Door Frame (J-2) as shown using Wood Screws (H-9) and fully tighten with Phillips Screwdriver (T-3). DO NOT OVER TIGHTEN.


Step 11

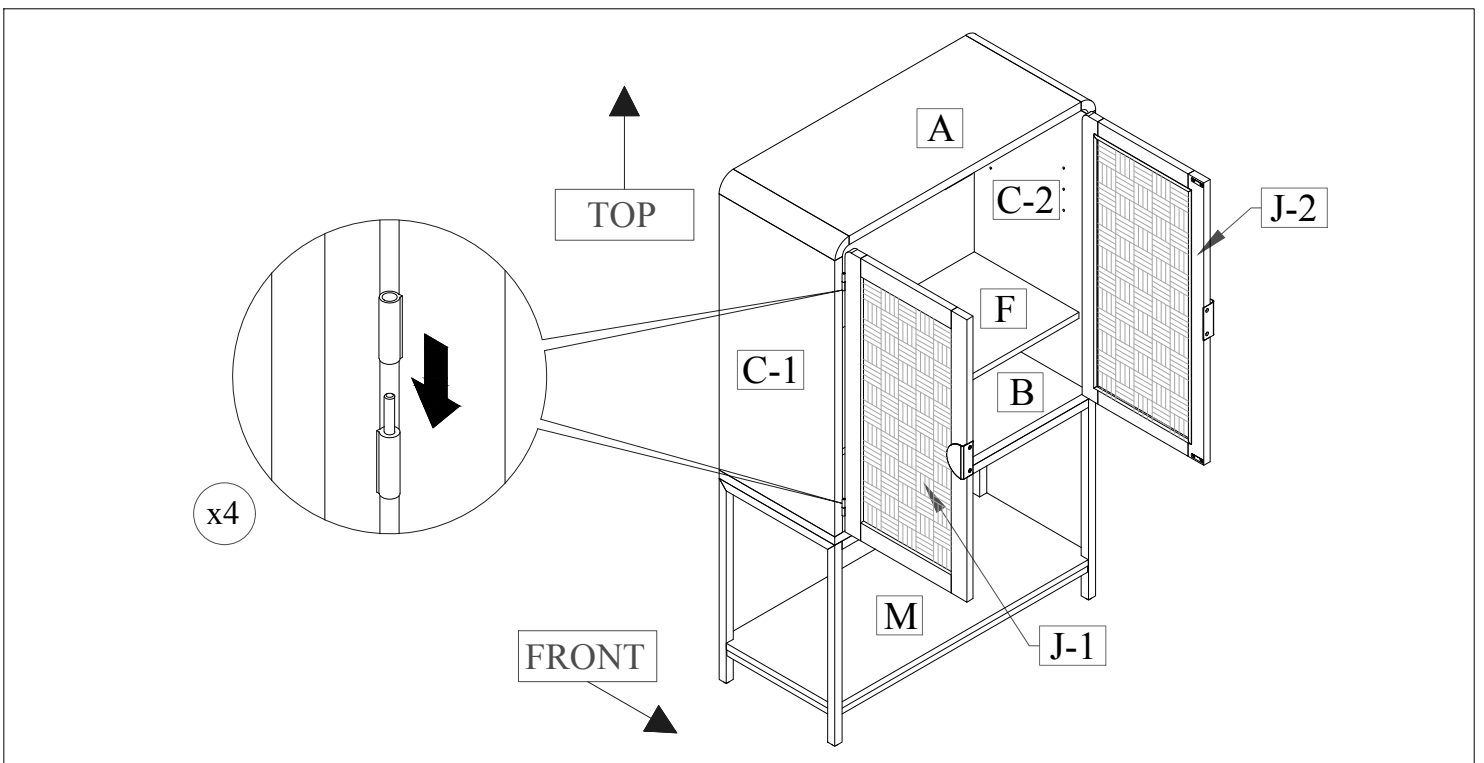

Using a second person to assist you, carefully turn the assembled unit upright as shown. Positional and secure Left Door Frame (J-1) and Right Door Frame (J-2) to Left Side Frame (C-1) and Right Side Frame (C-2) by inserting pre-installed male hinges into female hinges.



Step 12

 (H-5) Shelf Pin x 4

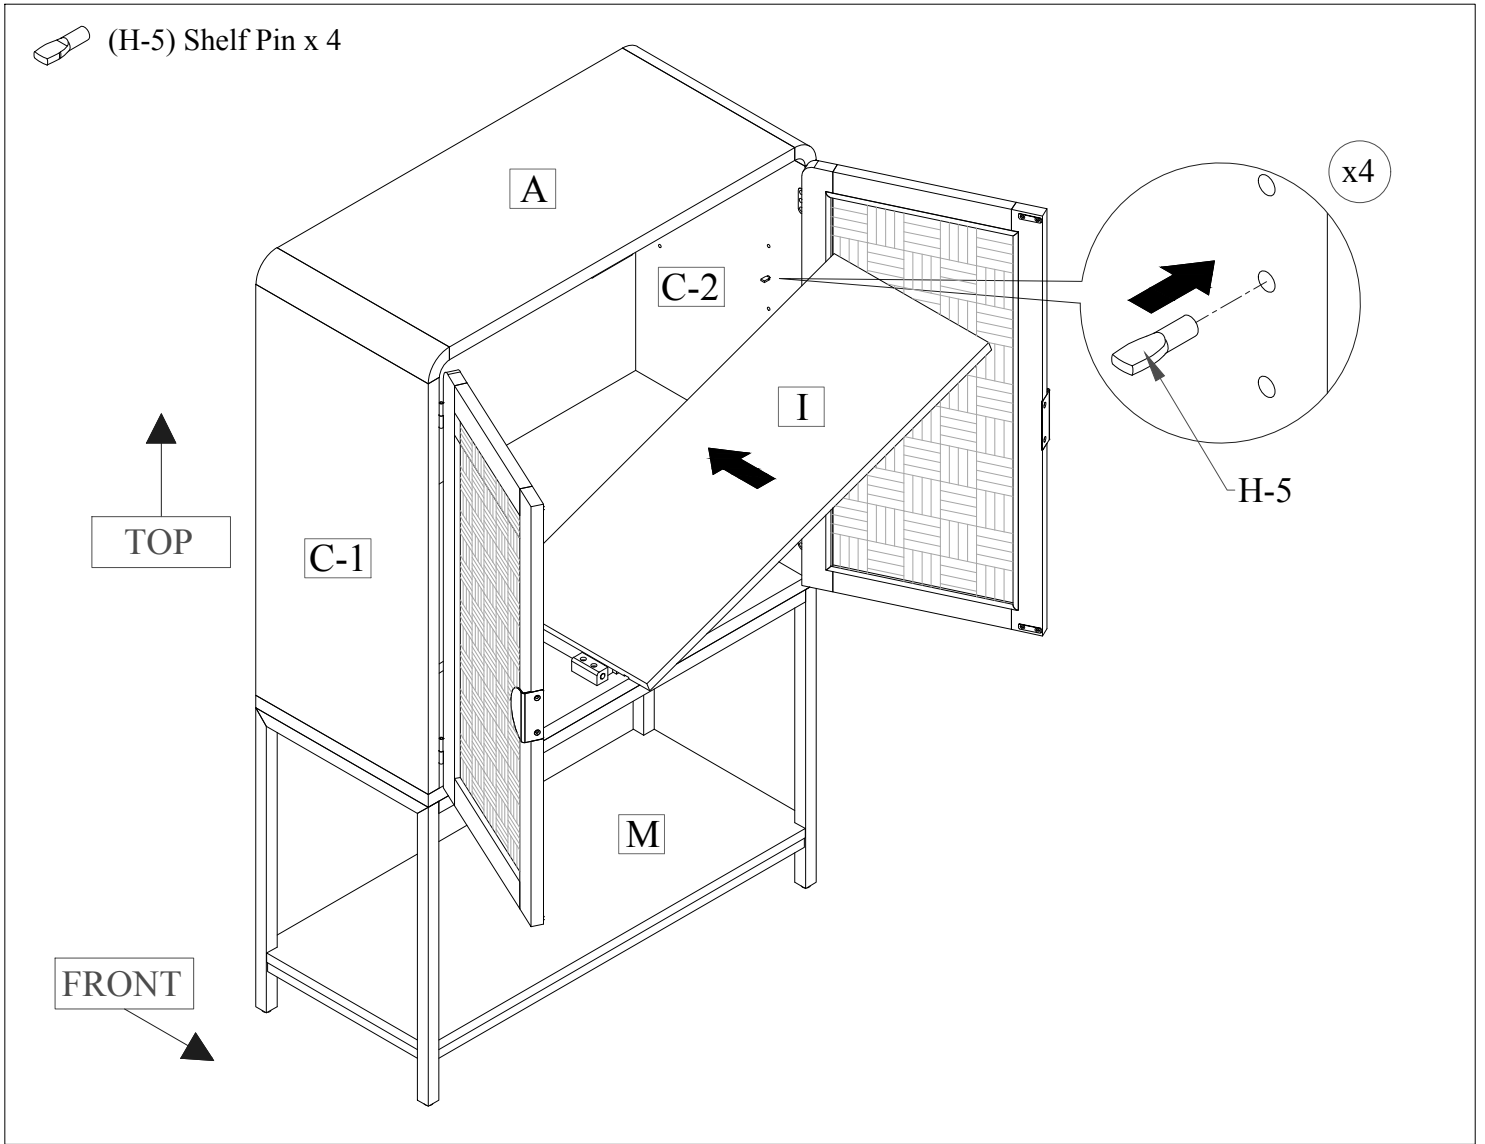

Insert Shelf Pins (H-5) into the desired hole locations on Left Side Frame (C-1) and Right Side Frames (C-2). Turn Adjustable Shelf (I) diagonally and carefully insert into position as shown, making sure they rest evenly on each Shelf Pin (H-5).



Step 13: Leveling Instruction

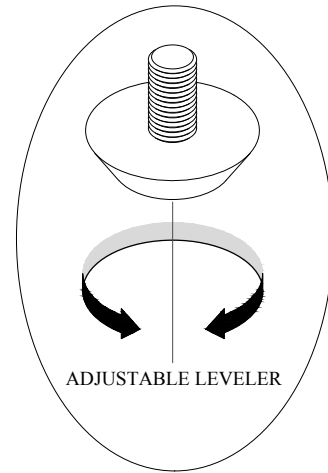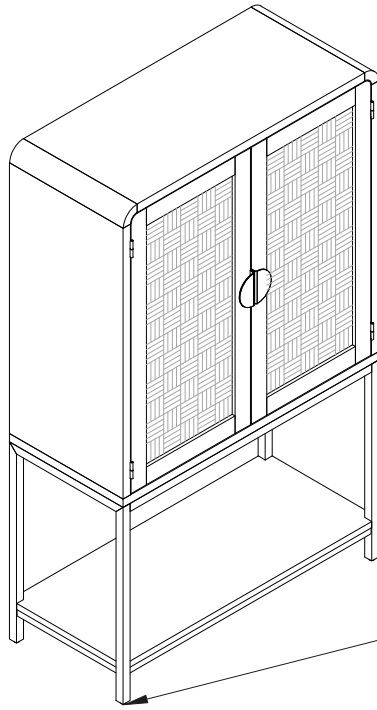

NOTE: Levelers can be used for adjustment if needed.



If RIGHT DOOR appears higher than the LEFT DOOR

Adjust the FRONT LEFT leveler until doors are even.

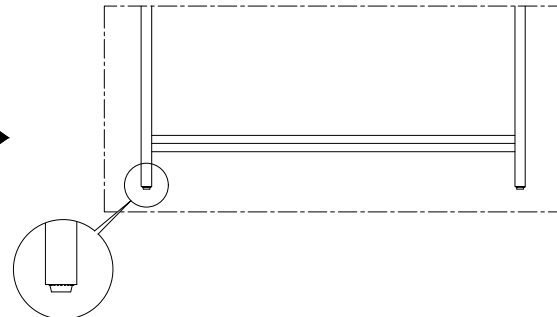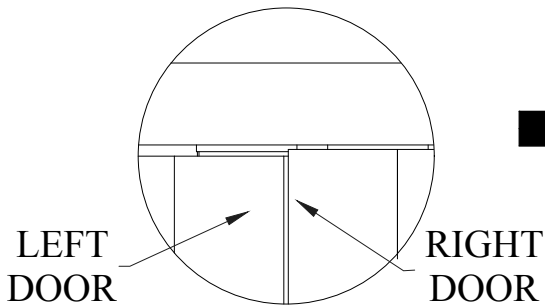

If LEFT DOOR appears higher than the RIGHT DOOR

Adjust the FRONT RIGHT leveler until doors are even.

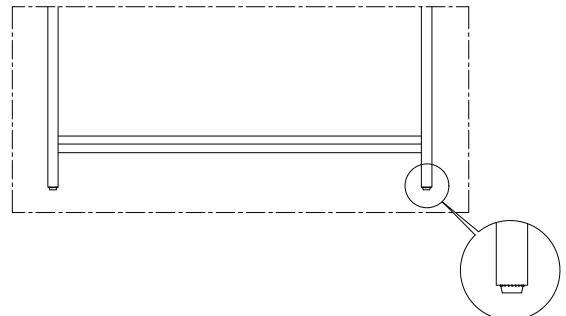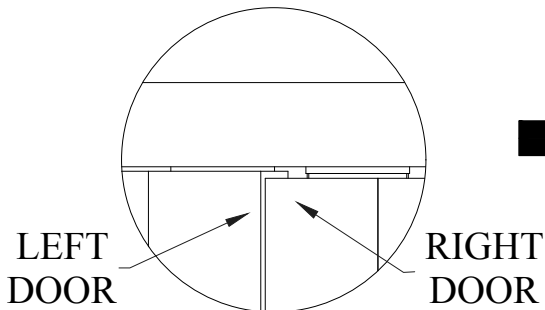

Ensure that all bolts have been fully tightened. Assembly is now complete and the cabinet is ready for use.


Note: Once the cabinet is assembled and is level and square, the adjustable levelers can be used for further adjustment. First make sure all levelers rest evenly on the floor. If the RIGHT DOOR appears higher than the left door, adjust the LEFT FRONT leveler until the doors align. Adjust the RIGHT FRONT leveler if the LEFT DOOR is higher.

Hardware may loosen over time. Periodically check that all connections remain tight and adjust as needed.


Anti-Tip Measures

WARNING

Furniture tip overs can result in death or serious injuries. To reduce the likelihood of tip over, this product should be used with the enclosed Anti-Tip Kit. This Anti-Tip Kit is only a deterrent. It is not a substitute for proper adult supervision. Manufacturer and retailer assume no liability for improper installation or excess loads placed on screws, brackets, or straps. When properly installed, this restraint provides protection against unexpected tipping of furniture. This Anti-Tip Kit **MUST** be installed into the wall using proper mounting hardware **OR** into a wall stud using appropriate screws. Position of the Anti-Tip Kit depends on the product and the location of the wall studs. The hardware provided is not a comprehensive solution for all wall types. Be sure to consult a professional or your local hardware store to determine the hardware needed for your specific wall type (plaster, drywall, concrete, etc.).

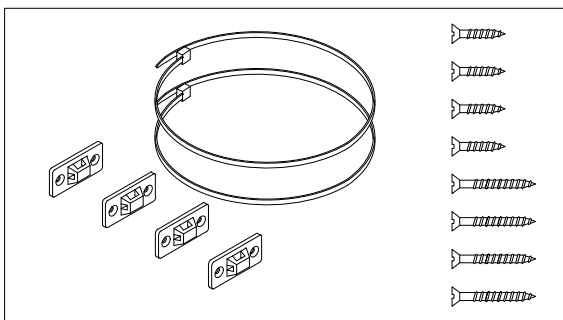

Anti-Tip kit contents

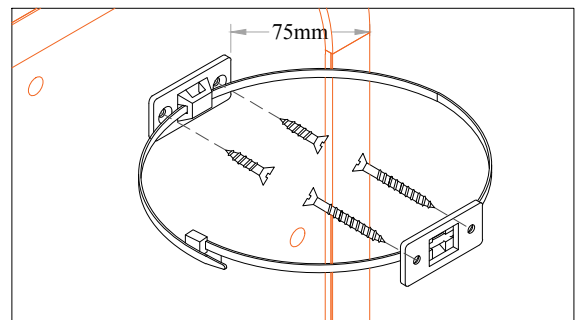

Anti-Tip kit installation

Using a second person to assist you, place the unit in the desired final location against a wall. It is suggested to use a stud finder to find wall studs along the length of the unit and roughly 1 inch below the top. Where possible, mark a drill hole position on the wall where there is a stud and use a Drill or Screwdriver (NOT INCLUDED) to attach Wall Brackets to the wall using Long Screws in the location of the wall studs.

In a case where there is no wall stud, hold Brackets on wall and mark the drill hole positions so that they are roughly 1 inch below the top of the piece. Using a Drill (NOT INCLUDED) with a drill bit roughly the diameter of the plastic Wall Plugs, drill pilot holes in marked positions. Insert the plastic Wall Plugs into the holes until the tops are roughly flush with the wall. Align the holes and insert the Long Screws through Brackets and into the corresponding holes in the wall using a Phillips Head Screwdriver (NOT INCLUDED).

Next, attach remaining 2 Brackets to the back of the piece using Short Screws so they align with Brackets installed on the wall. Loop Straps through Brackets (A) on the furniture piece, then through Brackets on the wall and tighten until snug. Installation is now complete.

IMPORTANT: Check that the Wall Brackets are firmly screwed into the wall and the Cable Ties are snug.

If there is any hesitation, please consult a professional or your local hardware store.


Warnings

WARNING



Children have died from furniture tip over. To reduce the risk of furniture tip over:

- **ALWAYS** install Anti-Tip device provided.
- **NEVER** put a TV on this product.
- **NEVER** allow children to stand, climb or hang on any drawers, doors or shelves.
- **NEVER** open more than one drawer at a time.
- **DO NOT** defeat or remove any drawer interlock system if included with the product; it is an important stability and safety system.
- **Place heaviest items in the lowest drawers.**

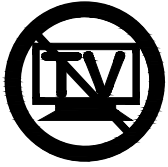

Not intended for clothing storage use.



All products sold at World Market are not for commercial use and are intended for residential use only.



WARNING: Small parts are a choking hazard. Adult supervision is required before, during and after assembly.

Care & Maintenance



DO NOT put hot items directly on furniture surface.



DO NOT clean furniture with harsh cleansers or polish.



DO NOT place furniture in direct sunlight.



DO NOT place furniture near heating or cooling vents.



DO NOT write on furniture without a padded barrier to protect the surface.



DO NOT place furniture outside. For **INDOOR USE ONLY**.



Dust and pick up spills using a clean, non-colored, lint-free dry cloth.

WORLD MARKET LIMITED ONE-YEAR WARRANTY – Indoor Furniture

For your customer satisfaction, this product carries a LIMITED ONE-YEAR WARRANTY from the date of delivery. This limited warranty only applies to World Market brand furniture, and not to other furniture brands sold on World Market's website.

Where applicable, the limited warranty provides coverage for:

1. **Manufacturing, Material and Workmanship Defects:** Includes defects related to core frame/structure substrates (wood and metal); cracking, splitting, or complete breakage of hardwood, plywood or medium density fiberboard (MDF); cracking, splitting or lifting of wood veneer or laminated top surfaces caused by process failure; broken welds or improperly coated metal frame components (powder coating or painted); fabric or leather material defects including tears, misprints, fraying, crease marks, skip stitches or open seams; support webbing material and sinuous spring defects or damage, including method of attachment to frame; and other component failures that are a direct result of manufacturing or workmanship defects.
2. **Cushions & Cushions with Enclosed Steel Pocket Coils:** Failed or ruptured steel pocket coils enclosed inside of seat cushions, or loss of resiliency from a material breakdown of foam or fiber filling, which should not be confused with softening or settling during normal use.
3. **Leather:** Splitting or cracking of leather material. NOTE: The warranty does NOT cover natural hide markings, variations in the leather color or grain due to the authentic natural properties of processed cowhide leather.
4. **Bonded Leather or Bi-cast Leather:** Separation of the polyurethane coating, peeling or cracking of the inner layer or at the bonded seam edges (bi-cast straps).
5. **Furniture Components (Hardware & Mechanisms):** Includes defects to pre-installed components or hardware provided to the customer for assembly such as office chair hydraulic lifts, lift mechanisms, metal bases and casters, swivel plate mechanisms; for drawers, metal glides, handles/knobs; for doors, hinges, magnetic latches; and other components such as bent or stripped threaded leg posts and adjustable levelers. For missing, damaged, corroded, or misplaced hardware components such as bolts or washers, please contact Customer Service at: 877-967-5362.

This LIMITED ONE-YEAR WARRANTY does NOT cover:

1. Damage due to mishandling during transportation from store or transportation without original protective packaging.
2. Abuse, negligence (product misuse) or wear and tear that may result in or from:
 - a. **Wood & Veneer:** Mishandling, exposure to moisture, peeling or discoloration caused by exposure to moisture or excessive sunlight, heat; splintered, dented or nicked panels, legs or component edges or paint/finish blemishes; or treatment with corrosive chemicals (dyes, inks, paints or harsh cleaning products).
 - b. **Fabric & Leather (Including Bonded or Bi-Cast Leathers):** cuts, punctures, tears, burns, pet damage, or treatment with corrosive chemicals (dyes, inks, paints or harsh cleaning products), exposure to direct sunlight, fire, high heat, water, or any bright light source (natural or artificial) that may cause splitting, peeling or flaking with time.
 - c. **Foam (Cushions):** Flattening, relaxing or settling/softening of foam components that comes with normal use.
 - d. **Hardware Components:** improper installation or misuse/substitution of hardware components not defined in the Assembly Instructions for the product (if applicable)
3. Damage due to environmental exposure to direct sunlight, fire, high heat, water or extreme humidity, any bright light source (natural or artificial), or any environment that the product is not intended for.
4. This warranty is applicable for indoor furniture products purchased for residential use only.

For additional information on returns, please visit: <https://www.worldmarket.com/customer-service/return-policy.html>

All products sold at World Market are NOT FOR COMMERCIAL USE and are intended for residential use only. Products purchased for commercial use will VOID all warranty provisions as listed above.

Any claims under this LIMITED ONE-YEAR WARRANTY are valid and applicable only as to the original purchaser and must be accompanied by proof of purchase. Warranty claims should be submitted to a World Market store or through World Market Customer Service Call Center, Toll Free at 877-967-5362.

For valid warranty claims, World Market will repair or replace the product, or offer a full or partial credit, in the sole discretion of World Market. This LIMITED ONE-YEAR WARRANTY gives you specific legal rights and you may also have other rights which vary from state to state.