 
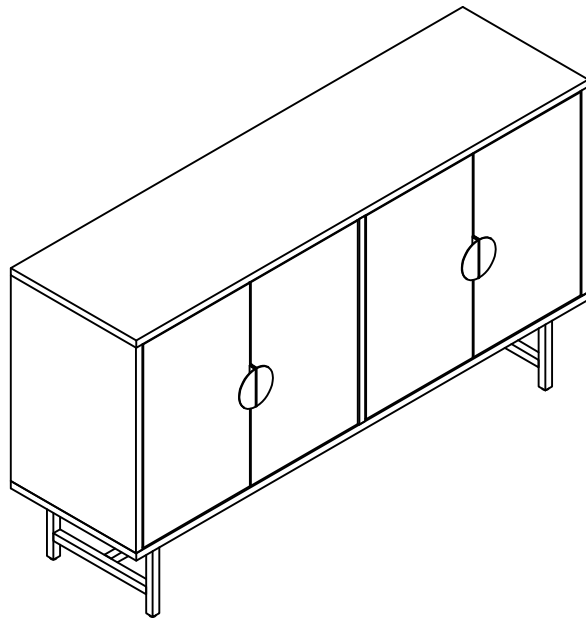 
 



 
 

 
 

 
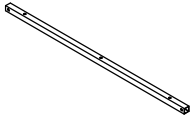 
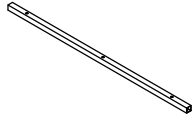 
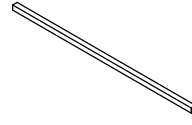 


**CROSLEY**  
FURNITURE

 
 

 
 
 



 








Sideboard  
CF4220



# PARTS LIST

 
<p>A2</p> 	<p>B2</p> 	<p>C2</p> 	<p>D2</p> 	<p>E2</p> 
<p>Top Panel 1 PC</p>	<p>Left Panel 1 PC</p>	<p>Partition Panel 1 PC</p>	<p>Right Panel 1 PC</p>	<p>Bottom Panel 1 PC</p>
<p>F2</p> 	<p>G2</p> 	<p>H2</p> 	<p>I2</p> 	<p>J2</p> 
<p>Adjustable Shelf 2 PCS</p>	<p>Left Door 2 PCS</p>	<p>Right Door 2 PCS</p>	<p>Left Back Panel 1 PC</p>	<p>Right Back Panel 1 PC</p>
<p>K2</p> 	<p>L</p> 	<p>M</p> 	<p>N</p> 	<p>O</p> 
<p>Cover 2 PCS</p>	<p>Side Frame 2 PCS</p>	<p>Side Rail 2 PCS</p>	<p>Upper Middle Rail 1 PC</p>	<p>Lower Middle Rail 1 PC</p>

## HARDWARE LIST

#1		#2		#3		#4	 1/4"*51mm	#5	 1/4"*25mm
	Handle 4 PCS		Double Magnet 2 PCS		Shelf Holder 8 PCS (Extra 1)		Long Bolt 6 PCS (Extra 1)		Round Head Bolt 6 PCS (Extra 1)
#6	 1/4"*32mm	#7	 1/4"*16mm	#8	 1/4"*11mm	#9	 1/4"*13mm	#10	 8*30mm
	Medium Bolt 13 PCS (Extra 1)		Short Bolt 8 PCS (Extra 1)		Spring Washer 12 PCS (Extra 1)		Flat Washer 12 PCS (Extra 1)		Wood Dowel 12 PCS (Extra 1)
#11		#12	 6*3*15mm	#13	 6*3*15mm	#14	 8*3*12mm	#15	
	Barrel Nut 6 PCS (Extra 1)		Long Screw 12 PCS (Extra 1)		Round Head Screw 4 PCS (Extra 1)		Short Screw 34 PCS (Extra 1)		Binding Post 2 SETS (Extra 1)
#16	 M4	#17	 M2	#18					
	Allen Wrench 1 PC		Small Allen Wrench 1 PC		Safety Strap Kit 1 SET				

## ADDITIONAL TOOLS (Not Provided)


Note: It is not recommended to use power tools during assembly.





Phillips Head Screwdriver

 
Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

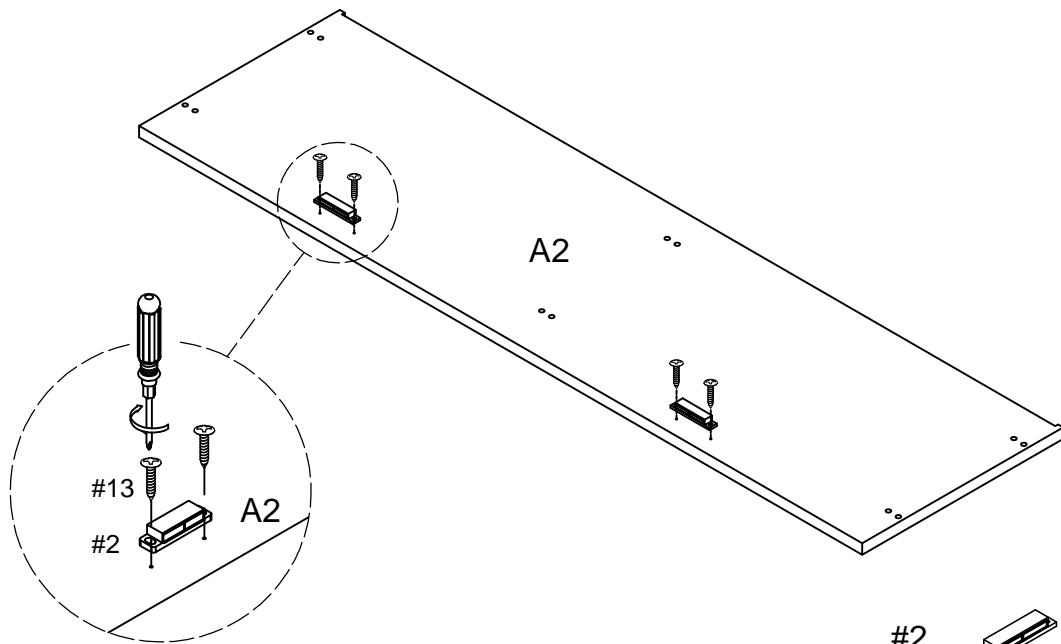

 Step 1. Attach double magnets (part #2) to top panel (part A2) using round head screws (part #13) and phillips head screwdriver.




#2  x 2  
#13  x 4

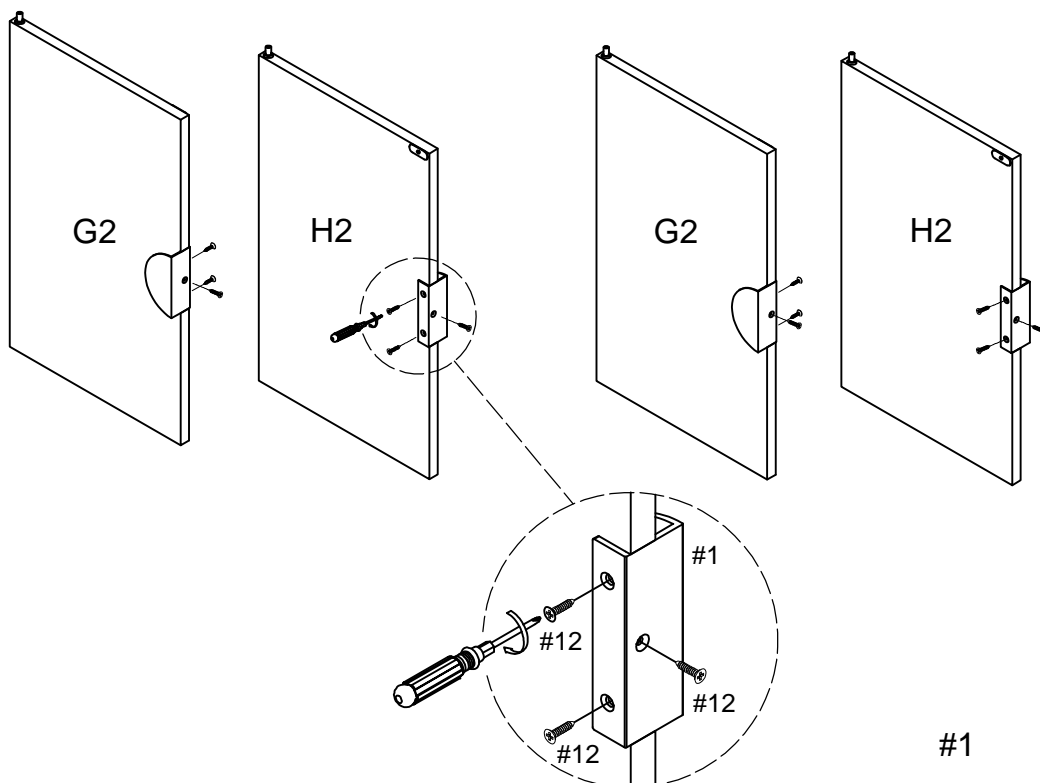 

Step 2. Attach handles (part #1) to doors (parts G2 & H2) using long screws (part #12) and phillips head screwdriver.




#1  x 4  
#12  x 12

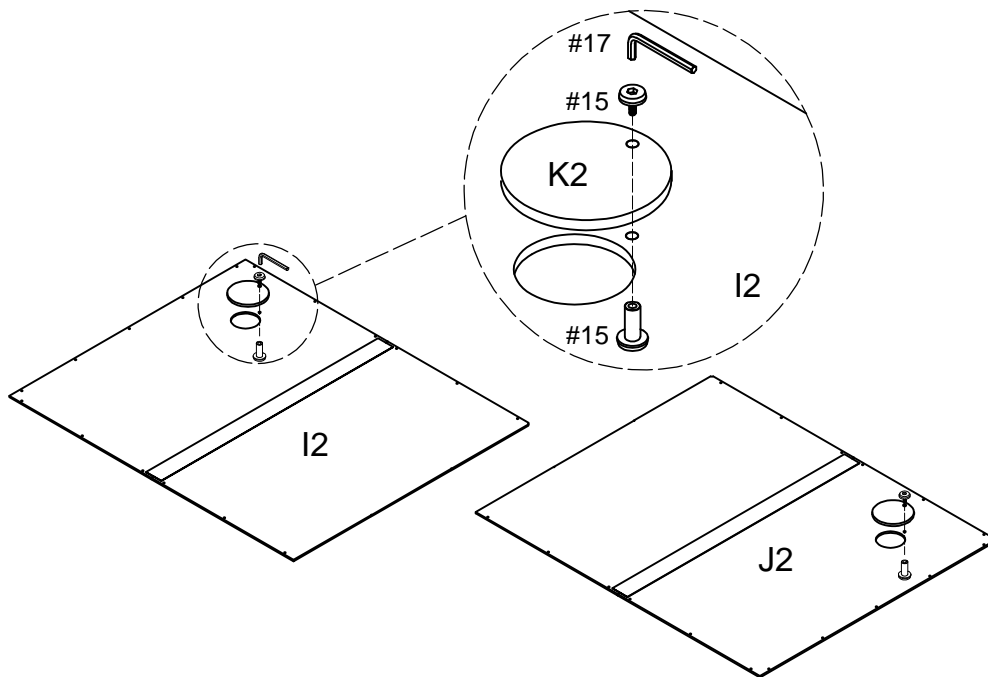 Step 3. Attach covers (part K2) to back panels (parts I2 & J2) using binding posts (part #15) and small allen wrench (part #17).




- |     |  |     |
|-----|--|-----|
| #15 |   | x 2 |
| #17 |  | x 1 |

 Step 4. Insert side frames (part L) into rails (parts M, N & O) using short bolts (part #7) and allen wrench (part #16).

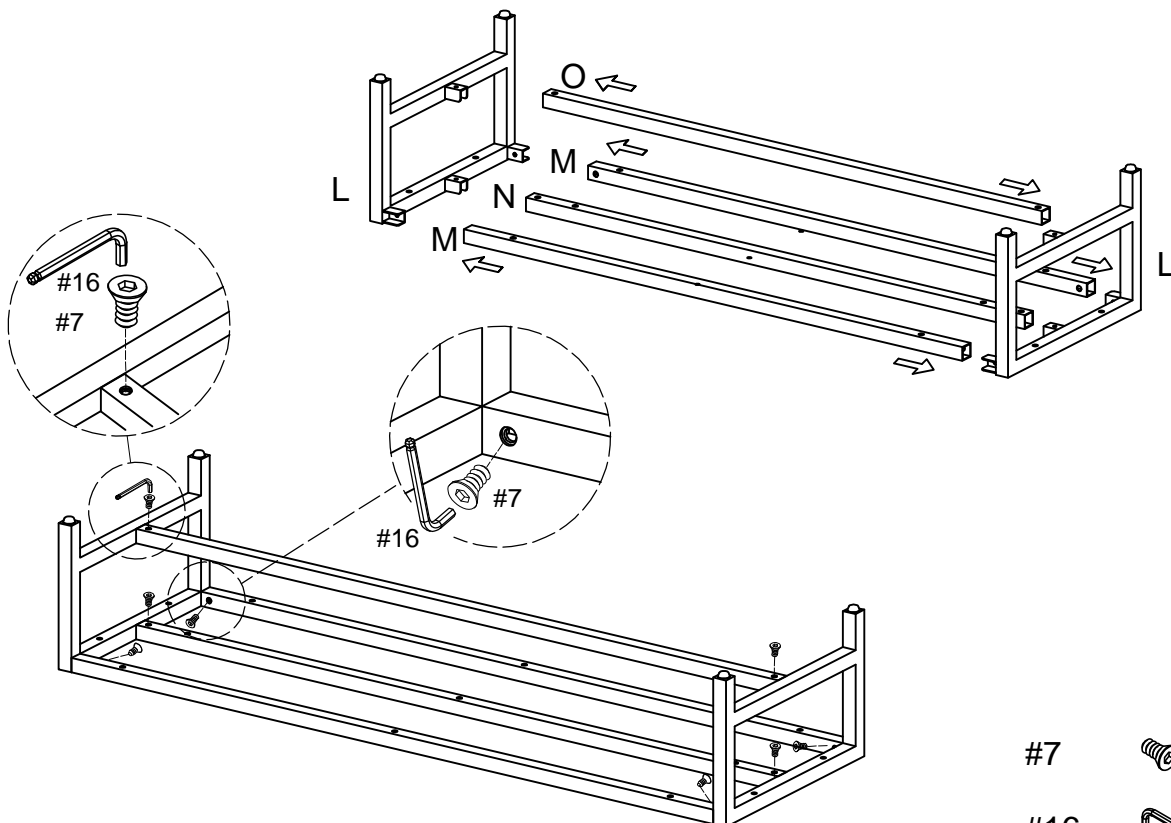


- |     |   |     |
|-----|---|-----|
| #7  |  | x 8 |
| #16 |  | x 1 |

 Step 5. Attach assembled unit (parts L, M & N) to bottom panel (part E2) using medium bolts (part #6) and allen wrench (part #16).

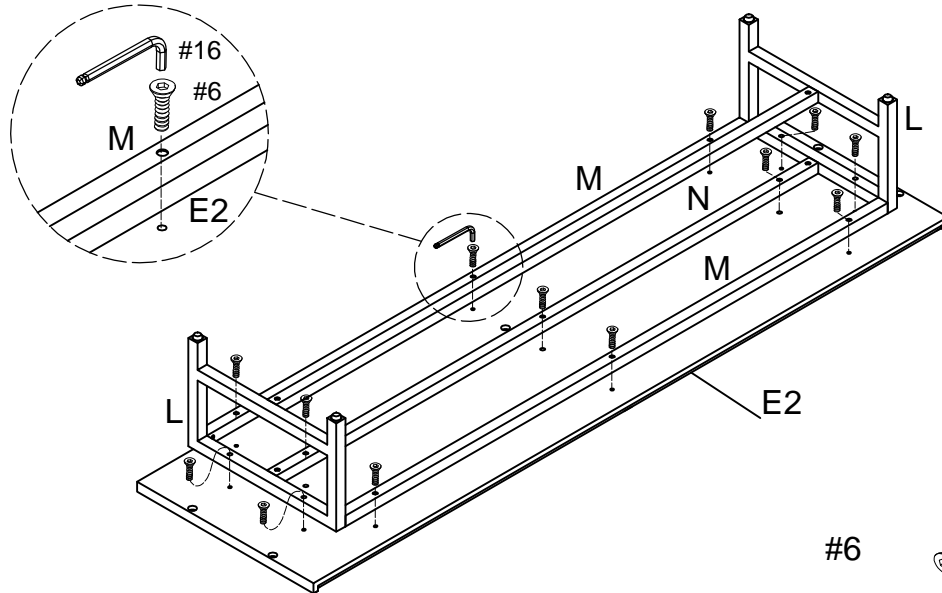


- |     |  |      |
|-----|--|------|
| #6  |   | x 13 |
| #16 |  | x 1  |

 Step 6. Attach panels (parts B2, C2 & D2) to bottom panel (part E2) using wood dowels (part #10), barrel nuts (part #11), long bolts (part #4), spring washers (part #8), flat washers (part #9) and allen wrench (part #16).

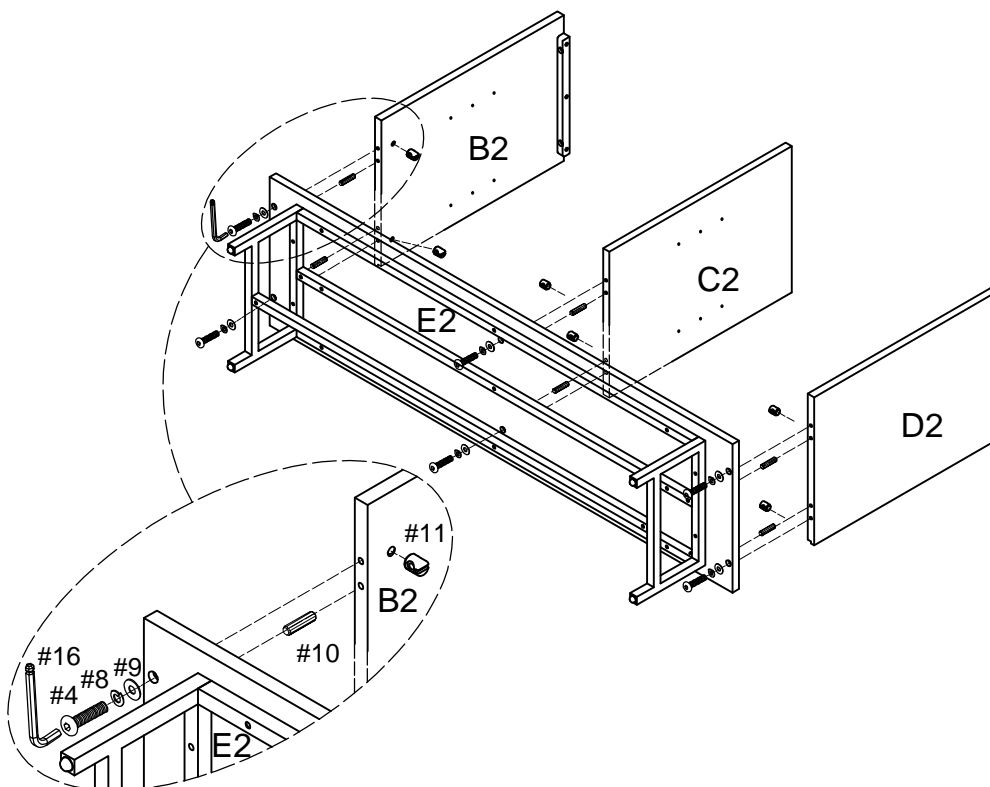


- |     |   |     |
|-----|---|-----|
| #4  |  | x 6 |
| #8  |  | x 6 |
| #9  |  | x 6 |
| #10 |  | x 6 |
| #11 |  | x 6 |
| #16 |  | x 1 |

 
Step 7. Attach top panel (part A2) to assembled unit (parts B2, C2 & D2) using wood dowels (part #10), round head bolts (part #5), spring washers (part #8), flat washers (part #9) and allen wrench (part #16).

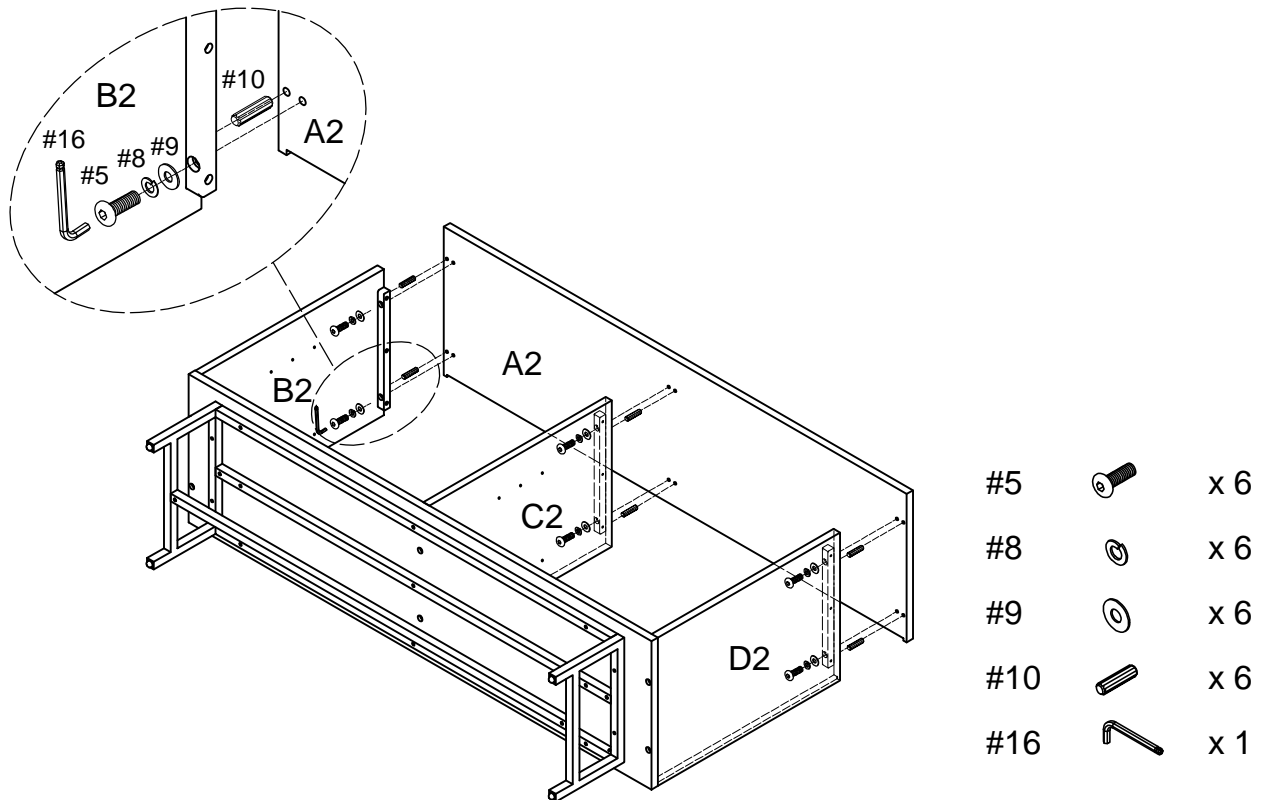

 Step 8. Attach back panels (parts I2 & J2) to assembled unit (parts A2, B2, C2, D2 & E2) using short screws (part #14) and phillips head screwdriver.

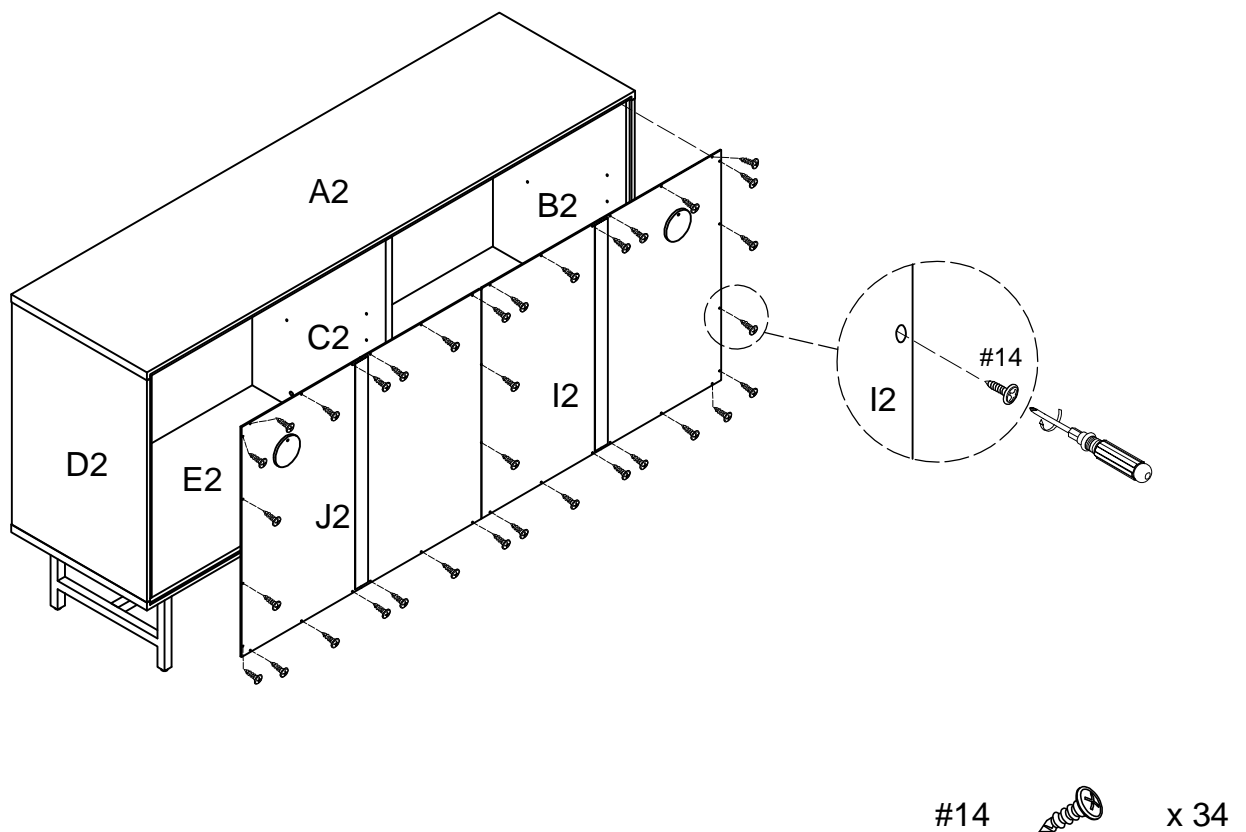

 Step 9. Insert shelf holders (part #3) and slide adjustable shelves (part F2) into place.

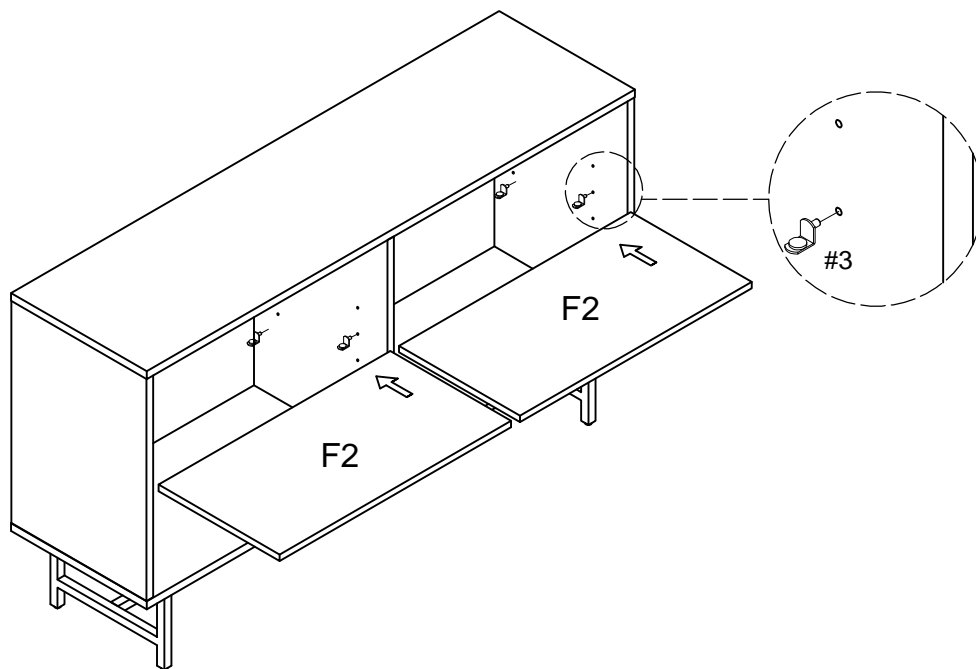


#3  x 8

Step 10. Attach doors (parts G2 & H2) by placing pin hinge (pre-installed in door) in the pre-drilled hole of bottom panel (part E2). Then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled hole of top panel (part A2).






 
NOTE: Be sure top and bottom pin hinges are fully extended to secure doors in place.

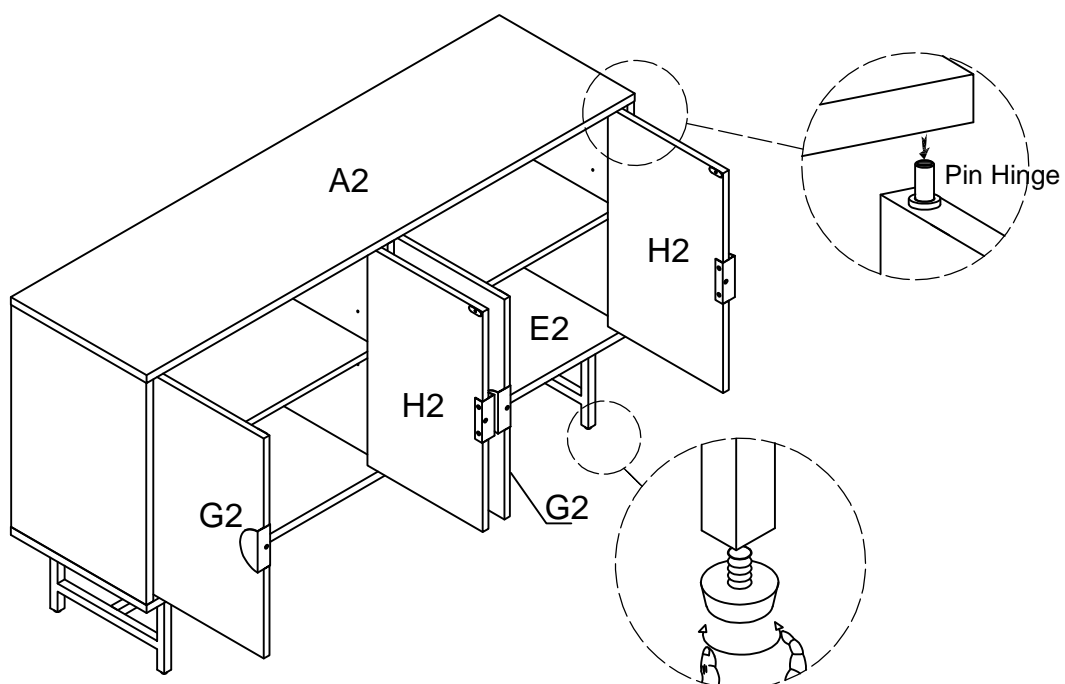NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

 Important: Safety strap kit (part #18) must be installed to prevent tipping damage and/or injury.

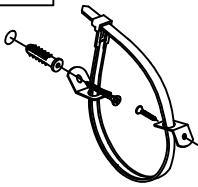




#18	A	B	C	D	E
					
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

## SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to top panel (part A) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

 Note: This item is not intended for clothing storage use.

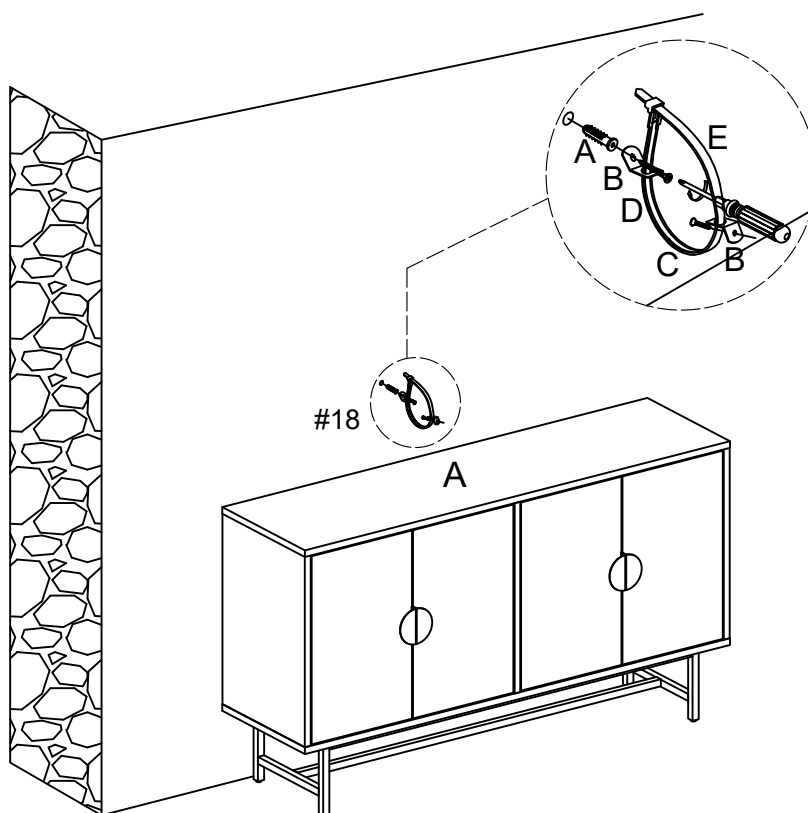

<b>▲ WARNING</b>	
	Children have died from furniture tipover. To reduce the risk of furniture tipover:
	<ul style="list-style-type: none"> <li>▪ ALWAYS install tipover restraint provided.</li> <li>▪ For use with televisions weighing 50lbs(23kg) or less. Use with heavier televisions may result in instability causing tip-over resulting in death or serious injury.</li> <li>▪ NEVER allow children to stand, climb or hang on drawers, doors, or shelves.</li> <li>▪ NEVER open more than one drawer at a time.</li> <li>▪ Place heaviest items in the lowest drawers.</li> </ul>
	<i>This is a permanent label. Do not remove!</i>