


WORLD MARKET®

Amended Instructions











Williams Hutch WD BR
SKU 635220

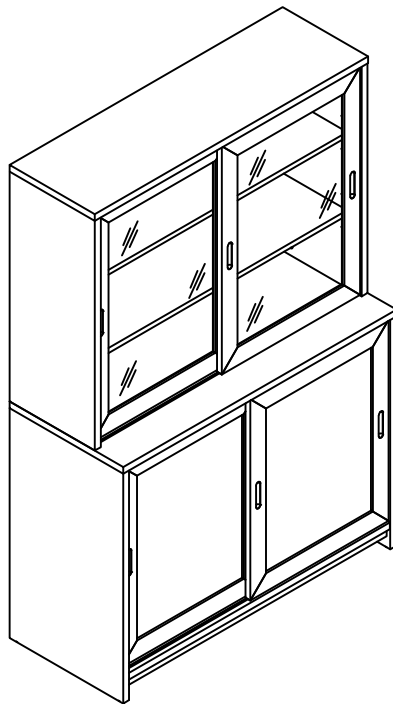











Thank you for your purchase. If you have any questions pertaining to the assembly of this furniture piece, please contact the nearest World Market store. If you are not near a store, please call our customer service call center toll free at 877-967-5362 for assistance.

ALL PRODUCTS SOLD AT WORLD MARKET ARE NOT
FOR COMMERCIAL USE AND ARE INTENDED FOR
RESIDENTIAL USE ONLY


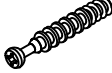
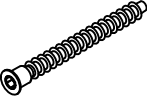

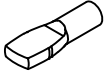


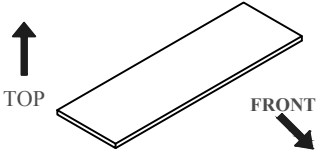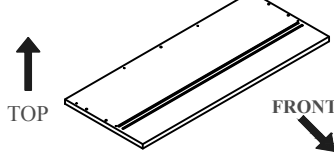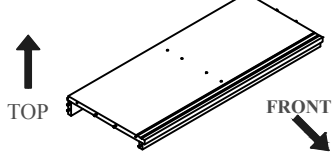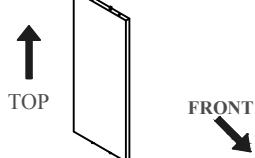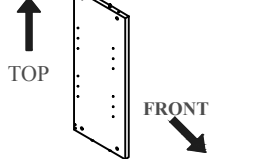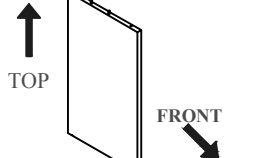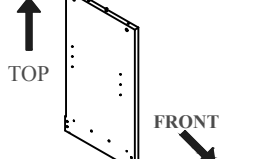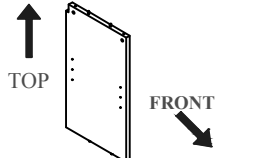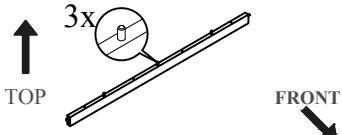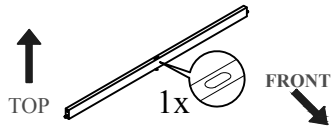
Component List

LABEL	PICTURE	DESCRIPTION	QTY.
A		Top Panel	1
B		Top-Middle Panel	1
C		Bottom Frame	1
D-1		Top Left Side Panel	1
D-2		Top Right Side Panel	1
E-1		Bottom Left Side Panel	1
E-2		Bottom Right Side Panel	1
F		Divider Frame	1
G		Top Back Rail	1
I		Upper Mid Back Rail	1

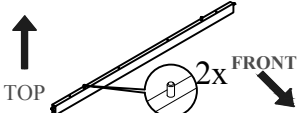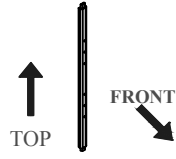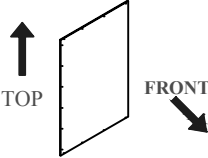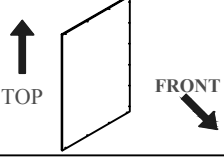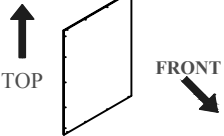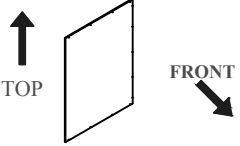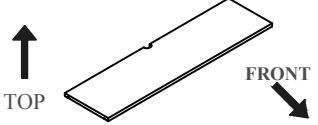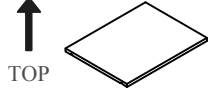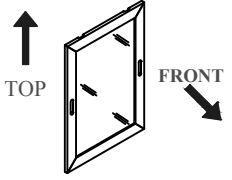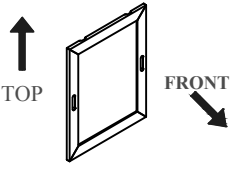
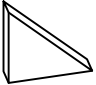
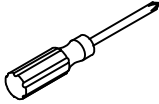
Component List

LABEL	PICTURE	DESCRIPTION	QTY.
J		Lower Mid Back Rail	1
K		Vertical Back Rail	1
L-1		Top Left Back Panel	1
L-2		Top Right Back Panel	1
M-1		Bottom Left Back Panel	1
M-2		Bottom Right Back Panel	1
N		Adjustable Long Shelf	2
P		Adjustable Short Shelf	2
Q		Upper Sliding Door (Tempered Glass)	2
R		Lower Sliding Door	2

Hardware List


LABEL	PICTURE	DESCRIPTION	QTY.
H-1		Cam lock Ø15 mm	26
H-2		Cam Screw	26
H-3		Connecting Screw M7 x 70 mm	2
H-4		Long Pan Head Screw M4 x 50 mm	8
H-5		Shelf Pin Ø6 x 26 x 3 mm	18
H-6		Short Pan Head Screw M3.5 x 15 mm	64
H-7		Flat Washer Ø6 x Ø19 x T2 mm	10
H-8		Anti Tip-kit	1

Tool List

LABEL	PICTURE	DESCRIPTION	QTY.
T-1		Allen Key 4 x 110 x 30 mm	1
T-2		Triangle	1
T-3		Phillips Screwdriver (Not Included)	1

Assembly Preparation

Before Beginning:

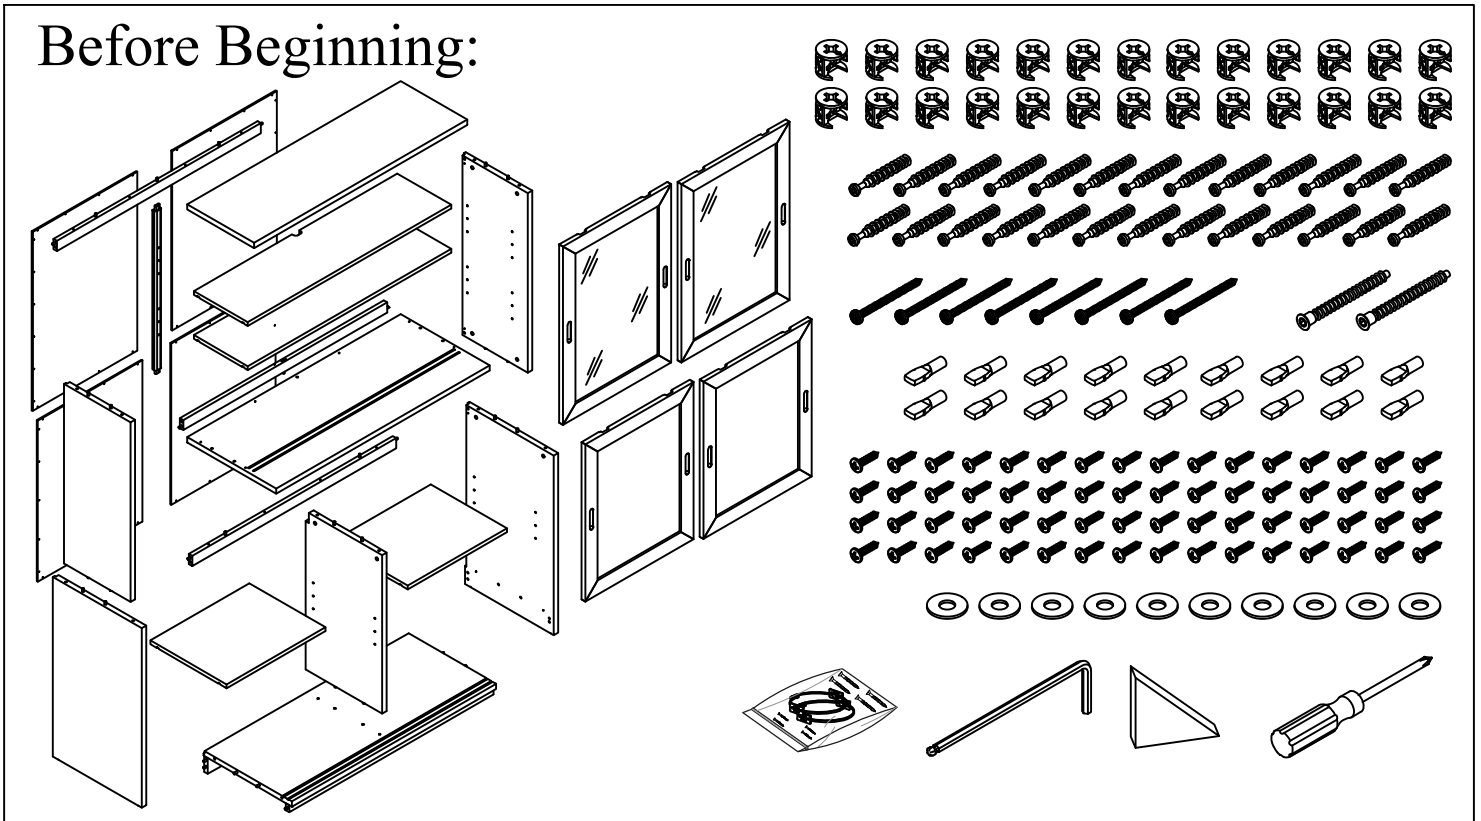

Unpack all hardware bags and components to ensure you have all parts. Take note of bolt hardware size differences and components that may have directional labels (Example: TOP or FRONT).



Depending on your furniture product, foam, packing dust, or residual film or finish may be present on the components. This is normal and can be wiped clean using a non-colored, lint-free dry cloth.




Read the assembly instructions, cover-to-cover. Save any **Care and Maintenance** instructions pages for after the assembly has been completed.




It is always recommended to have 2 adults on hand for assembly.



Do not assemble on hard, abrasive flooring or carpeted surfaces that can damage or get caught in the components during assembly.

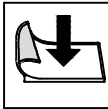

Assemble on a clean non-marring surface (such as the product's packing foam).

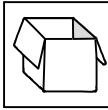

Do not discard any packaging until the product has been fully assembled.




In case of missing parts, please contact your nearest World Market store or call our customer service call center at 1-877-967-5362.






WARNING: Small parts are a choking hazard. Adult supervision is required before, during, and after assembly.

Assembly Steps


Step 1.1 & 1.2

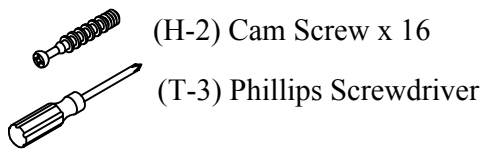

Step 1.1:

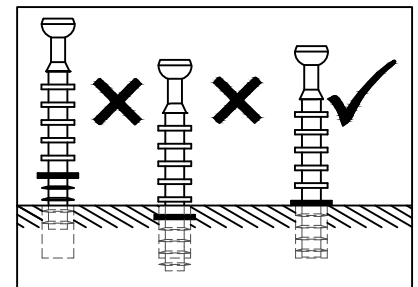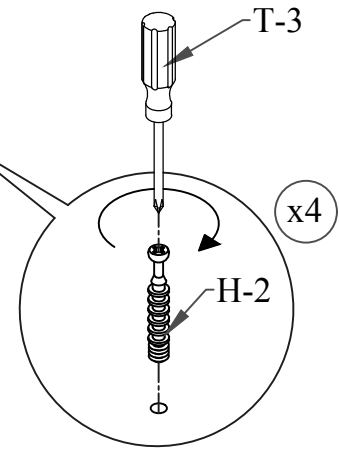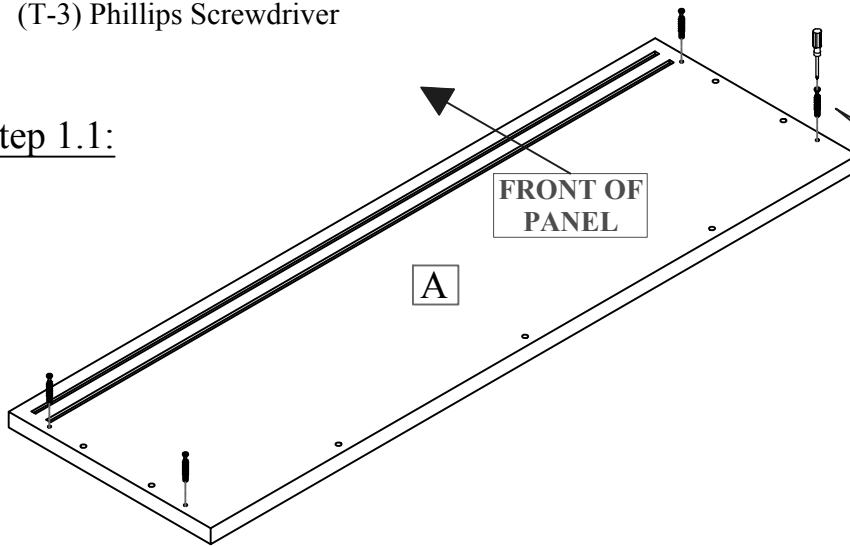

Step 1.2:

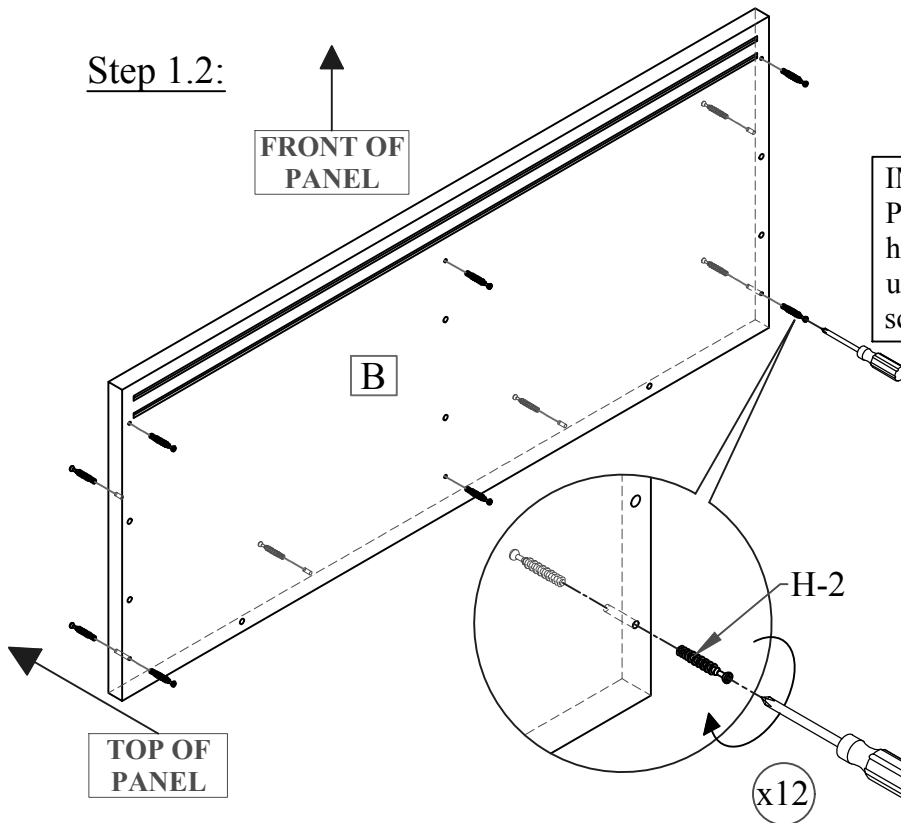

IMPORTANT:
Please make note of the different hardware sizes and ensure you are using the correct size hardware (bolts, screws, and washers) for each step.


Step 1.1: Place Top Panel (A) upside down onto a padded, non-marring surface. Install Cam Screws (H-2) into the pre-drilled holes on Top Panel (A) as shown. Fully tighten using a Phillips Screwdriver (T-3, not included) per illustration above. **DO NOT UNDER OR OVER TIGHTEN.**

Step 1.2: Place Top-Middle Panel (B) upside down onto a padded, non-marring surface. Install Cam Screws (H-2) into the pre-drilled holes on Top-Middle Panel (B) as shown. Fully tighten using a Phillips Screwdriver (T-3, not included) per illustration above. **DO NOT UNDER OR OVER TIGHTEN.**


Step 1.3 & 1.4

- (H-2) Cam Screw x 10
- (T-3) Phillips Screwdriver


Step 1.3:

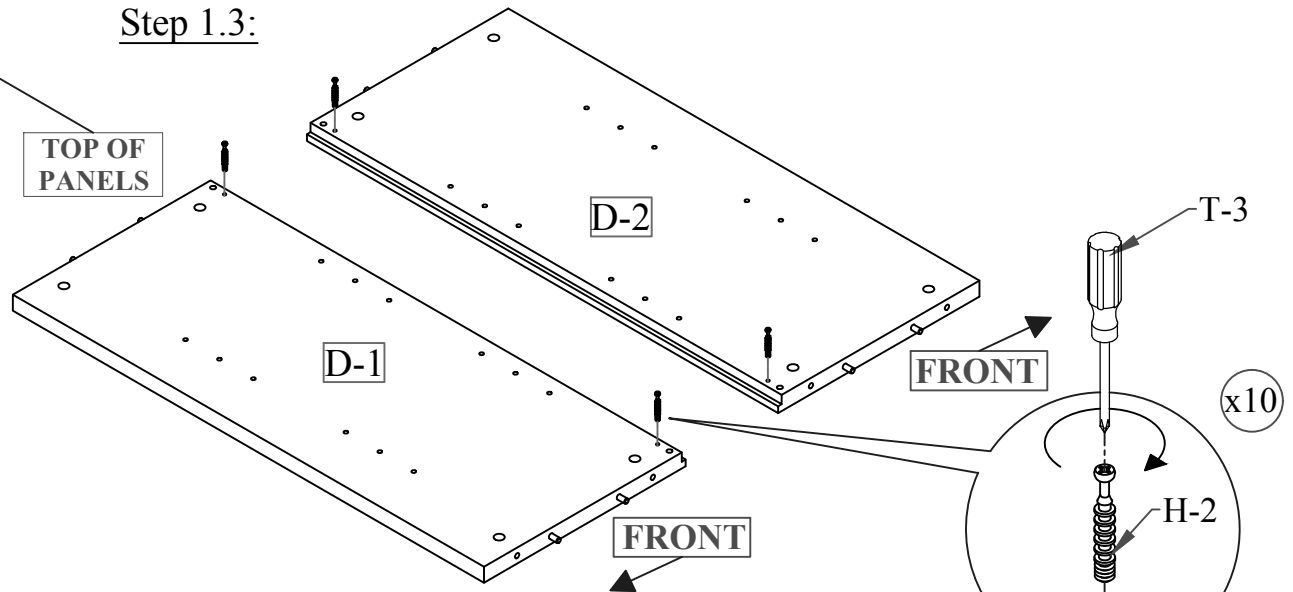

Step 1.4:

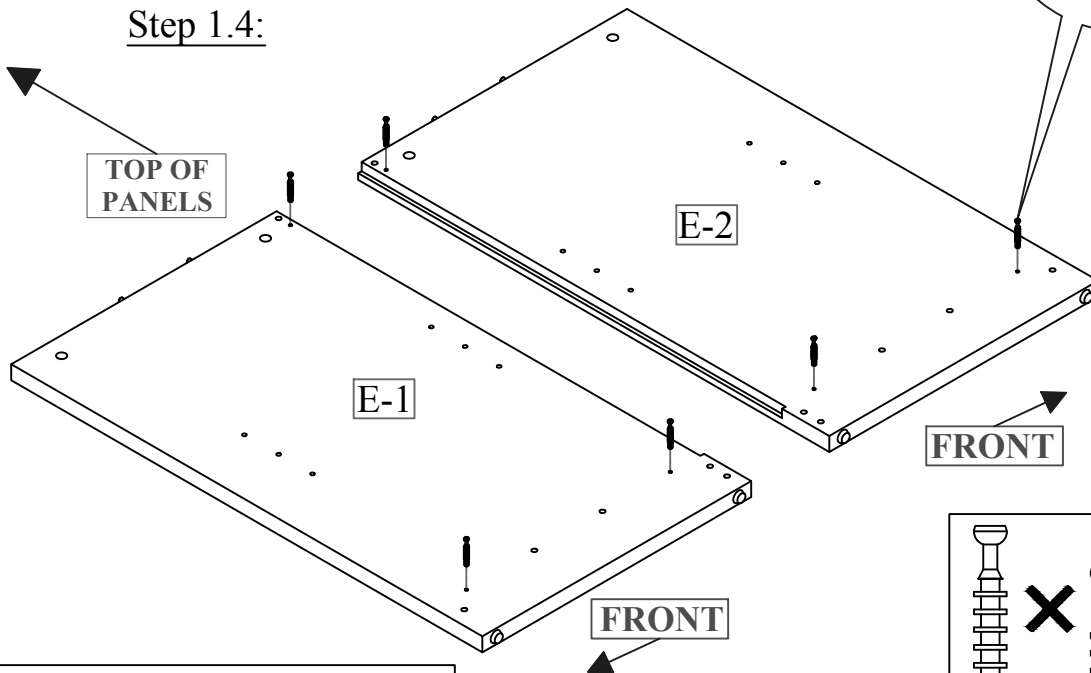

IMPORTANT:
Please make note of the different hardware sizes and ensure you are using the correct size hardware (bolts, screws, and washers) for each step.

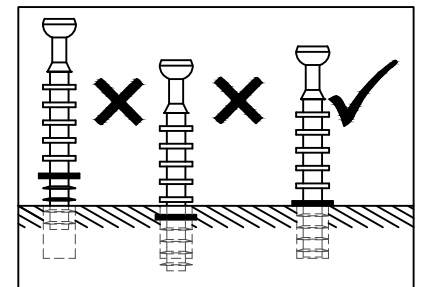


Make sure Cam Screws are tightened fully as shown

Step 1.3: Place Top Left Side Panel (D-1) and Top Right Side Panel (D-2) upside down onto a padded, non-marring surface. Install Cam Screws (H-2) into the pre-drilled holes on Top Left Side Panel (D-1) and Top Right Side Panel (D-2) as shown. Fully tighten using a Phillips Screwdriver (T-3, not included) per illustration above. **DO NOT UNDER OR OVER TIGHTEN.**


Step 1.4: Place Bottom Left Side Panel (E-1) and Bottom Right Side Panel (E-2) upside down onto a padded, non-marring surface. Install Cam Screws (H-2) into the pre-drilled holes on Bottom Left Side Panel (E-1) and Bottom Right Side Panel (E-2) as shown. Fully tighten using a Phillips Screwdriver (T-3, not included) per illustration above. **DO NOT UNDER OR OVER TIGHTEN.**

Step 2

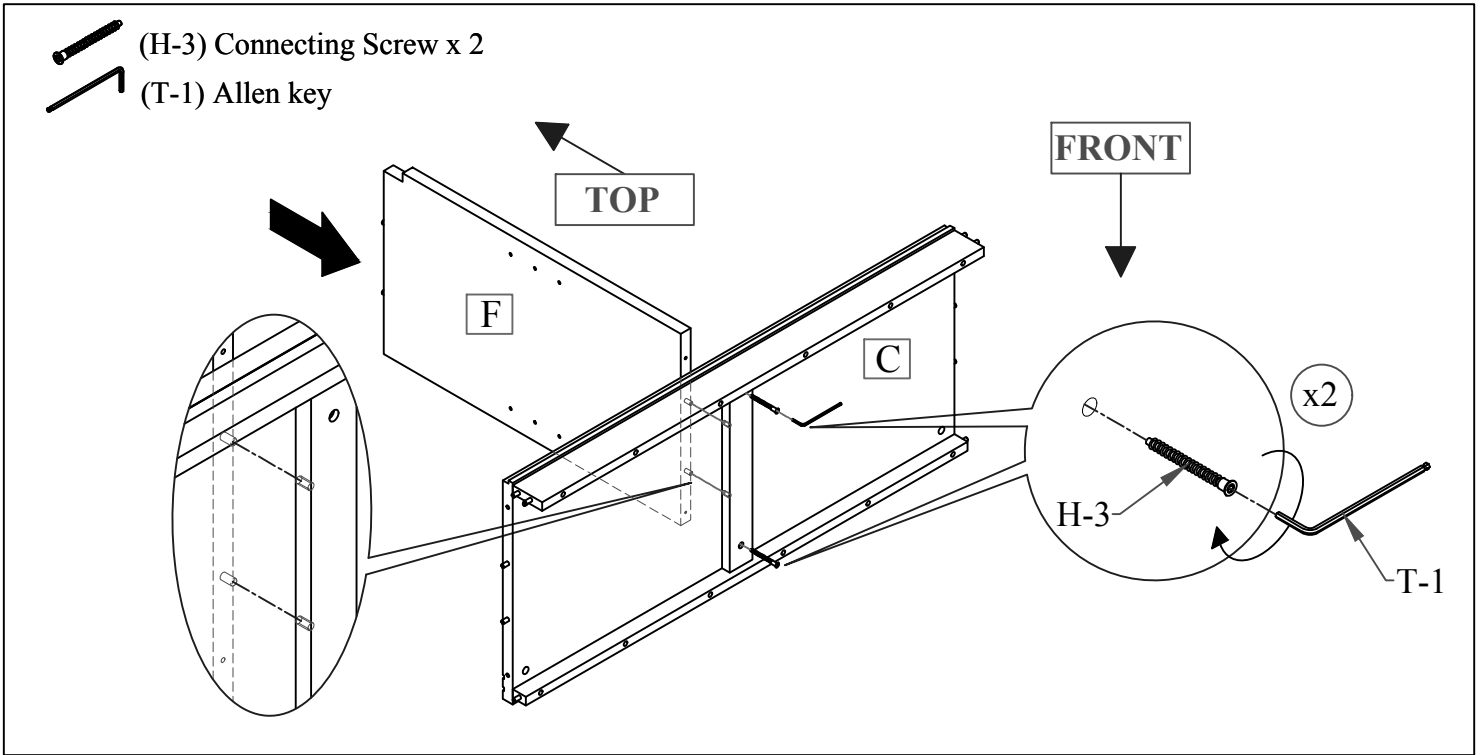


Using a second person to assist you, install and secure Bottom Frame (C) to Divider Frame (F) with Connecting Screws (H-3) using the provided Allen Key (T-1). Do not over-tighten.

Step 3.1

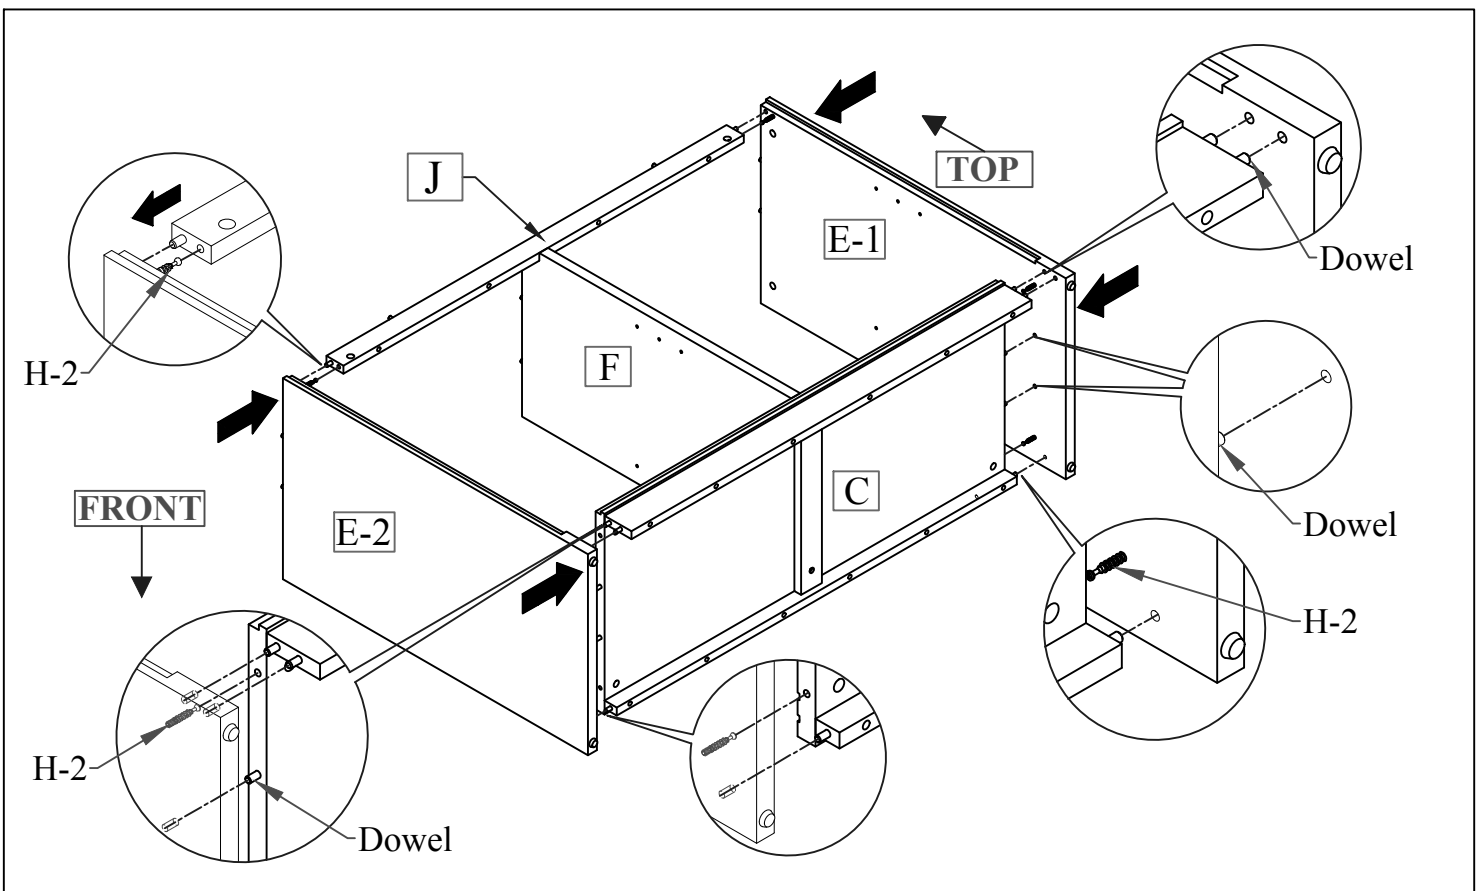


Using a second person to assist you, attach Lower Mid Back Rail (J) and Bottom Frame (C) to Bottom Left Side Panel (E-1) and Bottom Right Side Panel (E-2) by inserting pre-installed Cam Screws (H-2) and dowels as shown. NOTE: the orientation of each component.

Step 3.2

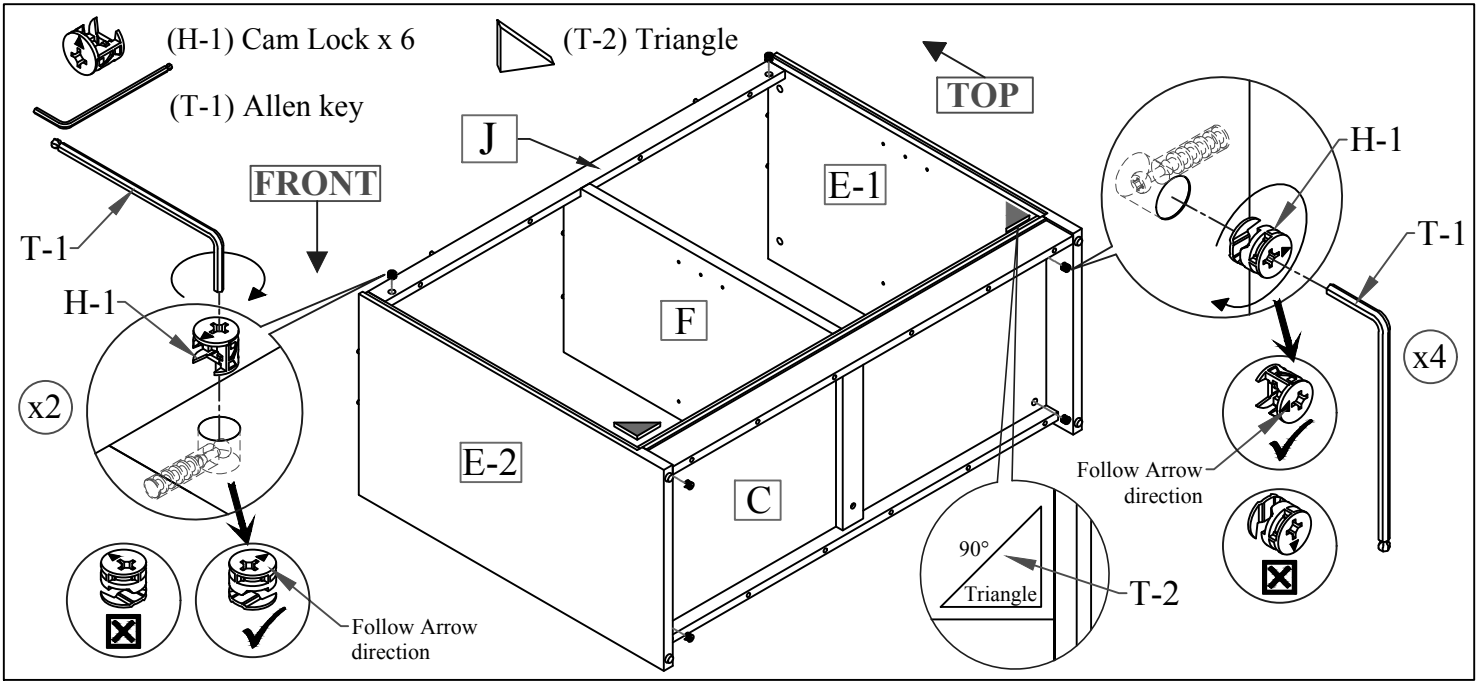


Install Cam Locks (H-1) into the corresponding holes along Bottom Frame (C) and Lower Mid Back Rail (J) as illustrated. Make sure arrows on Cam Locks (H-1) point to the screw upon insertion. Secure Cam Lock (H-1) using Allen Key (T-1), turning them clockwise until they are snug. **DO NOT OVER TIGHTEN** the Cam Lock. Use the provided 90° Triangle (T-2) and adjust the corners to make sure the cabinet is square.

Step 4

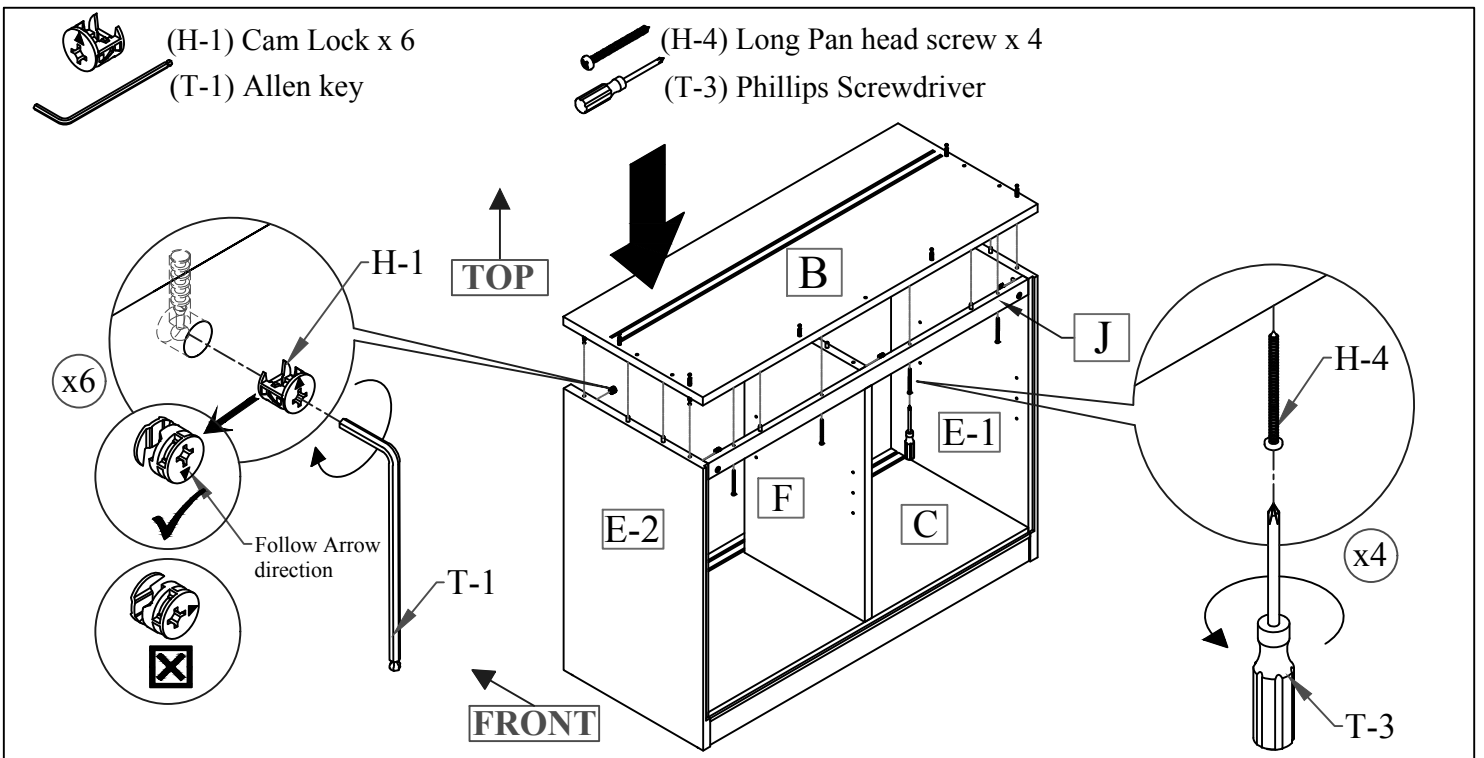


Using a second person to assist you, carefully turn assembly block upright and position Top-Middle Panel (B) to Bottom frame assembly from step 3.2 by inserting pre-installed Cam Screws (H-2) and dowels as shown. Install Cam Locks (H-1) into the corresponding holes along Bottom Left/ Right Side Panel (E-1/ E-2) and Divider Frame (F) as illustrated. Make sure arrows on Cam Locks (H-1) point to the screw upon insertion. Secure Cam Lock (H-1) using Allen Key (T-1), turning them clockwise until they are snug. **DO NOT OVER TIGHTEN** the Cam Lock. Secure Lower Mid Back Rail (J) to Top-Middle Panel (B) with Long Pan Head Screw (H-4) first by hand, then fully tightening using Phillips Screwdriver (T-3, not included). **DO NOT OVER TIGHTEN.**

Step 5.1

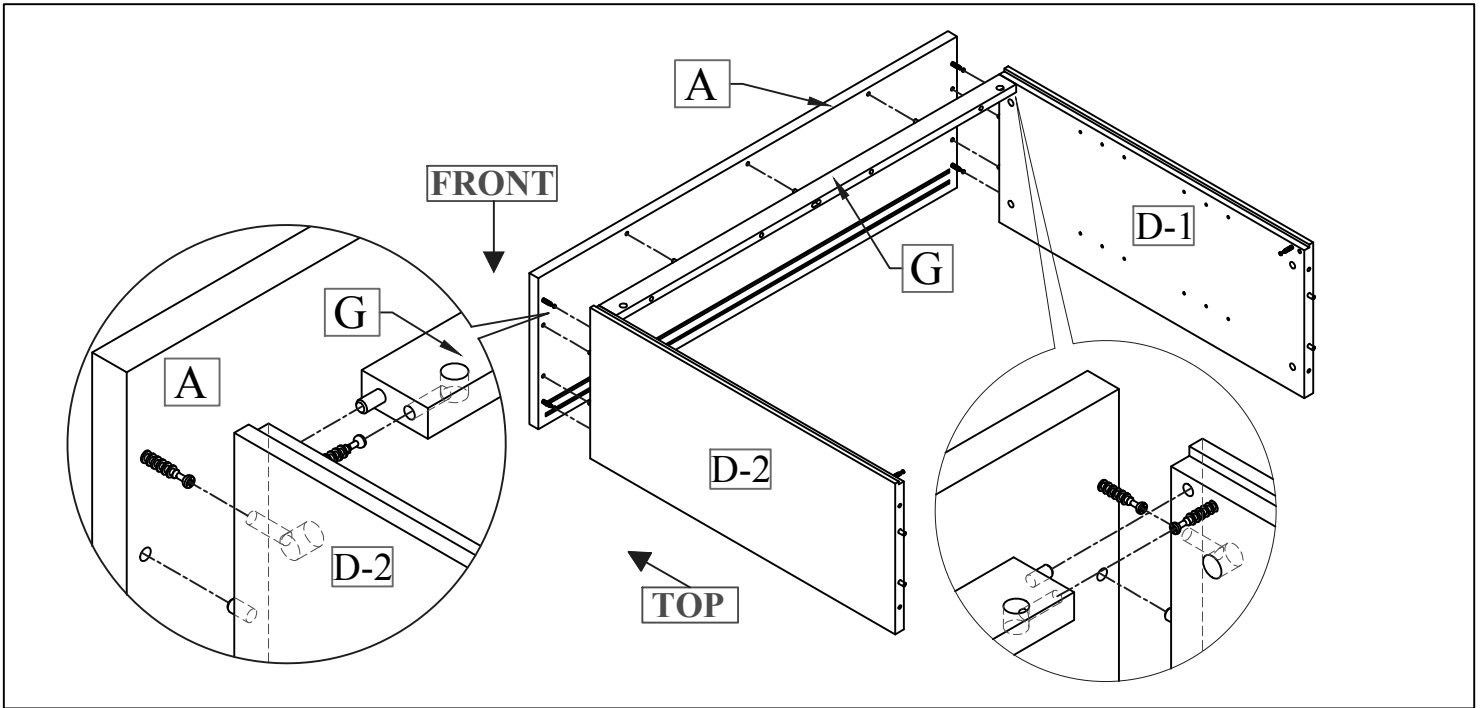

Using a second person to assist you, carefully insert the Top Back Rail (G) into the Top Left Side Panel (D-1) and Top Right Side Panel (D-2) by inserting the dowels and pre installed Cam Screws (H-2) into the receiving holes **IMPORTANT:** One person should hold the Top Left/Right Side Panels (D-1/D-2) while preparing for the next step to avoid the assembly collapsing and causing breakage. Carefully position the Top Panel (A) onto the assembly by inserting the dowels and pre installed Cam Screws (H-2) into the receiving holes. Once Top Panel (A) has been placed, this pre-assembly will be stable on its own


Step 5.2

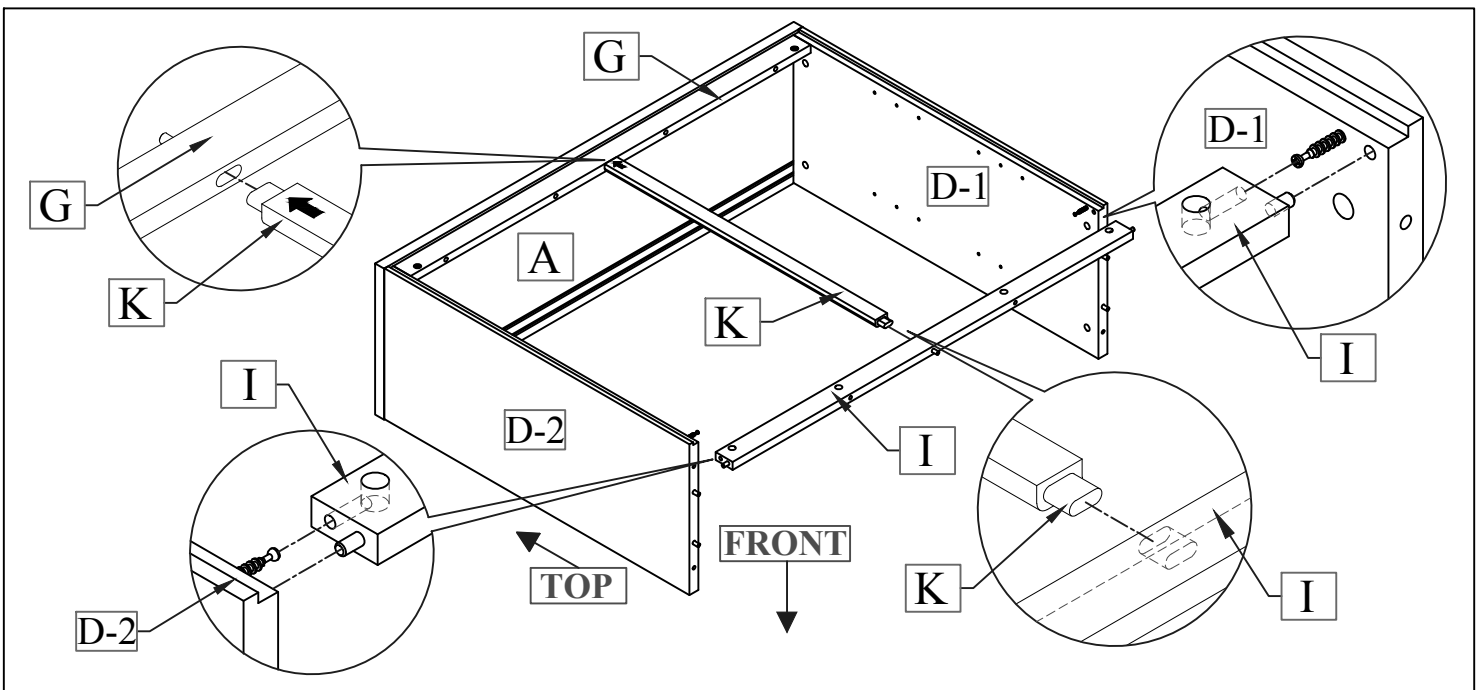

Note the orientation of each component in this step. Position the TOP of the Back Vertical Rail (K) into the corresponding holes in the Top Back Rail (G). While holding the Back Vertical Rail (K), insert the BOTTOM of the Back Vertical Rail (K) into the corresponding holes in the Upper Mid Back Rail (I). Ensure the holes of the Upper Mid Back Rail (I) facing upward. Position the Top Left/Right Side Panels (D-1/D-2) with the Upper Mid Back Rail (I) by inserting the dowels and pre installed Cam Screws (H-2).


NOTE: When assembling the Upper Mid Back Rail (I), insert one end into the Top Left Side Panel (D-1) first, then gently move the Top Right Side Panel (D-2) outward to complete this step.

Step 6

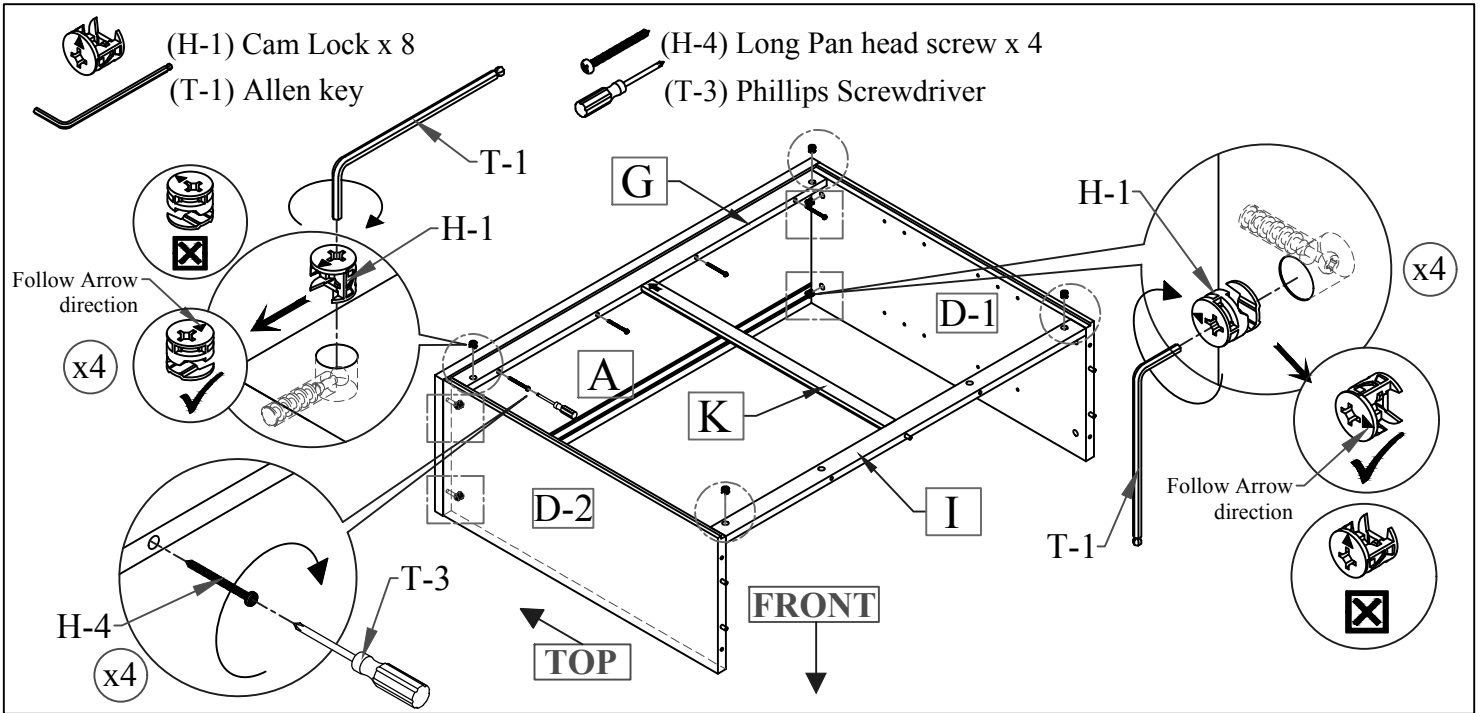


There are a total of 8 Cam Locks (H-1) to install (see illustration above). Insert each Cam Lock (H-1) into its corresponding hole, ensuring the arrow mark on the Cam Lock (H-1) points towards the Cam Screw (H-2). Press the Cam Lock (H-1) all the way into the hole then tighten it by turning the Allen Key (T-1) clockwise until the Cam Lock (H-1) is snug. Do not over tighten the Cam Locks (H-1). Secure Top Back Rail (G) to Top Panel (A) using Long Pan Head Screw (H-4) first by hand, then fully tightening using Phillips Screwdriver (T-3, not included). Do not over tighten.

Step 7

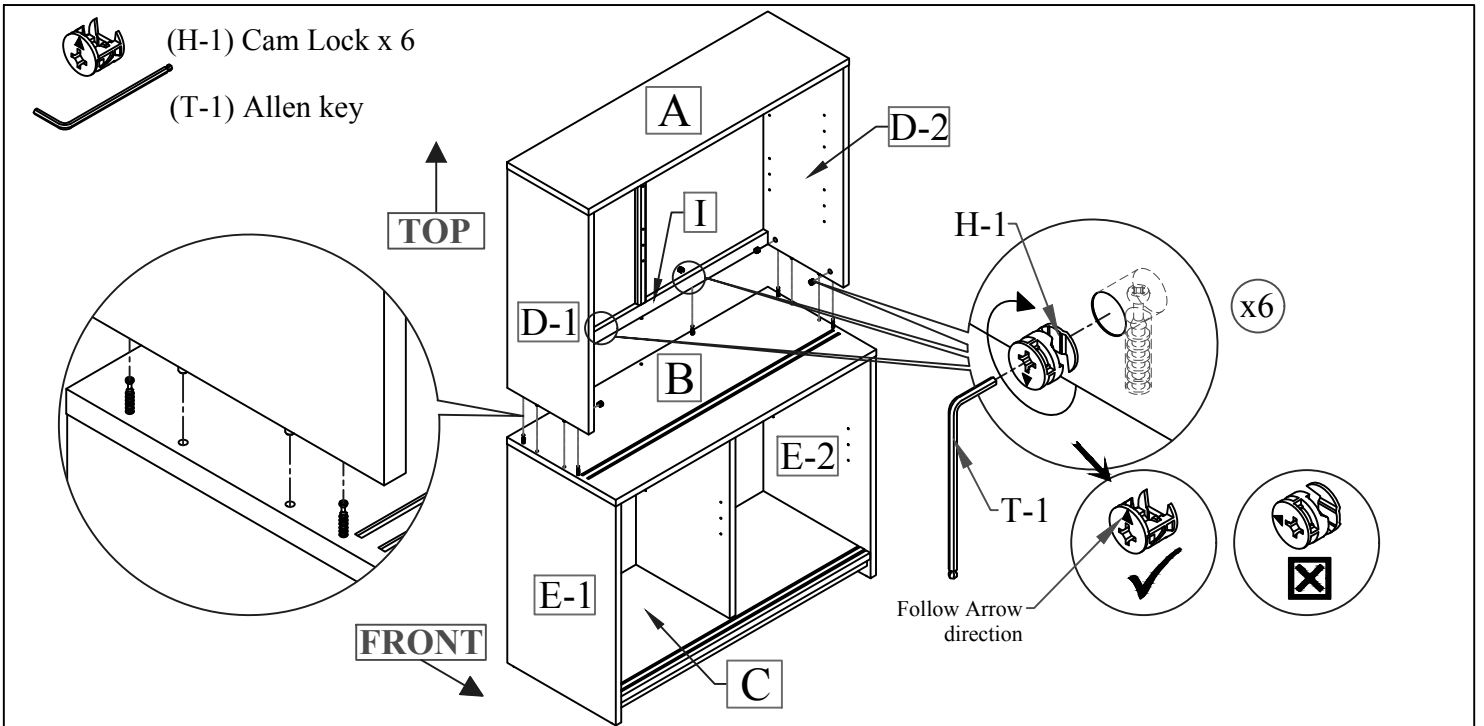


Using a second person to assist you, carefully turn both assemblies upright. Carefully attach the upper assembly (from step 6) above the lower assembly (from step 4) by inserting pre-installed Cam Screws (H-2) and dowels as shown. Insert Cam Locks (H-1) into the Top Left/ Right Side Panel (D-1/D-2) and Upper Mid Back Rail (I) following the orientation directions above. The arrow on the Cam Lock (H-1) must point towards the Cam Screw (H-2) when first inserting the Cam Lock (H-1). Once confirmed, fully tighten all Cam Locks (H-1) by turning clockwise using Allen Key (T-1) until they are snug. DO NOT over tighten Cam Locks.

Step 8

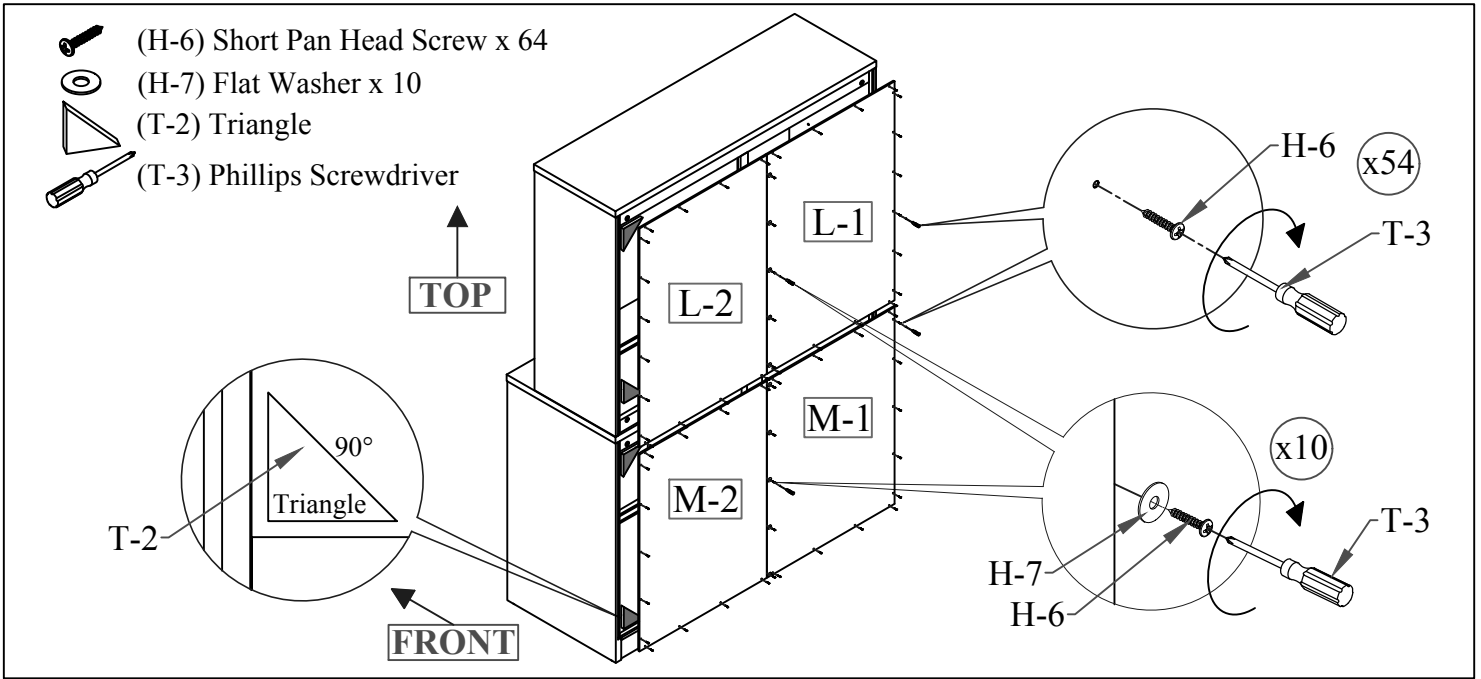

Check that the cabinet is square (90 degrees) using Triangle (T-2). Once square, position Top Left/Right Back Panel (L-1/L-2) and Bottom Left/ Right Back Panel (M-1/M-2) onto assembly as shown. Make sure both panels are oriented correctly. Secure around the perimeter of the cabinet with Short Pan Head Screws (H-6) using Phillips Screwdriver (T-3; not included). DO NOT over tighten. Secure the middle of the Top Left/Right Back Panel (L-1/L-2) and Bottom Left/ Right Back Panel (M-1/M-2) to the back of the assembly with Short Pan Head Screws (H-6) and Flat Washers (H-7) using Phillips Screwdriver (T-3; not included), stacking the hardware in the order as shown. DO NOT over tighten.


Step 9

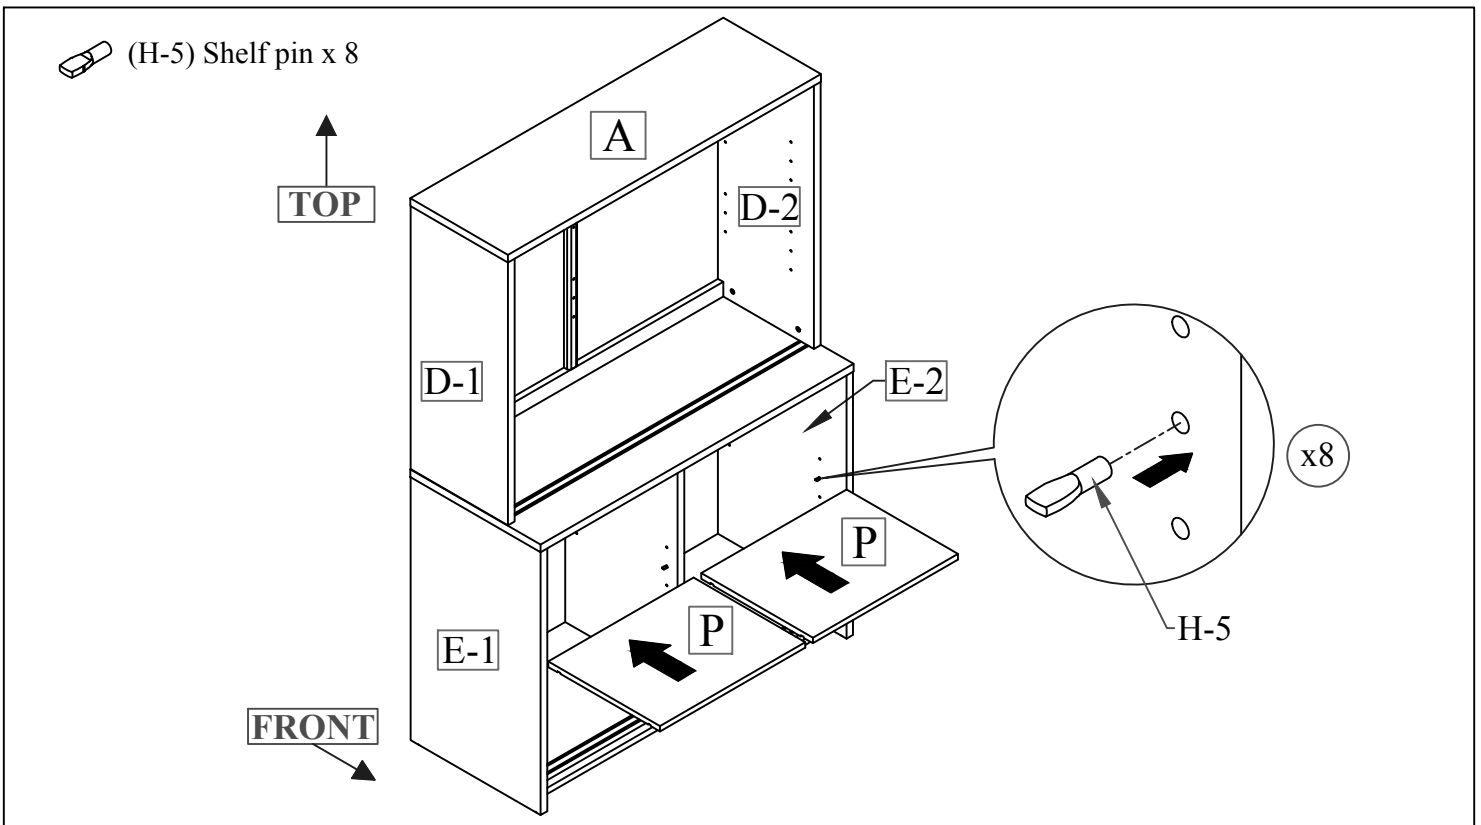

Insert Shelf Pins (H-5) into the desired hole locations on Bottom Left Side Frame (E-1) and Bottom Right Side Frame (E-2). Turn Adjustable Short Shelf (P) diagonally and carefully insert into position as shown, making sure they rest evenly on each Shelf Pin (H-5).

Step 10


 (H-5) Shelf pin x 10

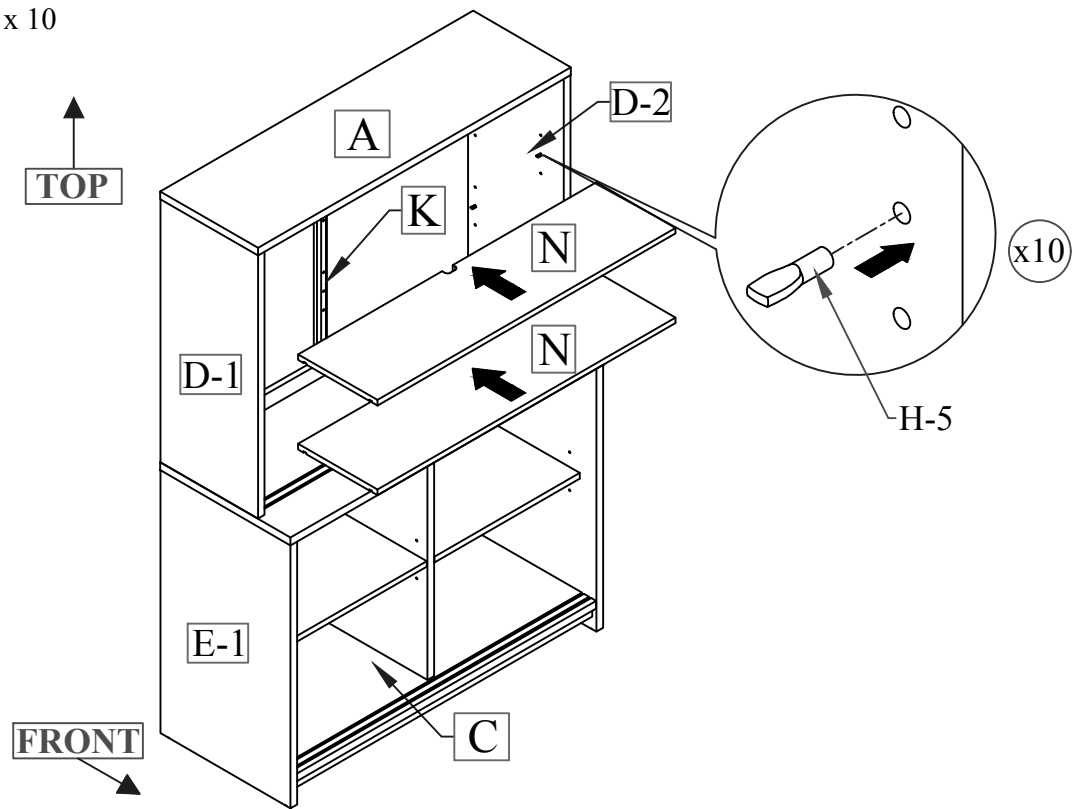


Insert Shelf Pins (H-5) into the desired hole locations on Top Left Side Frame (D-1), Top Right Side Frame (D-2) and Back Vertical Rail (K). Turn Adjustable Long Shelf (N) diagonally and carefully insert into position as shown, making sure they rest evenly on each Shelf Pin (H-5). The cut out in each Shelf should be toward the back.

Step 11

Step 11.2b


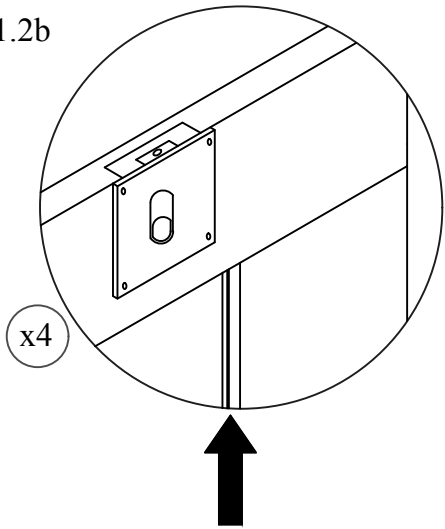


Step 11.2a

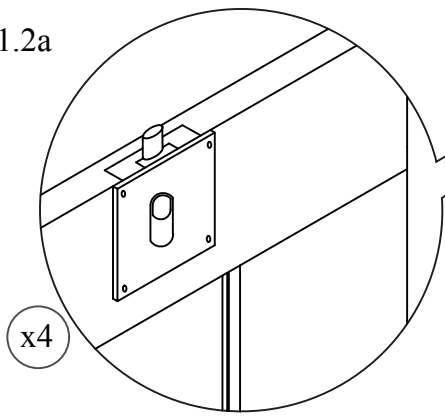

T-3

Step 11.1

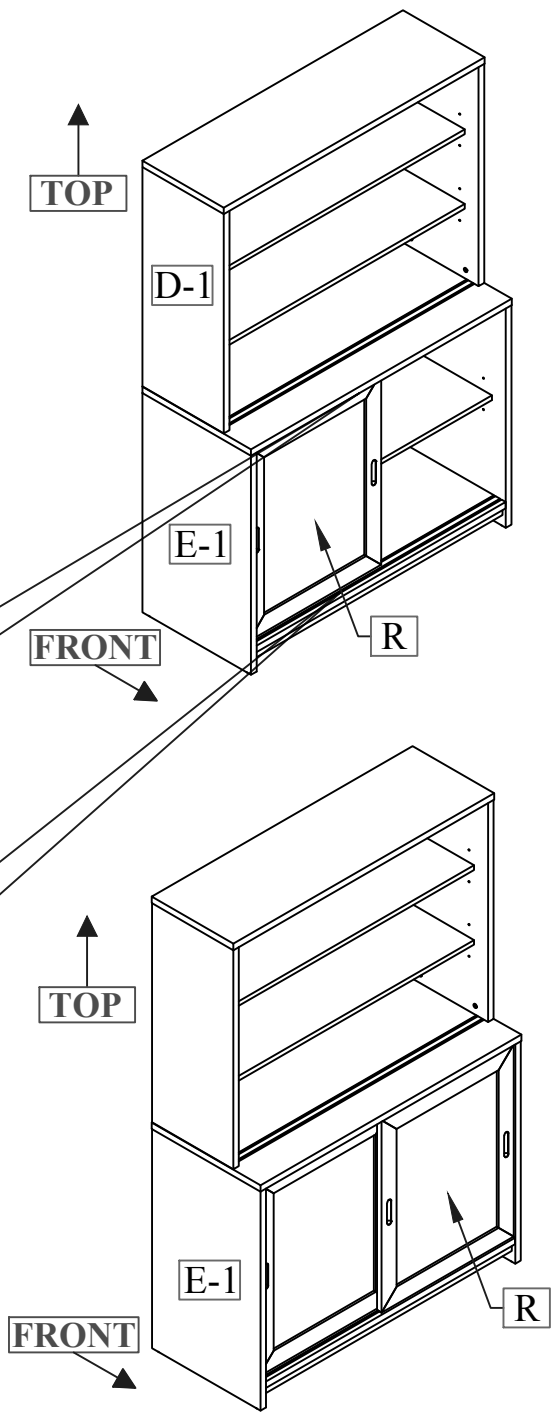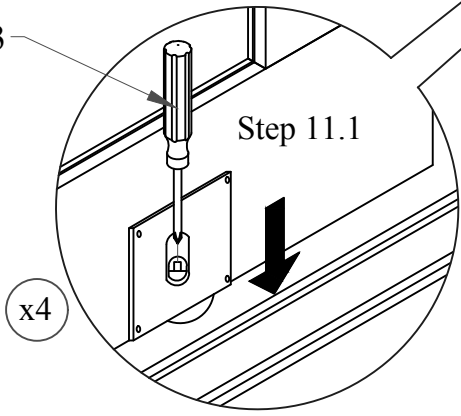


NOTE: There are adjustment screws on the lower wheels as illustrated above. Turn the set screw counter-clockwise to adjust the wheels INWARD which will decrease the gap between the bottom track and the bottom of the door. Adjust the set screw clockwise to adjust the wheels OUTWARD which will increase the gap between the bottom track and the bottom of the door. If the Sliding Doors seem too small, use this adjustment technique to properly fit and align doors.


Step 11.1: Insert the bottom wheel of 1 Lower Sliding Door (R) into the inner groove of the Bottom Frame (B).
Step 11.2a: Push and lock the button located above the latch at the top of the Lower Sliding Door (R) in place.
Step 11.2b: Position the Lower Sliding Door (R) into the top track and release the latch button to the inner track.
Repeat the same steps to install the other Lower Sliding Door (R) in outer tracks.

Step 12

Step 12.2b



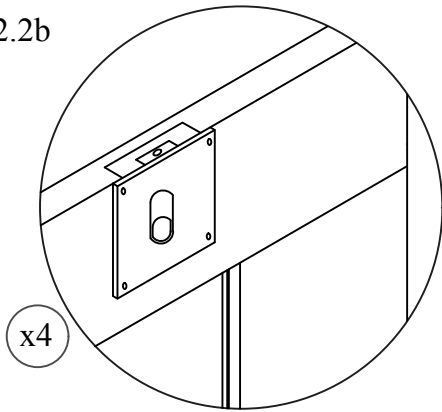


Step 12.2a

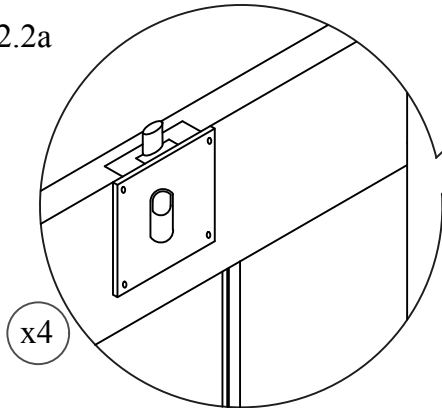

T-3



Step 12.1

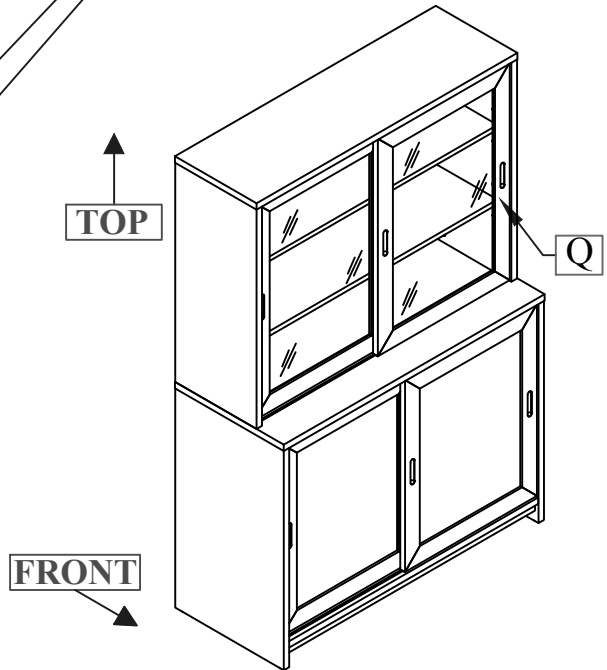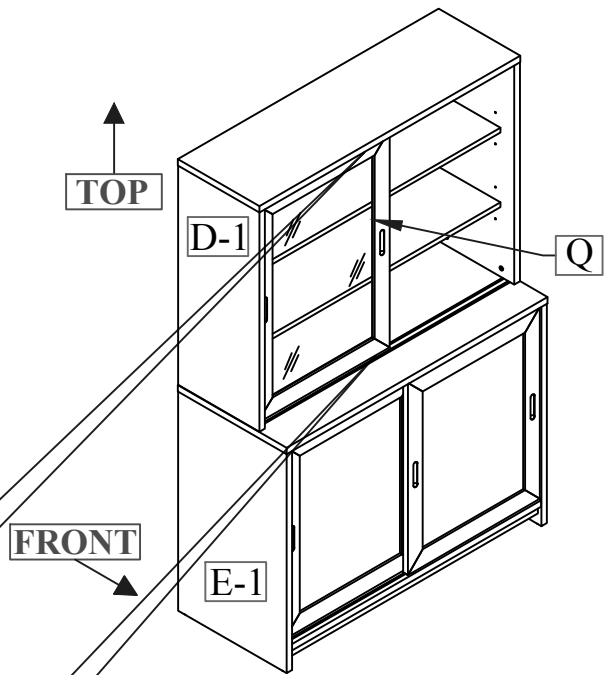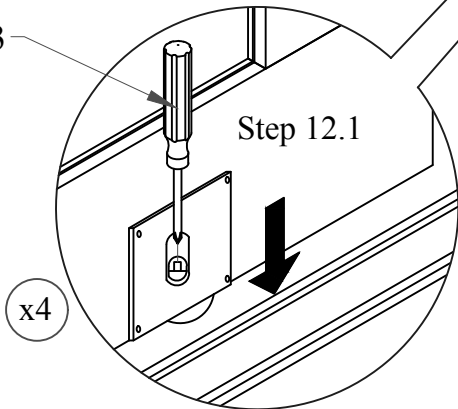

NOTE: There are adjustment screws on the lower wheels as illustrated above. Turn the set screw counter-clockwise to adjust the wheels INWARD which will decrease the gap between the bottom track and the bottom of the door. Adjust the set screw clockwise to adjust the wheels OUTWARD which will increase the gap between the bottom track and the bottom of the door. If the Sliding Doors seem too small, use this adjustment technique to properly fit and align doors.


Step 12.1: Insert the bottom wheel of 1 Upper Sliding Door (Q) into the inner groove of the Top-Middle Panel (B).
Step 12.2a: Push and lock the button located above the latch at the top of the Upper Sliding Door (Q) in place.
Step 12.2b: Position the Upper Sliding Door (Q) into the top track and release the latch button to the inner track.
Repeat the same steps to install the other Upper Sliding Door (Q) in outer tracks.

Step 13: Leveling Instruction

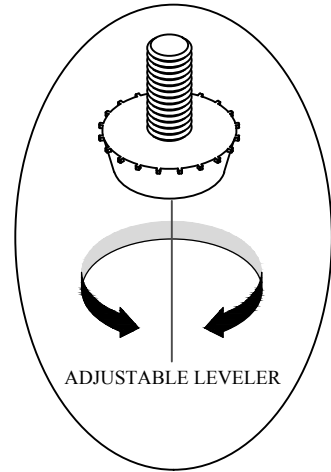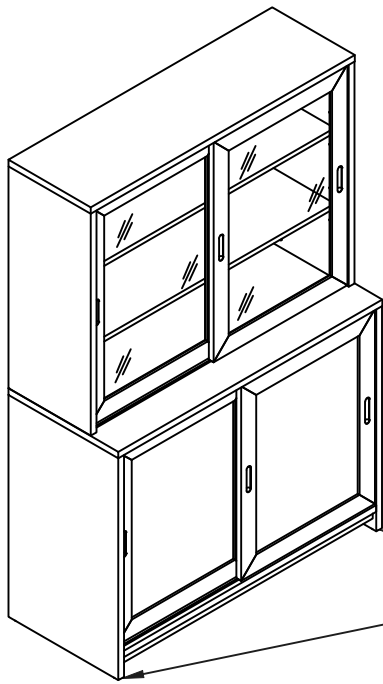


NOTE: Levelers can be used for adjustment if needed.


If RIGHT DOOR appears higher than the LEFT DOOR

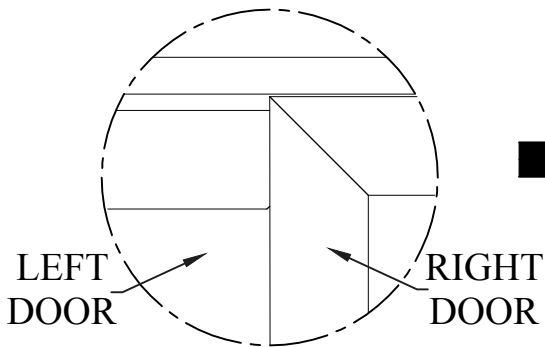


Adjust the FRONT LEFT leveler until doors are even.

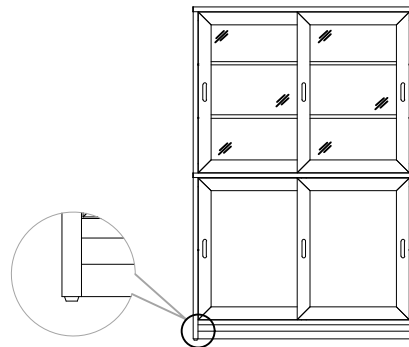

If LEFT DOOR appears higher than the RIGHT DOOR

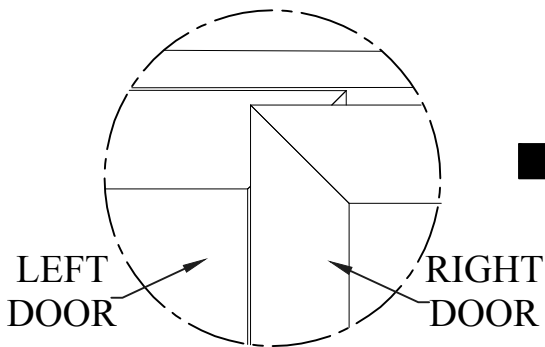

Adjust the FRONT RIGHT leveler until doors are even.

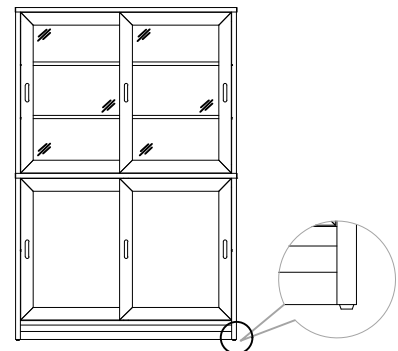

Ensure that all hardware have been fully tightened. Assembly is now complete and the product is ready for use.


* Note: Once the cabinet is assembled and is level and square, the adjustable levelers can be used for further adjustment. First make sure all levelers rest evenly on the floor. If the RIGHT DOOR appears higher than the left door, adjust the LEFT FRONT leveler until the doors align. Adjust the RIGHT FRONT leveler if the LEFT DOOR is higher.

NOTE: Hardware may loosen over time. Periodically check that all connections remain tight and adjust as needed.


Anti-Tip Measures

! WARNING

Furniture tip overs can result in death or serious injuries. To reduce the likelihood of tip over, this product should be used with the enclosed Anti-Tip Kit. This Anti-Tip Kit is only a deterrent. It is not a substitute for proper adult supervision. Manufacturer and retailer assume no liability for improper installation or excess loads placed on screws, brackets, or straps. When properly installed, this restraint provides protection against unexpected tipping of furniture. This Anti-Tip Kit **MUST** be installed into the wall using proper mounting hardware **OR** into a wall stud using appropriate screws. Position of the Anti-Tip Kit depends on the product and the location of the wall studs. The hardware provided is not a comprehensive solution for all wall types. Be sure to consult a professional or your local hardware store to determine the hardware needed for your specific wall type (plaster, drywall, concrete, etc.).

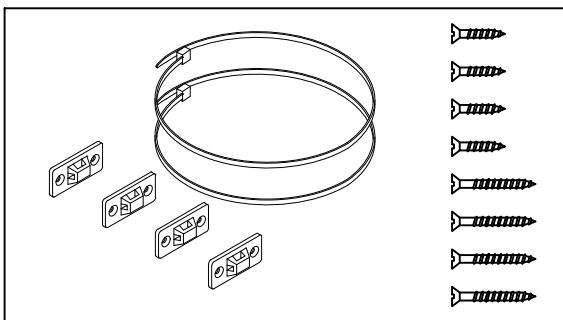

Anti-Tip kit contents

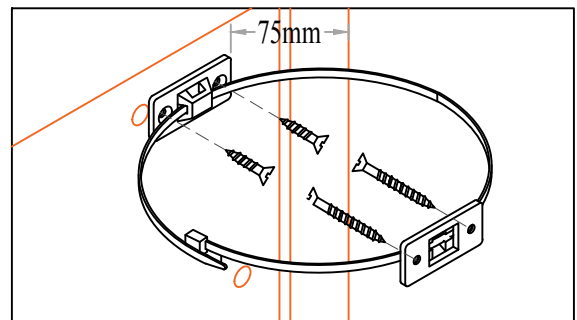

Anti-Tip kit installation

Using a second person to assist you, place the unit in the desired final location against a wall. It is suggested to use a stud finder to find wall studs along the length of the unit and roughly 1 inch below the top. Where possible, mark a drill hole position on the wall where there is a stud and use a Drill or Screwdriver (NOT INCLUDED) to attach Wall Brackets to the wall using Long Screws in the location of the wall studs.

In a case where there is no wall stud, hold Brackets on wall and mark the drill hole positions so that they are roughly 1 inch below the top of the piece. Using a Drill (NOT INCLUDED) with a drill bit roughly the diameter of the plastic Wall Plugs, drill pilot holes in marked positions. Insert the plastic Wall Plugs into the holes until the tops are roughly flush with the wall. Align the holes and insert the Long Screws through Brackets and into the corresponding holes in the wall using a Phillips Head Screwdriver (NOT INCLUDED).

Next, attach remaining 2 Brackets to the back of the piece using Short Screws so they align with Brackets installed on the wall. Loop Straps through Brackets (A) on the furniture piece, then through Brackets on the wall and tighten until snug. Installation is now complete.

IMPORTANT: Check that the Wall Brackets are firmly screwed into the wall and the Cable Ties are snug.

If there is any hesitation, please consult a professional or your local hardware store.

Warnings

⚠ WARNING



Children have died from furniture tip over. To reduce the risk of furniture tip over:

- **ALWAYS** install Anti-Tip device provided.
- **NEVER** put a TV on this product.
- **NEVER** allow children to stand, climb or hang on any drawers, doors or shelves.
- **NEVER** open more than one drawer at a time.
- **DO NOT** defeat or remove any drawer interlock system if included with the product; it is an important stability and safety system.
- **Place heaviest items in the lowest drawers.**



Not intended for clothing storage use.



All products sold at World Market are not for commercial use and are intended for residential use only.



WARNING: Small parts are a choking hazard. Adult supervision is required before, during and after assembly.


Care & Maintenance



DO NOT put hot items directly on furniture surface.



DO NOT clean furniture with harsh cleansers or polish.

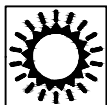

DO NOT place furniture in direct sunlight.



DO NOT place furniture near heating or cooling vents.



DO NOT write on furniture without a padded barrier to protect the surface.



DO NOT place furniture outside. For **INDOOR USE ONLY**.



Dust and pick up spills using a clean, non-colored, lint-free dry cloth.

WORLD MARKET LIMITED ONE-YEAR WARRANTY – Indoor Furniture

For your customer satisfaction, this product carries a LIMITED ONE-YEAR WARRANTY from the date of delivery. This limited warranty only applies to World Market brand furniture, and not to other furniture brands sold on World Market's website.

Where applicable, the limited warranty provides coverage for:

1. **Manufacturing, Material and Workmanship Defects:** Includes defects related to core frame/structure substrates (wood and metal); cracking, splitting, or complete breakage of hardwood, plywood or medium density fiberboard (MDF); cracking, splitting or lifting of wood veneer or laminated top surfaces caused by process failure; broken welds or improperly coated metal frame components (powder coating or painted); fabric or leather material defects including tears, misprints, fraying, crease marks, skip stitches or open seams; support webbing material and sinuous spring defects or damage, including method of attachment to frame; and other component failures that are a direct result of manufacturing or workmanship defects.
2. **Cushions & Cushions with Enclosed Steel Pocket Coils:** Failed or ruptured steel pocket coils enclosed inside of seat cushions, or loss of resiliency from a material breakdown of foam or fiber filling, which should not be confused with softening or settling during normal use.
3. **Leather:** Splitting or cracking of leather material. NOTE: The warranty does NOT cover natural hide markings, variations in the leather color or grain due to the authentic natural properties of processed cowhide leather.
4. **Bonded Leather or Bi-cast Leather:** Separation of the polyurethane coating, peeling or cracking of the inner layer or at the bonded seam edges (bi-cast straps).
5. **Furniture Components (Hardware & Mechanisms):** Includes defects to pre-installed components or hardware provided to the customer for assembly such as office chair hydraulic lifts, lift mechanisms, metal bases and casters, swivel plate mechanisms; for drawers, metal glides, handles/knobs; for doors, hinges, magnetic latches; and other components such as bent or stripped threaded leg posts and adjustable levelers. For missing, damaged, corroded, or misplaced hardware components such as bolts or washers, please contact Customer Service at: 877-967-5362.

This LIMITED ONE-YEAR WARRANTY does NOT cover:

1. Damage due to mishandling during transportation from store or transportation without original protective packaging.
2. Abuse, negligence (product misuse) or wear and tear that may result in or from:
 - a. **Wood & Veneer:** Mishandling, exposure to moisture, peeling or discoloration caused by exposure to moisture or excessive sunlight, heat; splintered, dented or nicked panels, legs or component edges or paint/finish blemishes; or treatment with corrosive chemicals (dyes, inks, paints or harsh cleaning products).
 - b. **Fabric & Leather (Including Bonded or Bi-Cast Leathers):** cuts, punctures, tears, burns, pet damage, or treatment with corrosive chemicals (dyes, inks, paints or harsh cleaning products), exposure to direct sunlight, fire, high heat, water, or any bright light source (natural or artificial) that may cause splitting, peeling or flaking with time.
 - c. **Foam (Cushions):** Flattening, relaxing or settling/softening of foam components that comes with normal use.
 - d. **Hardware Components:** improper installation or misuse/substitution of hardware components not defined in the Assembly Instructions for the product (if applicable)
3. Damage due to environmental exposure to direct sunlight, fire, high heat, water or extreme humidity, any bright light source (natural or artificial), or any environment that the product is not intended for.
4. This warranty is applicable for indoor furniture products purchased for residential use only.

For additional information on returns, please visit: <https://www.worldmarket.com/customer-service/return-policy.html>

All products sold at World Market are NOT FOR COMMERCIAL USE and are intended for residential use only. Products purchased for commercial use will VOID all warranty provisions as listed above.

Any claims under this LIMITED ONE-YEAR WARRANTY are valid and applicable only as to the original purchaser and must be accompanied by proof of purchase. Warranty claims should be submitted to a World Market store or through World Market Customer Service Call Center, Toll Free at 877-967-5362.

For valid warranty claims, World Market will repair or replace the product, or offer a full or partial credit, in the sole discretion of World Market. This LIMITED ONE-YEAR WARRANTY gives you specific legal rights and you may also have other rights which vary from state to state.