MADISON PARK®

ASSEMBLY INSTRUCTIONS

Description: ACCENT CHAIR

Important safety instructions:

- Please read carefully all instructions before assembly.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:

- Do not discard any content until assembly is complete to avoid accidentally discarding small parts or hardware.
- Take out all parts and hardware from box.

Parts List

Item	Description		QTY
P1	Front legs		2
P2	Back legs	(2)	2
P3	Chair top		1

Hardware List


Item	Descriptio	QTY	
H1	Bolts Dia.8 x 30mm		12
H2	Lock Washers Dia.8	0	12
Н3	Flat Washers Dia.8	0	12
H4	Alen Wrench		1

DISCLAIMER:

WHEN PROPERLY ASSEMBLED, THIS ITEM IS SAFE FOR INTENDED USE. SELLER IS NOT LIABLE FOR ANY DAMAGES RESULTING FROM ITEM BEING IMPROPERLY ASSEMBLED AFTER PURCHASE.


Assembly Procedures:

Step 1: Assemble the chair on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Remove the legs and hardware package from the chair .

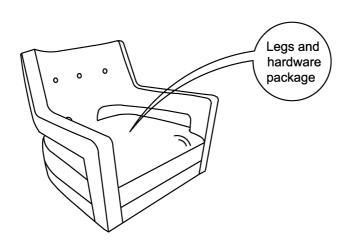


Step 2: Attach front leg (P1) and back legs (P2) to chair top (P3) using Lock washers (H2), Flat washers (H3) and Bolt (H1) as shown below.

(H1)x12 Bolts Dia.8 x 30mm (H2)x12 Lock Washers Dia.8 (H3)x12 Flat Washers Dia.8 (H4)x1 Alen Wrench

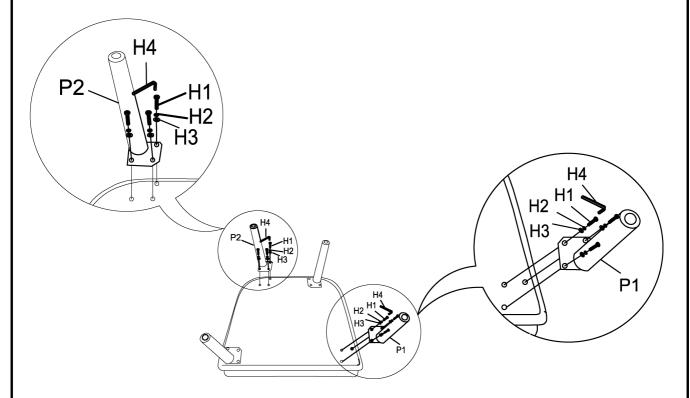

Step 3: Turn the assembled chair to an upright position. Assembly is complete.

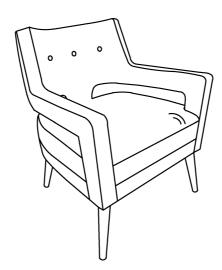

ADDITIONAL NOTE ABOUT SAFETY:

BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE.

THEY SHOULD BE INSPECTED AT LEAST EVERY 3 MONTHS AND RE-TIGHTENED AS NEEDED TO PREVENT DAMAGE OR INJURY, AND ENSURE STABILITY.

Thank you for your purchase