



3348-02-3A-AIDEN SIDE CHAIR

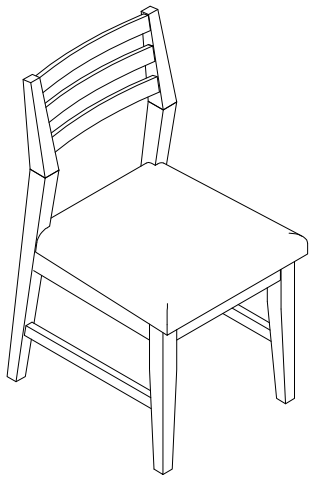

ASSEMBLY INSTRUCTIONS



30 MIN







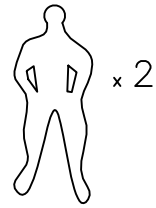


① CHAIR BACK x 1PC




③ CHAIR LEGS x 2PCS

② SEAT FRAME x 1PC

④ SIDE STRETCHERS x 2 PCS

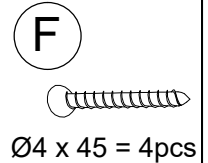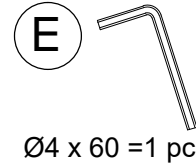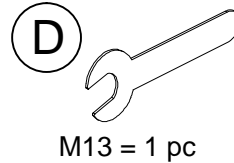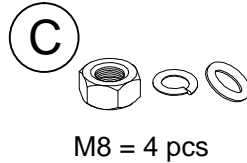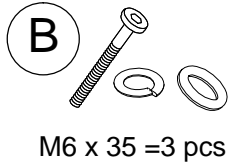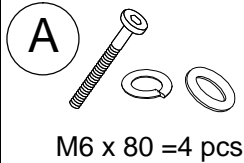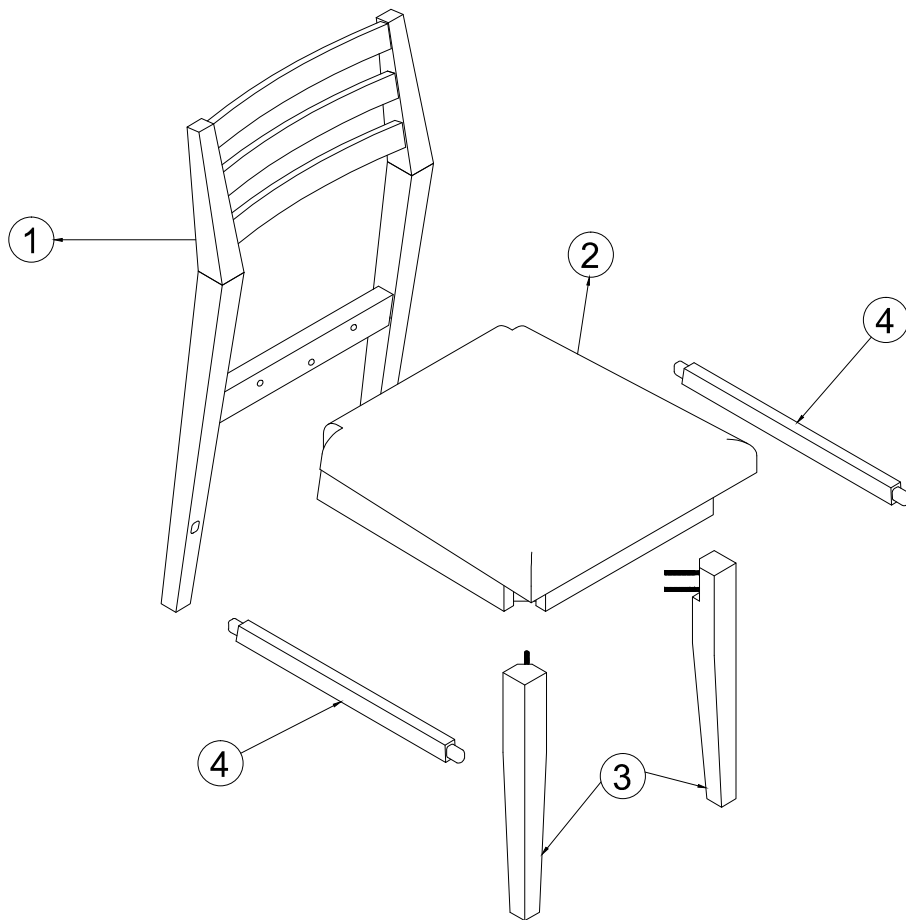

I


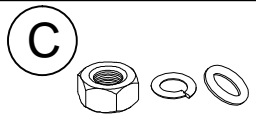
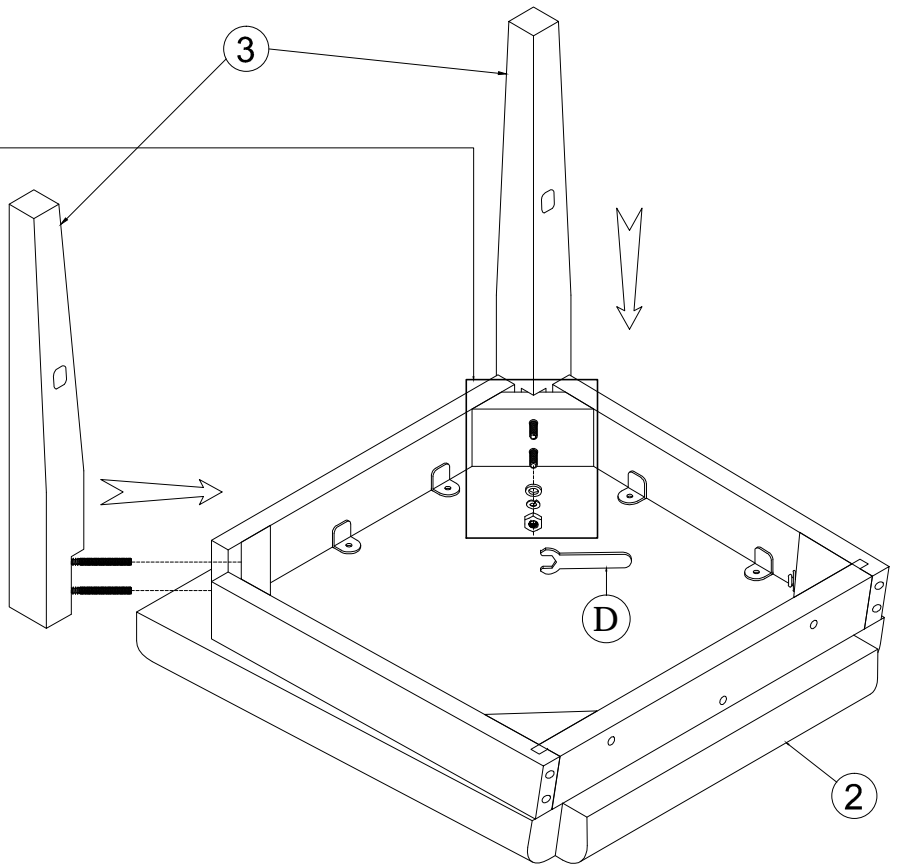
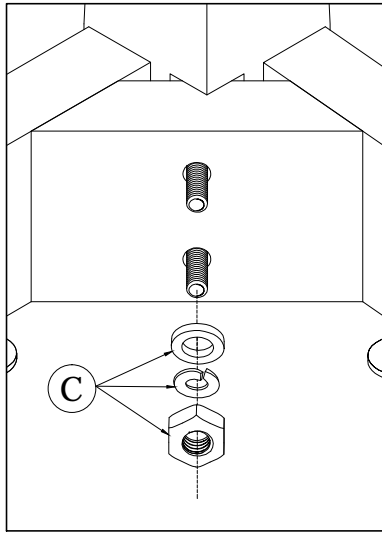


M8 = 4 pcs




M13 = 1 pc


II

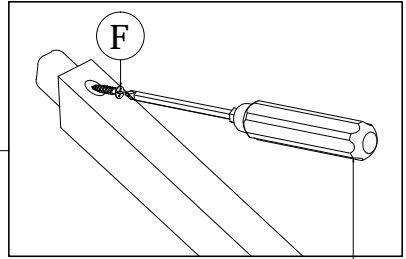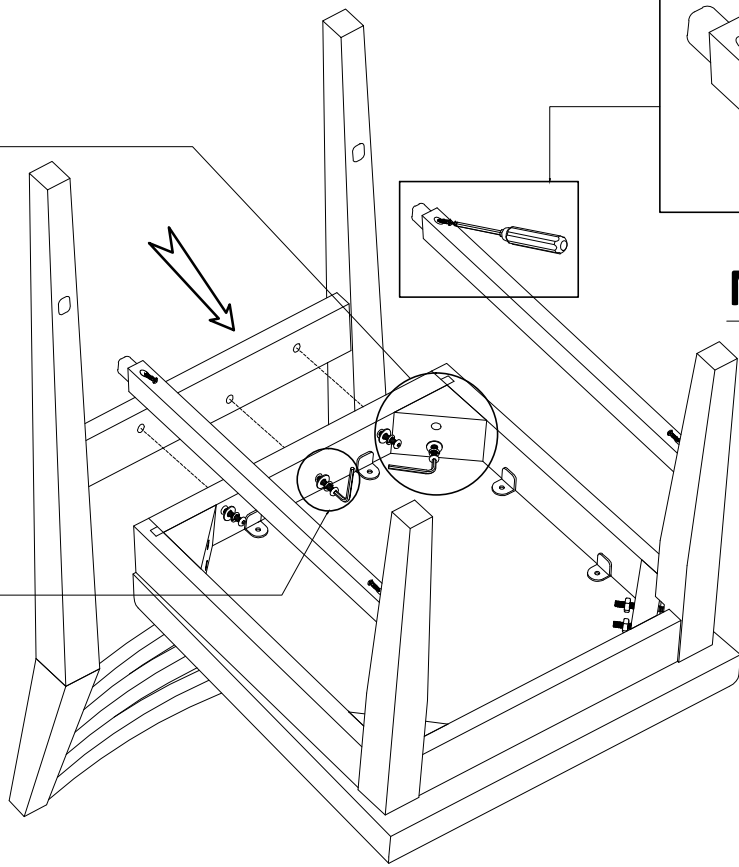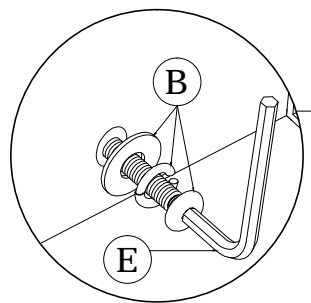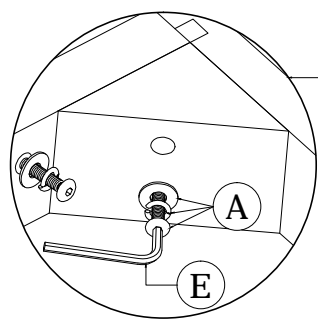


Not provide

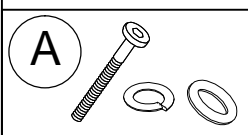


M6 x 80 = 4 pcs

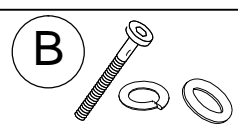

M6 x 40 = 3 pcs

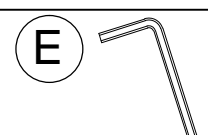

Ø4 x 60 = 1 pc

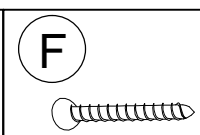

Ø4 x 45 = 4 pcs

ASSEMBLY IS COMPLETE

