ASSEMBLY INSTRUCTIONS

CVFDR1039


PARTS

S.NO.	DESCRIPTION		QNT
А		TOP	01
В		LEGS	06
С		SHELF	01


HARDWARE

S.NO.	DESCRIPTION		QNT
D	0	WASHER	18
Е	Ø	SPRING WASHER	18
F		JCBC M6 x 40	18
G		ALLEN KEY	01



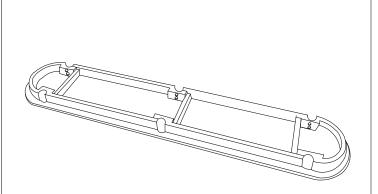


put the TOP (A) on the floor upside down

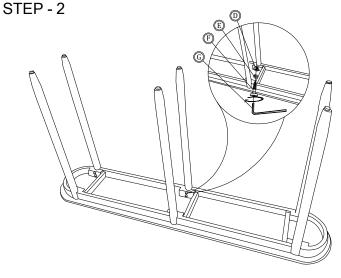


Attach to the 6 legs (B), adjust to the mount on the top(A), then attach the JCBC M6 x 40 (F) with washer (D)and spring washer (E), tighten with allen key (G)

STEP - 3

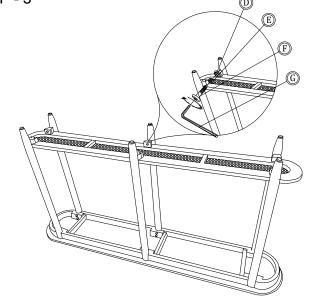

Install the shelf (C) on the legs according to the hole in the leg, Install the JCBC M6 x 40 (F) along with the washer (D) and spring washer (E), (tighten with an allen key (G))

COMPLETED

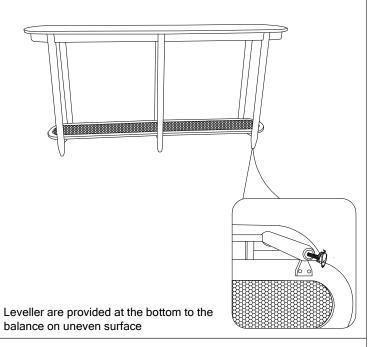

MADE IN INDONESIA

ANTI - TIP KIT INSTALLATION INSTRUCTIONS CVFDR1039_CONSOLE TABLE

A:1X

B:2X

C: 2X 55

D:2X

E:2X

