


WORLD MARKET®

Anti-Tip Measures

CARVED WOODEN BOOKSHELF

SKU - 507430

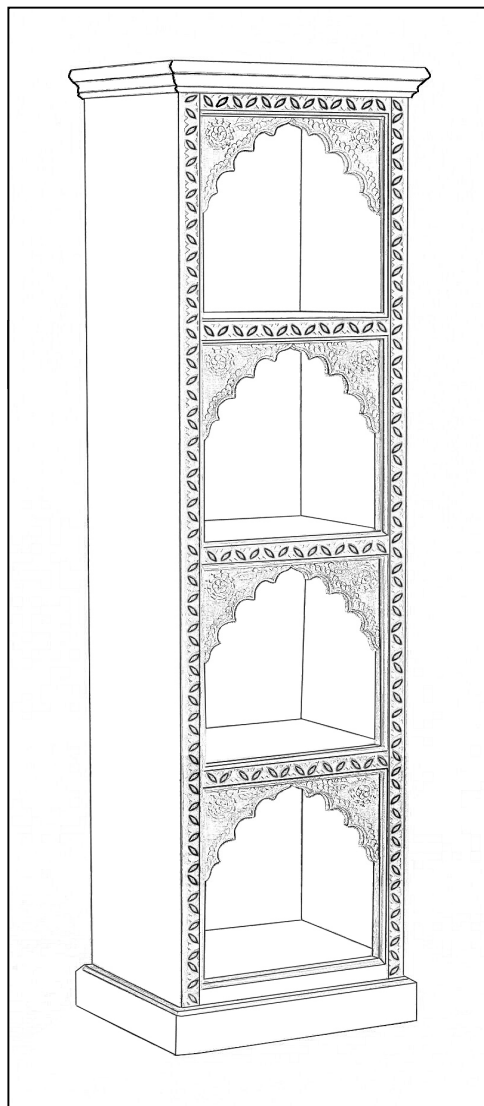

THANK YOU FOR YOUR PURCHASE. IF YOU HAVE ANY QUESTION
PERTAINING TO THE ANTI-TIP MEASURES, PLEASE CONTACT THE NEAREST
COST PLUS WORLD MARKET STORE.
IF YOU ARE NOT NEAR A STORE, PLEASE CALL OUR CUSTOMER SERVICE CALL
CENTER TOLL FREE AT 1-877-967-5362 FOR ASSISTANCE.

Safety Strap Attachment

1. Mark the location of the hole on the wall using bracket (A) approx 1" below the top of furniture. Pre-drill the holes at marked location & insert wall **plug** (E). Align bracket (A) onto wall **plug** (E) & secure using long screws (C).

2. Move the furniture to its final position against the wall and mark the location of the wall bracket on the back of the furniture. The bracket that attaches to the furniture must go into the solid wood piece at the top, not into the thinner back panel. Move the furniture away from the wall and place a bracket (A) on the mark. Mark and drill holes for the screws using a 3/32" drill bit. Attach the bracket to the furniture using the short screws (C).

3. Move the furniture to its final position, and align the bracket on the furniture with the bracket on the wall. Thread the strap (D) through the bracket as shown, and tighten until snug. Do not overtighten.

Important: Check that the wall bracket is firmly screwed into the stud, the furniture bracket is firmly attached to the frame, and the strap is snug.

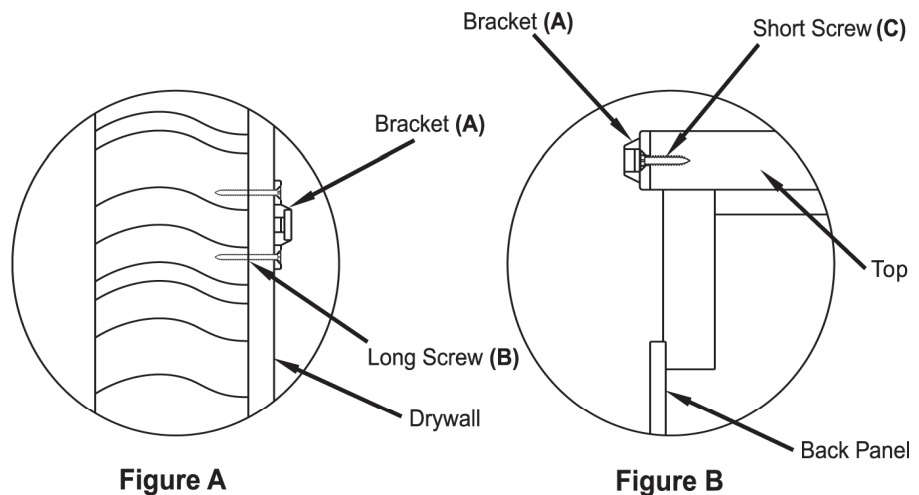
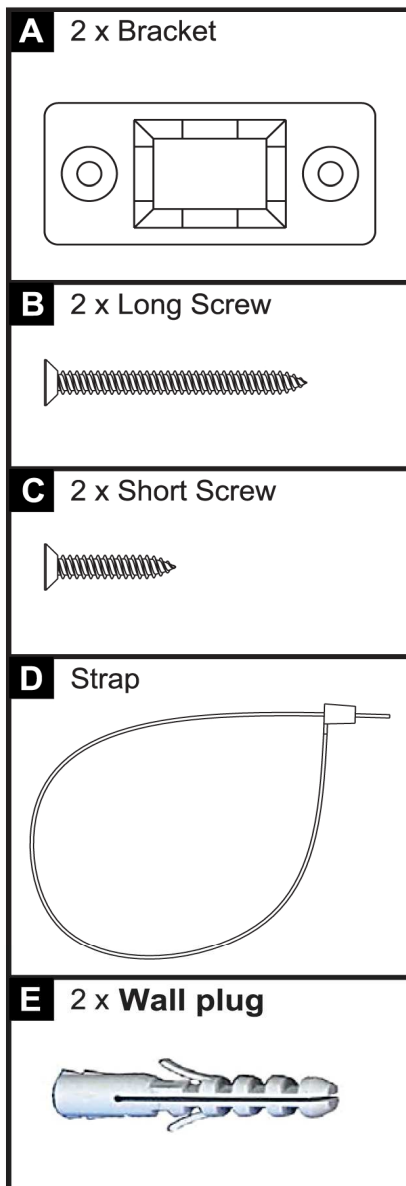


Figure A

Figure B

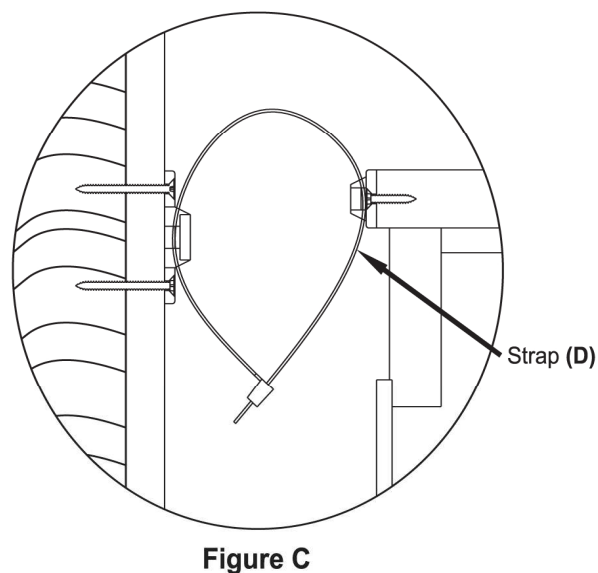


Figure C